



## Parts List for 1001 Type 2

Item Number	Part Number	Description	Qty Required
42	874117	SCREW	10
42	688860	SCREW	10
45	875807	SUB BASE	1
45	42186	ROUTER SUB-BASE	1
46	800869	SPRING	3
48	802306	HEX HEAD SCREW	10
49	802425	WASHER	10
49	801821	WASHER	10
50	800995	BASE KNOB	2
51	872998	DEPTH RING	1
57	5140070-56	19.2V BATTERY	1
57	5140070-56	19.2V BATTERY	1
58	000000-00	No Longer Available	1
58	901562	BATTERY TOP	1
59	A22709	OPEN-END WRENCH	1
60	8924	UNIVERSAL CHARGER	1
61	8924	UNIVERSAL CHARGER	1
62	8924	UNIVERSAL CHARGER	1
63	000000-00	No Longer Available	1
64	000000-00	No Longer Available	10
65	000000-00	No Longer Available	1
66	895781	WASHER	10
67	903118	PIN	1
68	903114	BUCKLE	1
69	903120	SHAFT	1
70	A00323	WEAR PLATE	1
71	802417	WASHER	10

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit [www.dewaltservicenet.com](http://www.dewaltservicenet.com) for current parts information.

## Parts List for 1001 Type 2

Item Number	Part Number	Description	Qty Required
72	903693	NUT	10
73	5140096-05	SUB BASE	1
74	899798	CARRYING CASE	1
75	887712	LATCH CARRYING CASE	1
225	824588	ROD GUIDE	1
225	824588	ROD GUIDE	1
226	882810	KNOB	1
227	42160	ROUTER EDGE GUIDE	1
228	803160	SCREW	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit [www.dewaltservicenet.com](http://www.dewaltservicenet.com) for current parts information.