


- 866
- 867
- 871

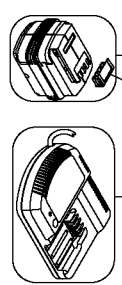

Parts List for PC1800RS Type 1

Item Number	Part Number	Description	Qty Required
1	498755-02	SHOE	1
2	498977-00	SCREW	3
9	90530646-02	TERMINAL BLOCK	1
12	90532686	CLAMSHELL SET	1
13	90532688	ACTUATOR,LOCKOFF	1
14	90532689	ACTUATOR,COVER	1
15	90533127	LEVER	1
16	5140099-13	SWITCH KIT	1
17	90534035	GEARCASE ASSY	1
866	90543485	18V BATTERY	1
866	PC18B	BATTERY PACK	1
867	90535852	CAP,BATTERY	1
871	90550550-02	CHARGER	1
871	90545445	CHARGER	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.