



Parts List for DCS370B Type 1

Item Number	Part Number	Description	Qty Required
1	5140103-01	MAIN BODY	1
2	N061948	HANDLE	1
3	N071023	MOTOR COVER	1
4	5140103-04	COVER PLATE	1
5	5140112-19	DRIVE PULLEY	1
6	5140103-06	WHEEL ASY,IDLER	1
7	N095163	WARNING LABEL	1
8	5140103-08	CAM HANDLE	1
9	5140103-09	BLADE BACK UP GUIDE	1
10	5140103-10	PLATE	1
11	5140103-11	SLIDE BLOCK	1
12	5140103-12	CAM	1
13	5140103-13	GUIDE	2
14	5140103-14	FENCE	1
15	5140103-15	SPACER	1
16	5140103-16	MOTOR ASSEMBLY	1
17	5140103-17	TERMINAL	1
18	N095161	ID LABEL	1
19	N071024	MOTOR CAP	1
20	5140103-20	TIRE	2
21	5140103-21	SPRING	1
22	5140103-22	BUSHING	1
23	N095160	NAMEPLATE	1
24	5140103-24	WASHER	3
25	5140103-25	WAVE WASHER	1
26	5140103-26	STEEL WASHER	2
27	5140103-27	BUTTON HD SCREW	2

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for DCS370B Type 1

Item Number	Part Number	Description	Qty Required
28	5140103-28	FLAT HD SCREW	1
29	5140103-29	FLAT HD SCREW	4
30	5140103-30	NYLON SCREW	3
31	5140103-31	DRIVE GEAR	1
32	5140103-32	RETAINING RING	1
33	5140103-33	NYLON SCREW	2
34	5140103-34	CAP SCREW	2
35	5140103-35	LOCK WASHER	4
36	5140103-36	FLAT HD SCREW	10
37	5140103-37	NYLON SCREW	8
38	5140103-38	NUT	11
39	5140103-39	BUTTON HD SCREW	1
40	5140103-40	BEARING	5
41	5140103-41	BEARING	2
42	5140103-42	DOWEL	2
43	5140103-43	HEX NUT	2
44	5140103-44	ROLLER	4
45	5140103-45	THRUST WASHER	4
46	5140103-46	PAN HEAD SCREW	4
47	N095162	ID LABEL	1
48	5140103-48	HEX.SOC.HD.SCREW	2
49	5140103-49	PAN HEAD SCREW	2
50	5140103-50	BUTTON HD SCREW	1
51	5140103-51	NUT- NYLOCK	1
52	5140103-52	FLAT WASHER	1
53	N088672	LEAD WIRE	1
54	5140103-54	BUTTON HD SCREW	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for DCS370B Type 1

Item Number	Part Number	Description	Qty Required
55	5140103-55	LOCK WASHER	1
56	5140103-56	NYLON SCREW	4
57	5140103-57	BLADE	1
58	5140103-58	PLATE,GUIDE	2
59	5140103-59	PAN HEAD SCREW	6
60	5140103-60	PAN HEAD SCREW	1
61	N053823	NUT PLATE	1
62	N061949	HANDLE	1
63	5140103-63	SHAFT	1
64	5140103-64	SCREW	2
65	330019-40	SCREW	2
66	384127-01	SCREW	2
67	613275-00	TRIGGER SWITCH	1
68	605107-00	LOCK-OFF BUTTON	1
70	389120-00	SPRING	1
71	388531-00	PIN	1
72	651744-00	HOOK	1
856	DW3984C	BAND SAW BLADE	1
856	DW3986C	BAND SAW BLADE	1
856	DW3982C	BAND SAW BLADE	1
856	DW3983C	BAND SAW BLADE	1
862	629053-00	TOOL BAG	1
866	DC9096	BATTERY PACK	1
866	DC9180	18V BATTERY PACK	1
871	DC9310	1 HOUR CHARGER	1
871	388683-12	1 HOUR CHARGER	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenetwork.com for current parts information.