



Parts List for DCS370K Type 1

| Item Number | Part Number | Description | Qty Required |
|-------------|-------------|---------------------|--------------|
| 1 | 5140103-01 | MAIN BODY | 1 |
| 2 | N061948 | HANDLE | 1 |
| 3 | N071023 | MOTOR COVER | 1 |
| 4 | 5140103-04 | COVER PLATE | 1 |
| 5 | 5140112-19 | DRIVE PULLEY | 1 |
| 6 | 5140103-06 | WHEEL ASY,IDLER | 1 |
| 7 | N095163 | WARNING LABEL | 1 |
| 8 | 5140103-08 | CAM HANDLE | 1 |
| 9 | 5140103-09 | BLADE BACK UP GUIDE | 1 |
| 10 | 5140103-10 | PLATE | 1 |
| 11 | 5140103-11 | SLIDE BLOCK | 1 |
| 12 | 5140103-12 | CAM | 1 |
| 13 | 5140103-13 | GUIDE | 2 |
| 14 | 5140103-14 | FENCE | 1 |
| 15 | 5140103-15 | SPACER | 1 |
| 16 | 5140103-16 | MOTOR ASSEMBLY | 1 |
| 17 | 5140103-17 | TERMINAL | 1 |
| 18 | N095161 | ID LABEL | 1 |
| 19 | N071024 | MOTOR CAP | 1 |
| 20 | 5140103-20 | TIRE | 2 |
| 21 | 5140103-21 | SPRING | 1 |
| 22 | 5140103-22 | BUSHING | 1 |
| 23 | N095160 | NAMEPLATE | 1 |
| 24 | 5140103-24 | WASHER | 3 |
| 25 | 5140103-25 | WAVE WASHER | 1 |
| 26 | 5140103-26 | STEEL WASHER | 2 |
| 27 | 5140103-27 | BUTTON HD SCREW | 2 |

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for DCS370K Type 1

| Item Number | Part Number | Description | Qty Required |
|-------------|-------------|------------------|--------------|
| 28 | 5140103-28 | FLAT HD SCREW | 1 |
| 29 | 5140103-29 | FLAT HD SCREW | 4 |
| 30 | 5140103-30 | NYLON SCREW | 3 |
| 31 | 5140103-31 | DRIVE GEAR | 1 |
| 32 | 5140103-32 | RETAINING RING | 1 |
| 33 | 5140103-33 | NYLON SCREW | 2 |
| 34 | 5140103-34 | CAP SCREW | 2 |
| 35 | 5140103-35 | LOCK WASHER | 4 |
| 36 | 5140103-36 | FLAT HD SCREW | 10 |
| 37 | 5140103-37 | NYLON SCREW | 8 |
| 38 | 5140103-38 | NUT | 11 |
| 39 | 5140103-39 | BUTTON HD SCREW | 1 |
| 40 | 5140103-40 | BEARING | 5 |
| 41 | 5140103-41 | BEARING | 2 |
| 42 | 5140103-42 | DOWEL | 2 |
| 43 | 5140103-43 | HEX NUT | 2 |
| 44 | 5140103-44 | ROLLER | 4 |
| 45 | 5140103-45 | THRUST WASHER | 4 |
| 46 | 5140103-46 | PAN HEAD SCREW | 4 |
| 47 | N095162 | ID LABEL | 1 |
| 48 | 5140103-48 | HEX.SOC.HD.SCREW | 2 |
| 49 | 5140103-49 | PAN HEAD SCREW | 2 |
| 50 | 5140103-50 | BUTTON HD SCREW | 1 |
| 51 | 5140103-51 | NUT- NYLOCK | 1 |
| 52 | 5140103-52 | FLAT WASHER | 1 |
| 53 | N088672 | LEAD WIRE | 1 |
| 54 | 5140103-54 | BUTTON HD SCREW | 1 |

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenetwork.com for current parts information.

Parts List for DCS370K Type 1

| Item Number | Part Number | Description | Qty Required |
|-------------|-------------|-----------------|--------------|
| 55 | 5140103-55 | LOCK WASHER | 1 |
| 56 | 5140103-56 | NYLON SCREW | 4 |
| 57 | 5140103-57 | BLADE | 1 |
| 58 | 5140103-58 | PLATE,GUIDE | 2 |
| 59 | 5140103-59 | PAN HEAD SCREW | 6 |
| 60 | 5140103-60 | PAN HEAD SCREW | 1 |
| 61 | N053823 | NUT PLATE | 1 |
| 62 | N061949 | HANDLE | 1 |
| 63 | 5140103-63 | SHAFT | 1 |
| 64 | 5140103-64 | SCREW | 2 |
| 65 | 330019-40 | SCREW | 2 |
| 66 | 384127-01 | SCREW | 2 |
| 67 | 613275-00 | TRIGGER SWITCH | 1 |
| 68 | 605107-00 | LOCK-OFF BUTTON | 1 |
| 70 | 389120-00 | SPRING | 1 |
| 71 | 388531-00 | PIN | 1 |
| 72 | 651744-00 | HOOK | 1 |
| 856 | DW3984C | BAND SAW BLADE | 1 |
| 856 | DW3986C | BAND SAW BLADE | 1 |
| 856 | DW3982C | BAND SAW BLADE | 1 |
| 856 | DW3983C | BAND SAW BLADE | 1 |
| 862 | 629053-00 | TOOL BAG | 1 |
| 866 | DC9096 | BATTERY PACK | 1 |
| 871 | 388683-12 | 1 HOUR CHARGER | 1 |

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.