



Parts List for DW077KDT Type 1

Item Number	Part Number	Description	Qty Required
1	5140117-88	FOOT	6
2	5140007-02	HANDLE	1
3	5140007-03	Prism Cage	1
4	000000-00	No Longer Available	1
5	5140007-05	KEYPAD	1
6	595537-00	MULTIVOLTAGE ADAPTER	1
7	000000-00	No Longer Available	1
8	5140007-08	P.C.BOARD ASSY.	1
9	5140007-09	IR RECEIVER PLATFORM	1
10	5140007-10	COMPENSATOR	1
11	5140007-11	CONNECTOR,CABLE	1
12	5140007-12	O RING	1
13	5140007-13	LABEL SET	1
14	5140007-14	BOOT RING	1
15	389081-01	TERMINAL BOARD	1
16	5140007-16	PRISM COVER	1
17	000000-00	No Longer Available	1
18	5140007-18	BOOT	1
20	5140007-20	SCREW	13
21	5140007-21	SCREW	9
22	5140007-22	PLUG	1
40	603367-00	GLASSES	1
856	DW0736	TRIPOD	1
856	611472-00	WALL MOUNT	1
856	5140000-29	CLAMP ASSEMBLY	1
856	613502-00	REMOTE ASSY	1
856	5140000-30	BATTERY DOOR KIT	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for DW077KDT Type 1

Item Number	Part Number	Description	Qty Required
856	611044-00	REMOTE ASSY	1
856	DW0730	LASER TARGET CARD	1
856	DW0772	DIGITAL LASER DETECTOR	1
856	595553-00	TARGET CARD	1
856	613406-00	WALLET CARD	1
861	611619-00	KIT BOX	1
866	DC9096	BATTERY PACK	1
871	388683-12	1 HOUR CHARGER	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.