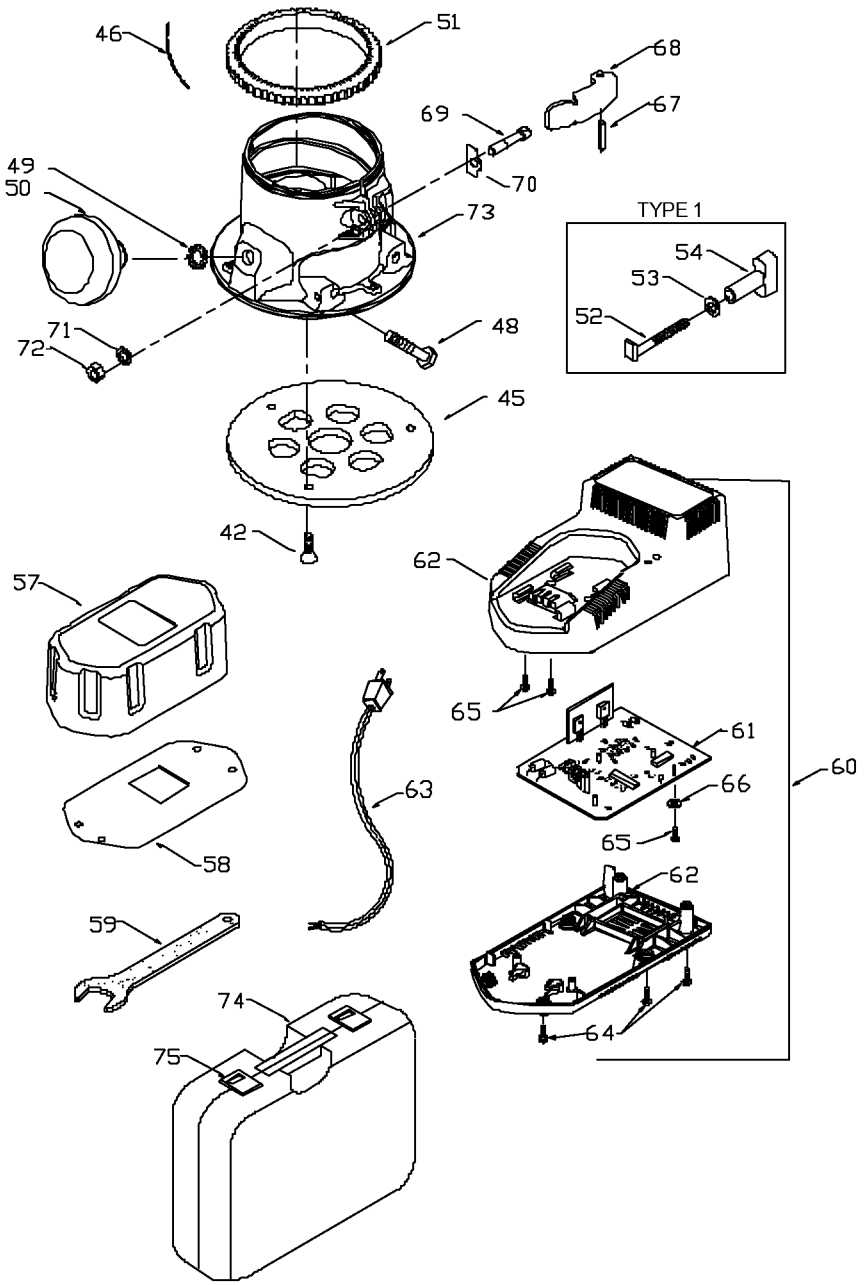

46
51
68
69
67
49
50
70
73
TYPE 1
54
53
52
71
72
48
45
42
62
57
65
61
63
66
60
58
65
62
59
74
75
64

Parts List for 1001 Type 1

Item Number	Part Number	Description	Qty Required
42	874117	SCREW	10
42	688860	SCREW	10
45	875807	SUB BASE	1
45	42186	ROUTER SUB-BASE	1
46	800869	SPRING	3
48	802306	HEX HEAD SCREW	10
49	802425	WASHER	10
49	801821	WASHER	10
50	800995	BASE KNOB	2
51	872998	DEPTH RING	1
52	685526	SCREW	1
53	823374	WASHER	1
54	874582	CLAMP KNOB	1
57	5140070-56	19.2V BATTERY	1
57	5140070-56	19.2V BATTERY	1
58	000000-00	No Longer Available	1
58	901562	BATTERY TOP	1
59	A22709	OPEN-END WRENCH	1
60	8924	UNIVERSAL CHARGER	1
61	8924	UNIVERSAL CHARGER	1
62	8924	UNIVERSAL CHARGER	1
63	000000-00	No Longer Available	1
64	000000-00	No Longer Available	10
73	5140096-05	SUB BASE	1
74	899798	CARRYING CASE	1
75	887712	LATCH CARRYING CASE	1
225	824588	ROD GUIDE	1

COPYRIGHT© 2005. All Rights Reserved.
Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for 1001 Type 1

Item Number	Part Number	Description	Qty Required
225	824588	ROD GUIDE	1
226	882810	KNOB	1
227	42160	ROUTER EDGE GUIDE	1
228	803160	SCREW	10

COPYRIGHT© 2005. All Rights Reserved.
Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.