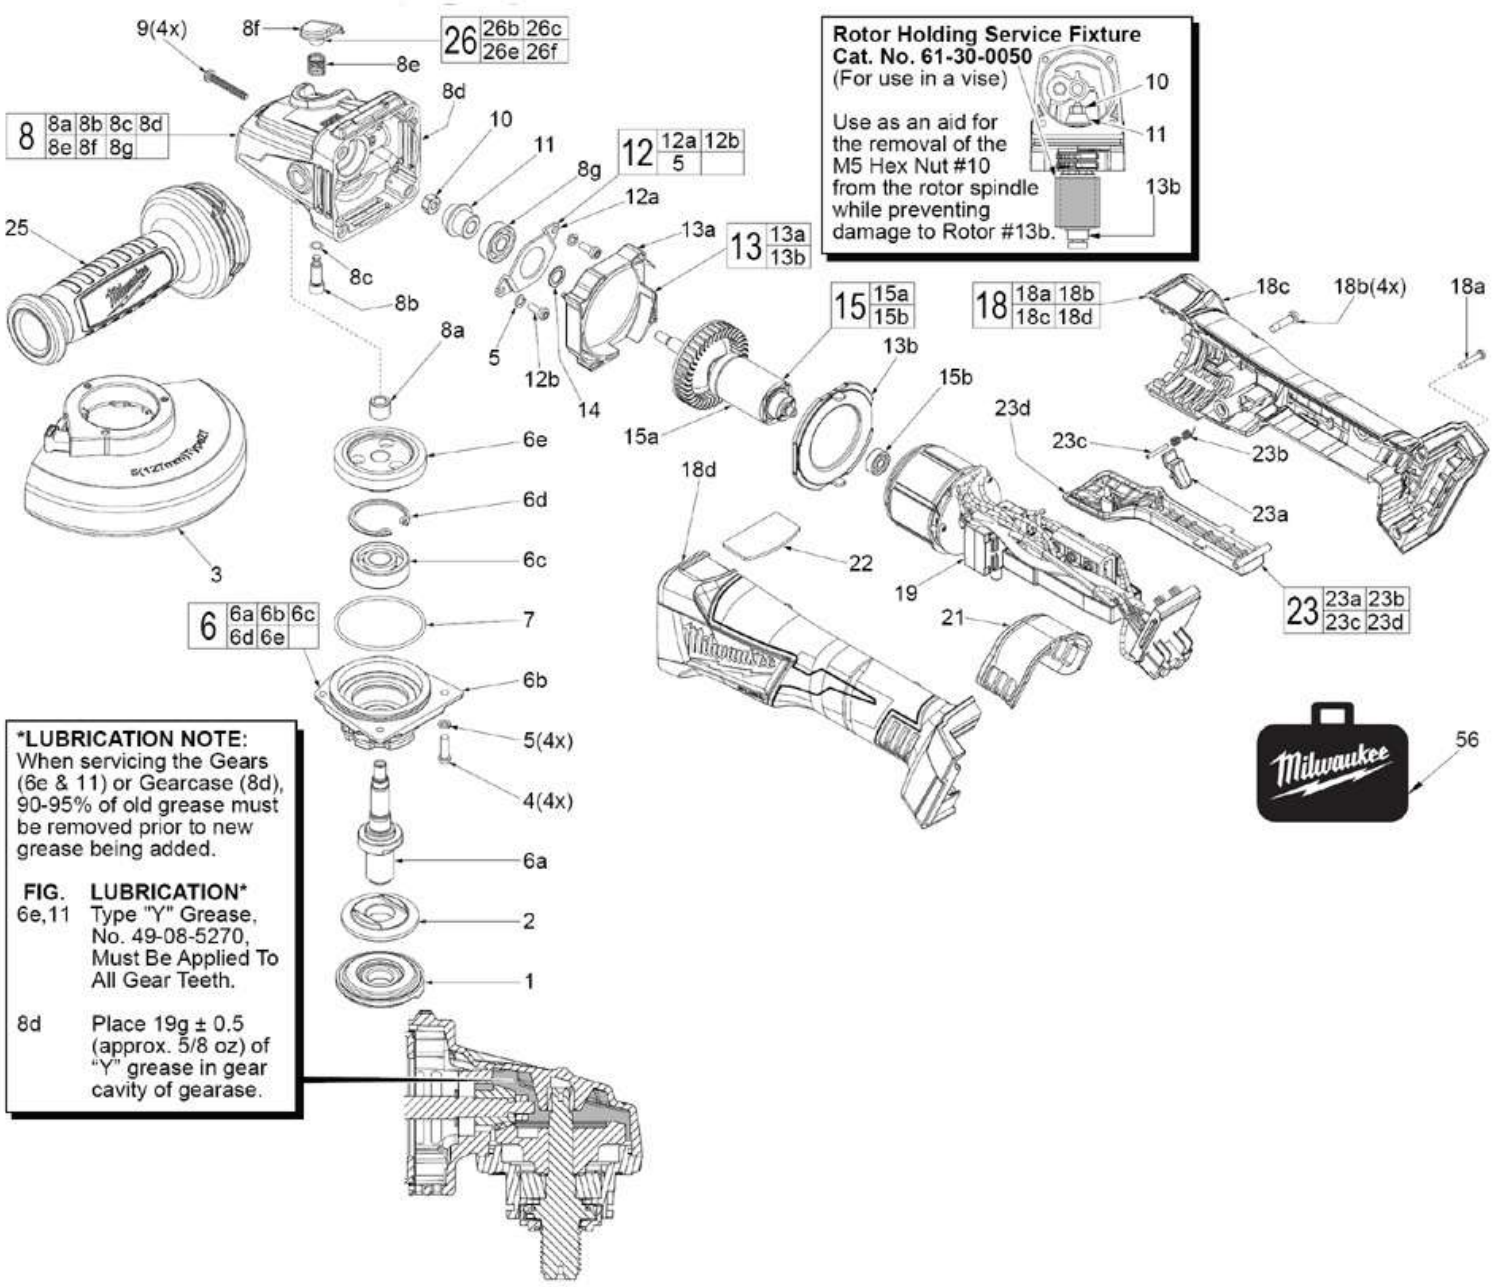


***LUBRICATION NOTE:**
When servicing the Gears (6e & 11) or Gearcase (8d), 90-95% of old grease must be removed prior to new grease being added.

FIG.	LUBRICATION*
6e,11	Type "Y" Grease, No. 49-08-5270, Must Be Applied To All Gear Teeth.
8d	Place 19g ± 0.5 (approx. 5/8 oz) of "Y" grease in gear cavity of gearase.