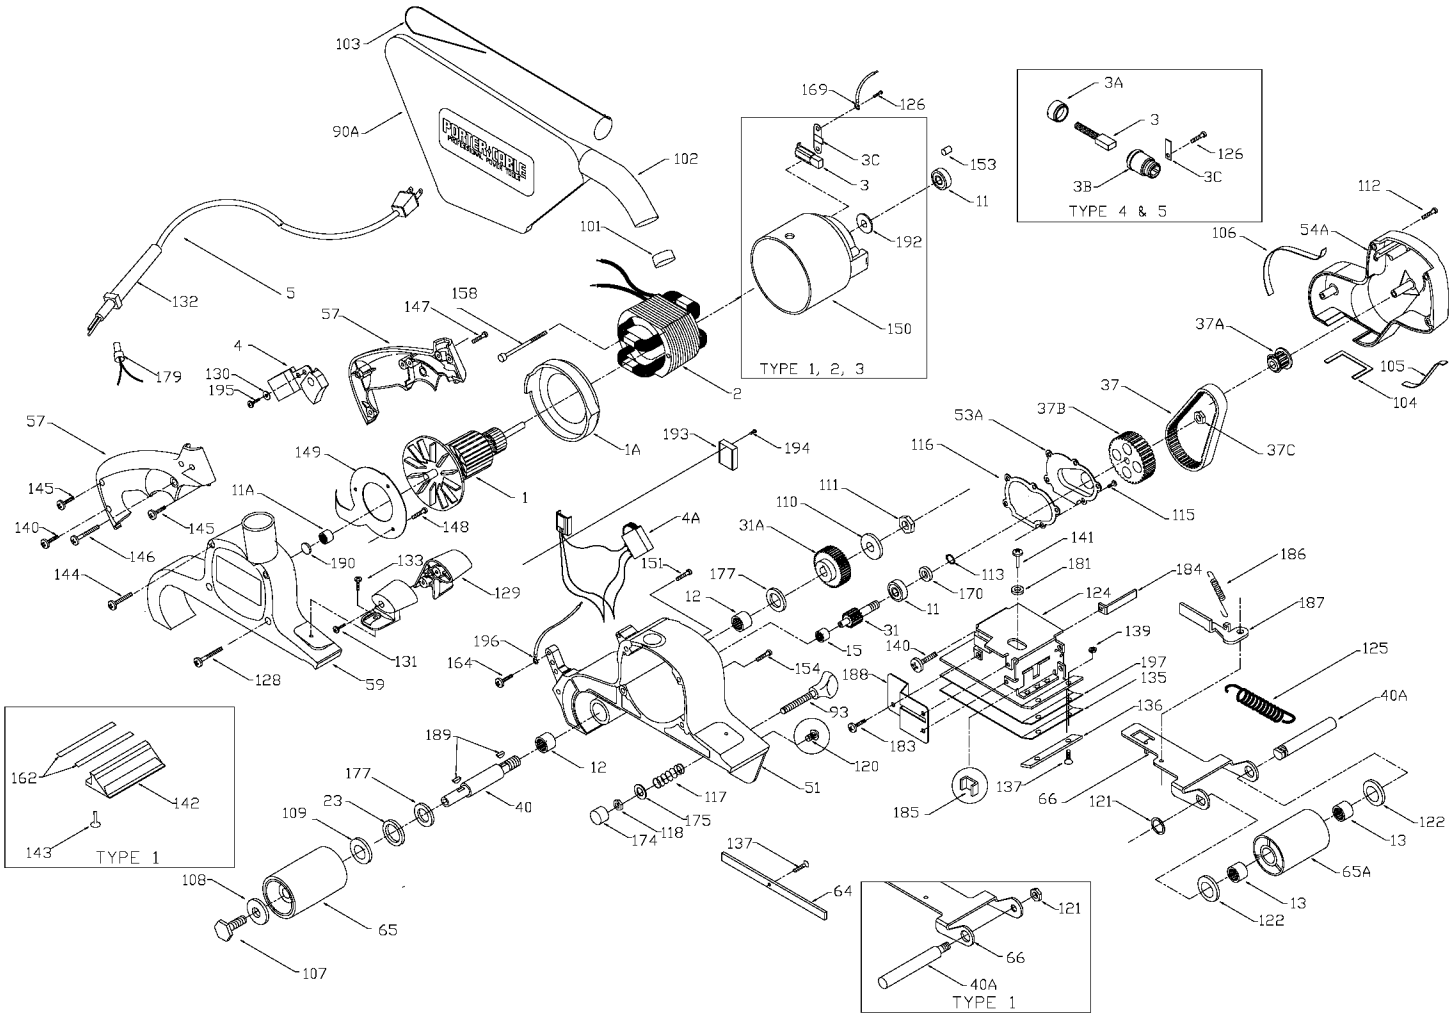

TYPE 1, 2, 3
TYPE 4 & 5
TYPE 1
TYPE 1

Parts List for 352VS Type 4

Item Number	Part Number	Description	Qty Required
1	810238	FAN	1
1	680967	ARMATURE 115V	1
1	892798	AIR BAFFLE	1
2	887737	FIELD	1
3	887720	LEAD	1
3	N030461	BRUSH & SPRING	2
3	823727	CAP	2
3	887716	BRUSH HOLDER	2
3	801271	CLIP	2
4	5140112-36	SWITCH KIT	1
4	N059514	SPEED CONTROL	1
5	839549	CORD	1
11	330003-85	BEARING	1
11	859293	BEARING	1
12	803856	BEARING	1
13	804211	BEARING,NEEDLE	1
15	684188	BEARING	1
23	848537	SEAL	1
31	899233	PINION DRIVE	1
31	878571	GEAR	1
37	848530	BELT	1
37	695738	DRIVE PULLEY	1
37	899259	DRIVE PULLEY	1
40	698038	SHAFT	1
40	878569	PULLEY SHAFT	1
51	896446SV	MOTOR FRAME	1
53	848523	COVER	1

COPYRIGHT© 2005. All Rights Reserved.
Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for 352VS Type 4

Item Number	Part Number	Description	Qty Required
54	893326	BELT COVER	1
57	A23096	HANDLE SET	1
59	890680	VACUUM HOUSING	1
64	878380	FRAME PROTECTOR BAR	1
65	698041	DRIVE PULLEY	1
65	900527	DRIVEN PULLEY	1
66	878570	IDLER ARM	1
90	696167	DUST BAG ASSY-	1
90	692639	DUST BAG	1
93	897160	SCREW	10
101	839330	SPRING ELBOW RE	1
102	882671	ELBOW/SUPPORT KIT	1
103	877967	BAG SUPPORT	1
104	852003	GASKET	1
107	849808	SCREW	10
108	859359	WASHER	10
109	848508	WASHER	10
110	804454	WASHER	10
111	802943	NUT	10
112	847994	SCREW	10
113	847564	SNAP RING	1
115	882187	SCREW	10
116	848524	GASKET	1
117	848512	SPRING	1
118	903693	NUT	10
120	801374	SCREW	10
121	853455	RING	1

COPYRIGHT© 2005. All Rights Reserved.
Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for 352VS Type 4

Item Number	Part Number	Description	Qty Required
122	848551	WASHER	10
124	878579	TRACKING BOX	1
125	848514	SPRING	1
126	844107	SCREW	10
128	848565	SCREW	10
129	A03070	SS/A HANDLE SET	1
130	802995	WASHER	10
131	879678	SCREW	10
132	901266	STRAIN RELIEVER	1
133	886538	SCREW	10
135	903400	CORK & SHOE ASSY.	1
136	684987	CLAMP	1
137	883485	SCREW	10
137	802764	SCREW	10
139	869687	NUT	10
140	848148	SCREW	10
141	695812	SCREW & WASHER	10
144	877817	SCREW	10
145	893792	SCREW	10
146	848148	SCREW	10
147	848148	SCREW	10
148	875322	SCREW	1
149	878404	DUST BAFFLE	1
158	883483	SCREW	10
164	892780	SCREW	10
170	850218	WASHER	10
174	696039	LOCATOR	1

COPYRIGHT© 2005. All Rights Reserved.
Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for 352VS Type 4

Item Number	Part Number	Description	Qty Required
175	801530	WASHER	10
177	810523	WASHER	10
179	682063	CONNECTOR VS	1
181	695813	SPACER	1
183	858008	SCREW	10
183	872835	SCREW	10
184	695868	WEAR PLATE	1
186	698042	SPRING	1
187	695789	LEVER	1
188	877537	COVER PLATE	1
189	878563	KEY	1
190	850410	OILER	1
193	698027	ENCLOSURE-TRIAC	1
194	882187	SCREW	10
195	882185	SCREW MACHINE STEEL	10
196	849314	TERM	1
197	848547	COVER	1
856	801945	TUBE GREASE	1
856	48118	GRAPHITE SNDR SHOE	1
856	891582	CARRYING CASE	1
856	801946	LUBE	1

COPYRIGHT© 2005. All Rights Reserved.
Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.