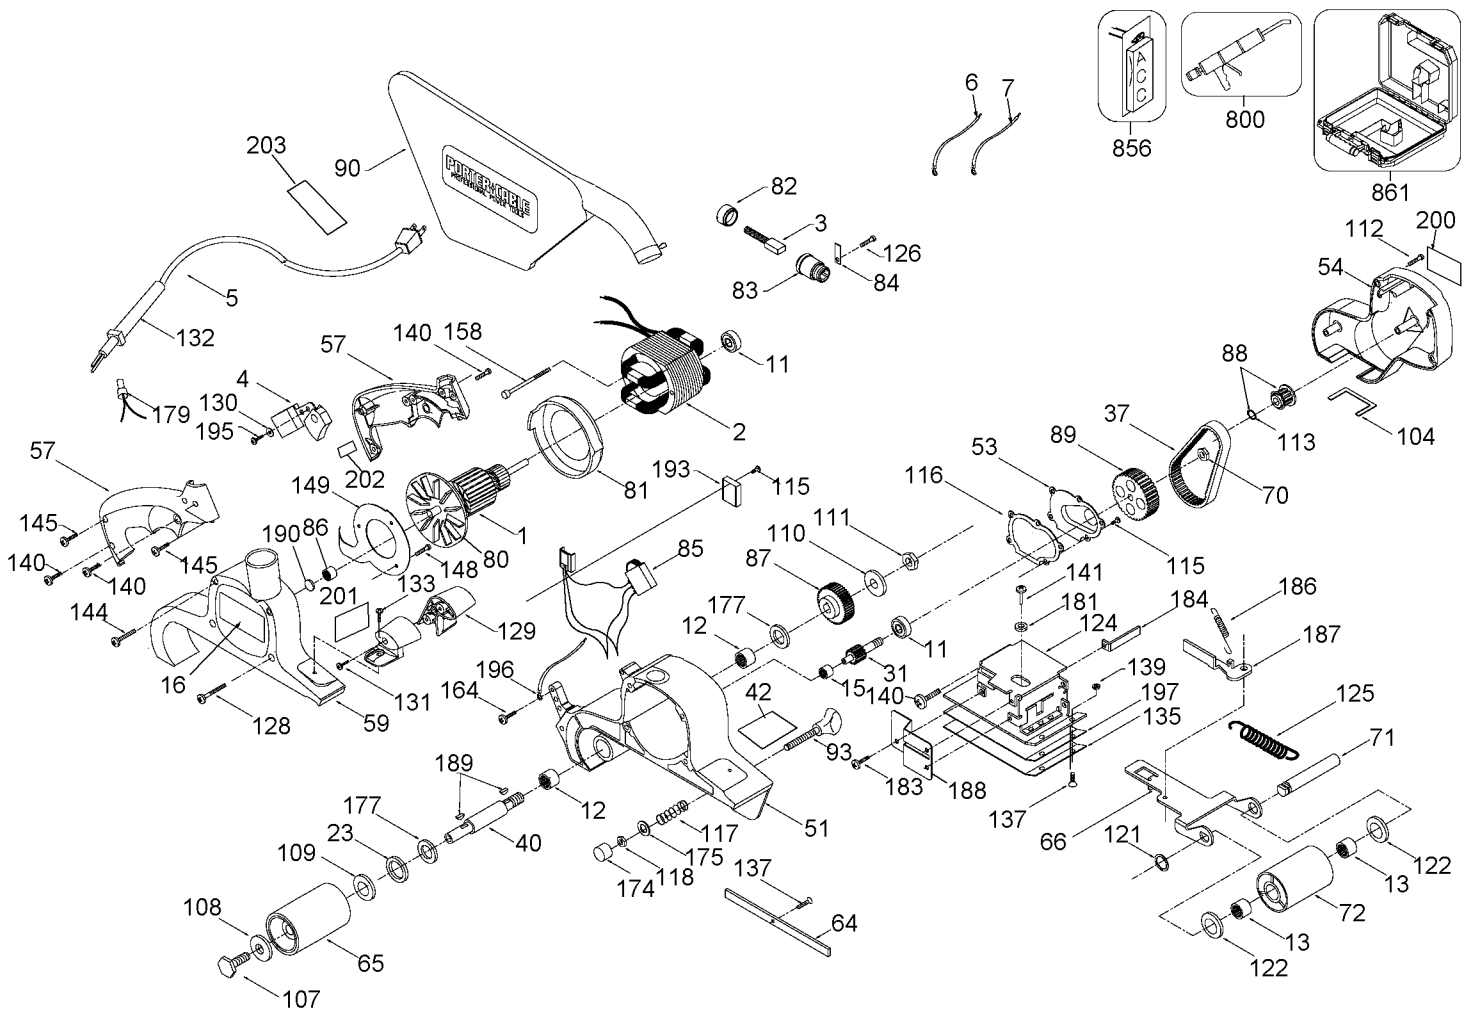

856
800
861
203
90
6
7
82
3
126
83
84
5
132
57
140
158
11
4
130
195
179
2
202
81
149
1
80
148
57
145
140
145
140
190
86
201
133
144
129
16
128
131
59
193
115
85
196
164
42
93
183
188
189
12
177
23
109
40
108
65
107
117
175
118
174
137
64
51
53
89
37
116
110
111
87
177
12
11
31
15
140
141
181
124
139
197
135
137
66
121
88
113
70
115
112
200
54
104
184
186
187
125
71
72
13
122
13
122

Parts List for 352VS Type 6

Item Number	Part Number	Description	Qty Required
1	680967	ARMATURE 115V	1
2	887737	FIELD	1
3	N030461	BRUSH & SPRING	2
4	5140112-36	SWITCH KIT	1
5	893847	CORDSET	1
6	887720	LEAD	1
7	887732	LEAD	1
11	854202	BEARING	1
12	803856	BEARING	1
13	804211	BEARING,NEEDLE	2
15	684188	BEARING	1
16	A22736	ID LABEL	1
23	848537	SEAL	1
31	899233	PINION DRIVE	1
37	848530	BELT	1
40	698038	SHAFT	1
42	A22739	SPEC PLATE	1
51	A23879SV	MOTOR FRAME	1
53	848523	COVER	1
54	893326	BELT COVER	1
57	A23096	HANDLE SET	1
59	A23880SV	VACUUM HOUSING	1
64	878380	FRAME PROTECTOR BAR	1
65	698041	DRIVE PULLEY	1
66	878570	IDLER ARM	1
70	906520	NUT	1
71	878569	PULLEY SHAFT	1

COPYRIGHT© 2005. All Rights Reserved.
Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for 352VS Type 6

Item Number	Part Number	Description	Qty Required
72	900527	DRIVEN PULLEY	1
80	810238	FAN	1
81	892798	AIR BAFFLE	1
82	823727	CAP	2
83	887716	BRUSH HOLDER	2
84	801271	CLIP	2
85	N059514	SPEED CONTROL	1
86	859293	BEARING	1
87	878571	GEAR	1
88	695738	DRIVE PULLEY	1
89	899259	DRIVE PULLEY	1
90	A23158	DUST BAG ASSY	1
90	A23158	DUST BAG ASSY	1
93	897160	SCREW	1
104	852003	GASKET	1
107	849808	SCREW	1
108	859359	WASHER	1
109	848508	WASHER	1
110	804454	WASHER	1
111	802943	NUT	1
112	847994	SCREW	4
113	859169	RET RING	1
115	882187	SCREW	6
116	848524	GASKET	1
117	848512	SPRING	1
118	903693	NUT	1
121	853455	RING	1

COPYRIGHT© 2005. All Rights Reserved.
Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for 352VS Type 6

Item Number	Part Number	Description	Qty Required
122	848551	WASHER	2
124	878579	TRACKING BOX	1
125	848514	SPRING	1
126	844107	SCREW	2
128	848565	SCREW	4
129	A03070	SS/A HANDLE SET	1
130	802995	WASHER	1
131	879678	SCREW	2
132	901266	STRAIN RELIEVER	1
133	886538	SCREW	2
135	903400	CORK & SHOE ASSY.	1
137	802764	SCREW	3
139	869687	NUT	2
140	848148	SCREW	8
141	695812	SCREW & WASHER	1
144	877817	SCREW	1
145	893792	SCREW	3
148	875322	SCREW	1
149	878404	DUST BAFFLE	1
158	883483	SCREW	2
164	892780	SCREW	1
174	696039	LOCATOR	1
175	801530	WASHER	1
177	810523	WASHER	2
179	682063	CONNECTOR VS	1
181	695813	SPACER	1
183	858008	SCREW	3

COPYRIGHT© 2005. All Rights Reserved.
Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for 352VS Type 6

Item Number	Part Number	Description	Qty Required
184	695868	WEAR PLATE	1
186	698042	SPRING	1
187	695789	LEVER	1
188	877537	COVER PLATE	1
189	878563	KEY	2
190	850410	OILER	1
193	698027	ENCLOSURE-TRIAC	1
195	882185	SCREW MACHINE STEEL	2
196	849314	TERM	1
197	848547	COVER	1
200	A23708	ID LABEL	1
201	A23709	WARNING LABEL	1
202	A12935	LABEL	1
203	A11331	WARNING LABEL	1
800	801946	LUBE	1
800	801945	TUBE GREASE	1
856	48118	GRAPHITE SNDR SHOE	1
861	891582	CARRYING CASE	1

COPYRIGHT© 2005. All Rights Reserved.
Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.