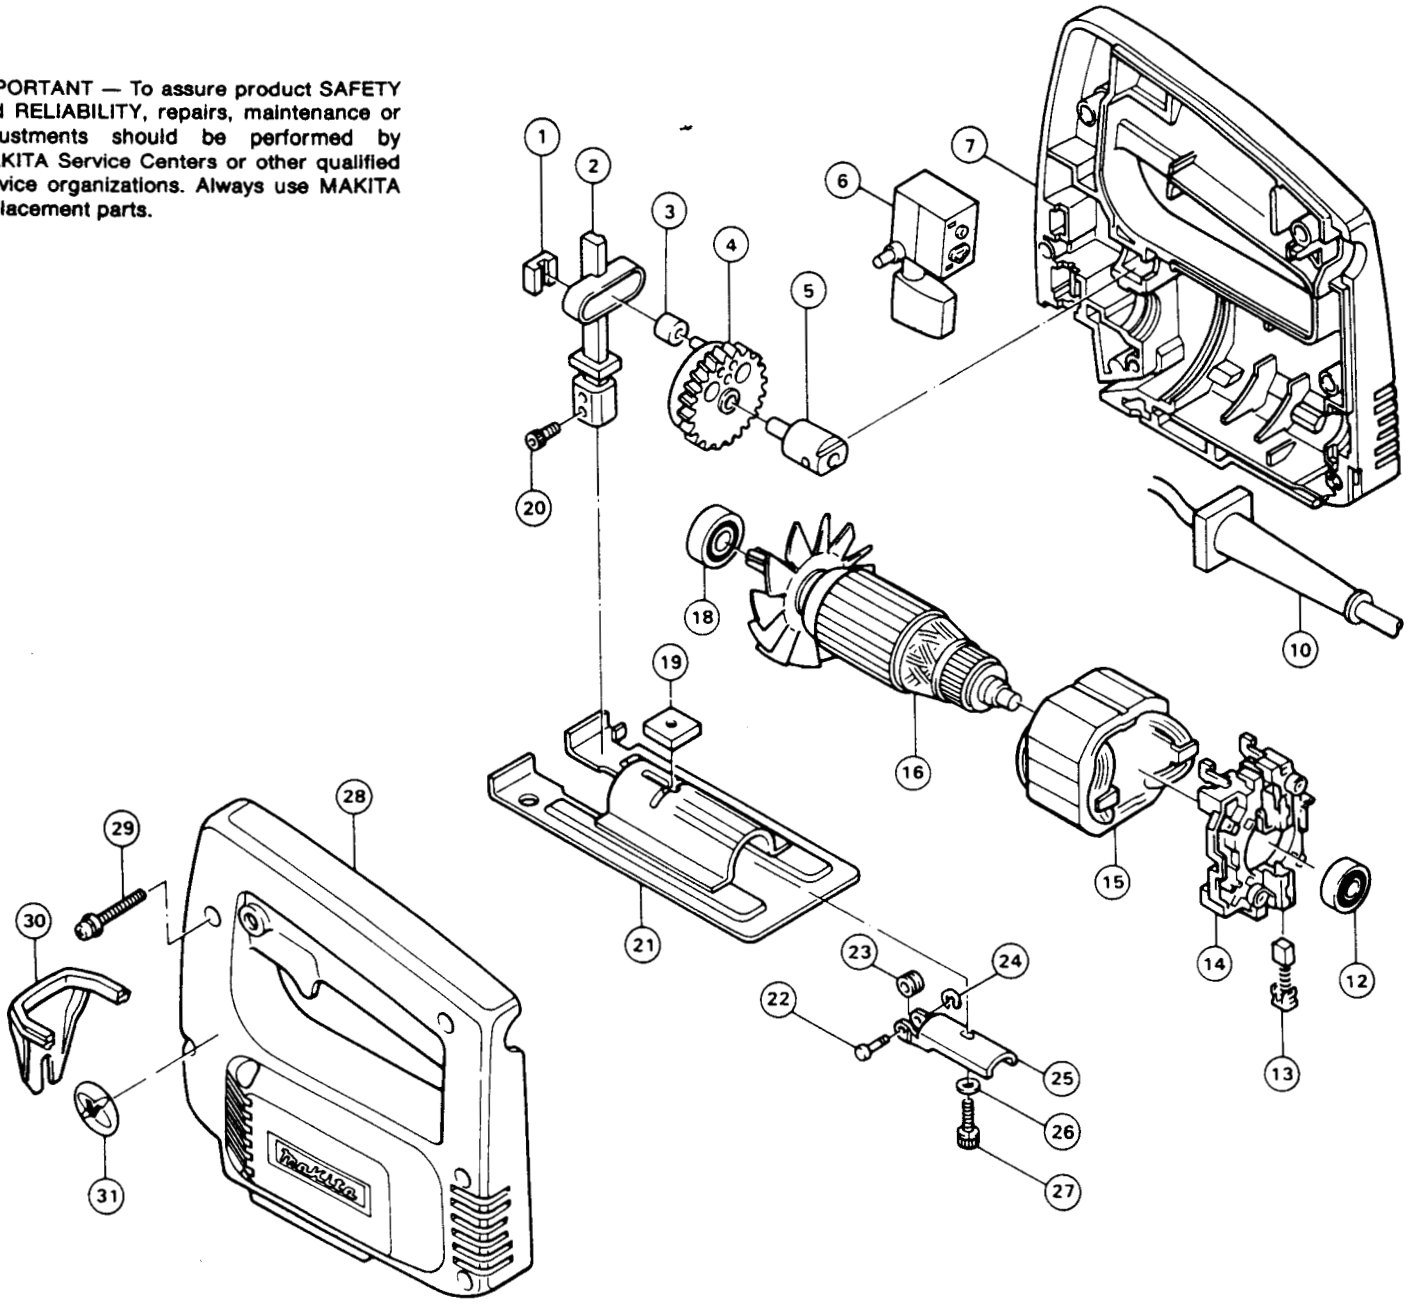
JIG SAW

Model 4320

IMPORTANT — To assure product SAFETY and RELIABILITY, repairs, maintenance or adjustments should be performed by MAKITA Service Centers or other qualified service organizations. Always use MAKITA replacement parts.



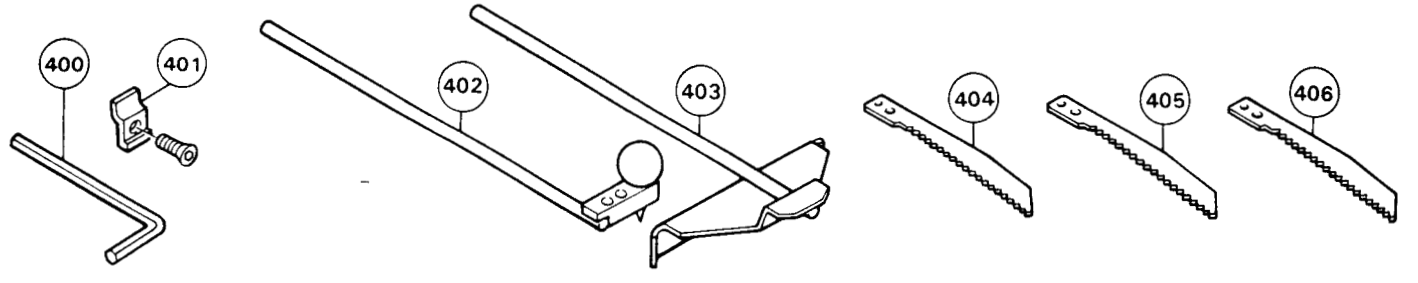


FIG.	PART NO.	QTY. USED	DESCRIPTION
1	214025-0	3	PLANE BEARING 4
2	*	1	SLIDER (Incl. Blade Clamp, 313057-5)
3	257625-3	1	SLEEVE 4
4	153183-6	1	GEAR
5	152327-5	1	PIN 6
6	**	1	SWITCH
7	*	1	HOUSING SET (Incl. Fig. 28)
10	664422-4	1	POWER SUPPLY CORD
12	211021-9	1	BALL BEARING 607LLB
13	643070-2	2	CARBON BRUSH (CB-70)
14	632081-2	1	TERMINAL BASE
15	633046-7	1	FIELD
16	611726-5	1	ARMATURE (Incl. Fig. 12, 18)
18	211031-6	1	BALL BEARING 608LLB
19	343540-8	1	HOLDER
20	922107-1	1	H.S.H. BOLT M4X8
21	164888-3	1	BASE
22	256644-6	1	PIN 3
23	321742-6	1	ROLLER
24	257903-1	1	STOP RING
25	134564-3	1	BACK ROLLER (Incl. Fig. 22~24)
26	941052-1	1	FLAT WASHER 4
27	922121-7	1	H.S.H. BOLT M4X14
28	*	1	HOUSING SET (Incl. Fig. 7)
29	911148-2	7	P.H. SCREW M4X25
30	414226-2	1	PROTECTOR
31	818057-5	1	LABEL
ACCESSORIES			
400	783201-2	1	HEX WRENCH 3
401	343381-2	1	RULE HOLDER (Incl. Hex Bolt, 251951-2)
402	123030-5	1	CIRCULAR GUIDE (Incl. 1 Each: Knob 20, 271601-3 & Circular Guide Pin, 323223-6)
403	164113-2	1	GUIDE RULE
404	723012-3-2	1	JIG SAW BLADE NO. 1
405	723009-2-2	1	JIG SAW BLADE NO. 2
406	723010-7-2	1	JIG SAW BLADE NO. 3

*SEE SERVICE CHANGE 1
**SEE SERVICE CHANGE 2

SERVICE CHANGE

1. Change on Slider and Housing from S/N 52,556E.

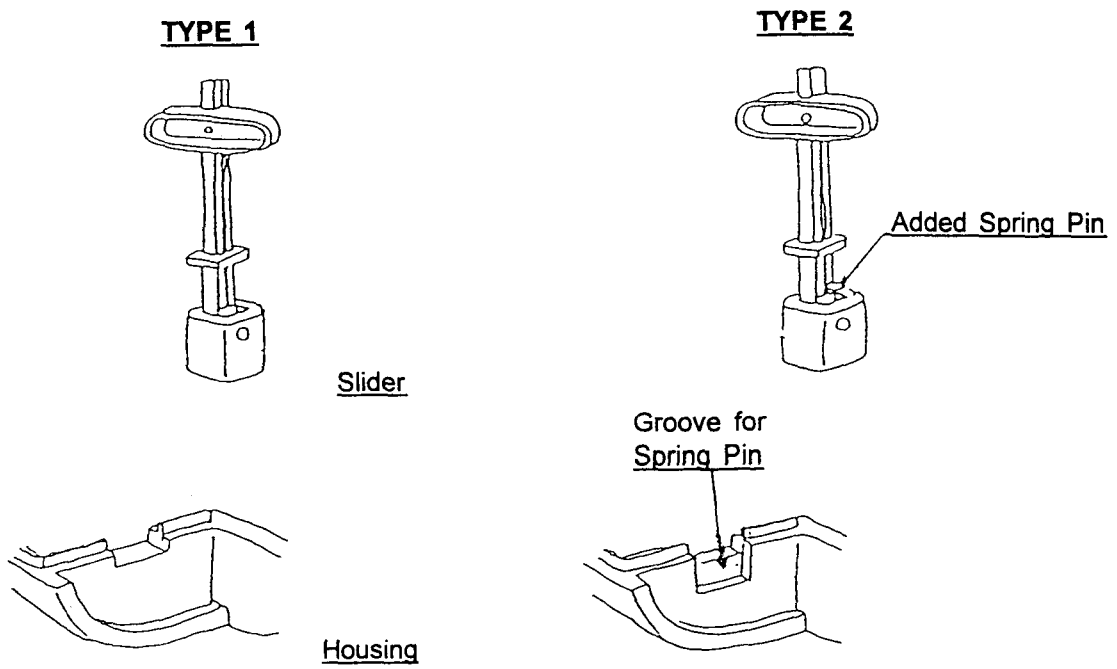


Fig.	Description	Type 1	Type 2
2	Slider	Part #154362-9 (Discontinued)	Part #154398-8
7 28	Housing Set	Part #182166-9 (Discontinued)	Part #182375-0

The above parts are completely interchangeable as a set, except Type 2 Housing fits Type 1 Housing individually.

Type 2 Slider fits Type 1 Housing if you remove added Spring Pin from Type 2 Slider.