

3⅜" CORDLESS SAW

Model 5090D
Model 5090DW

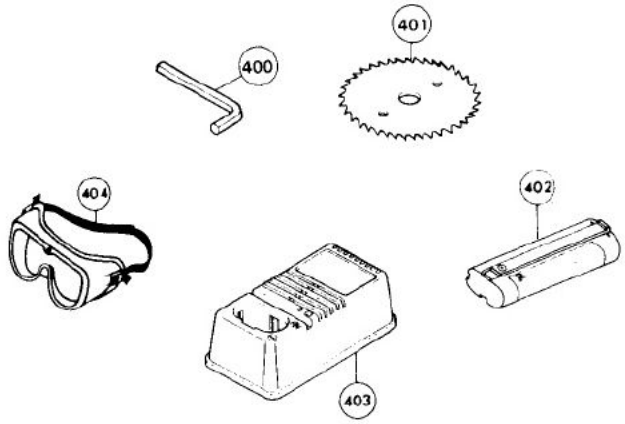

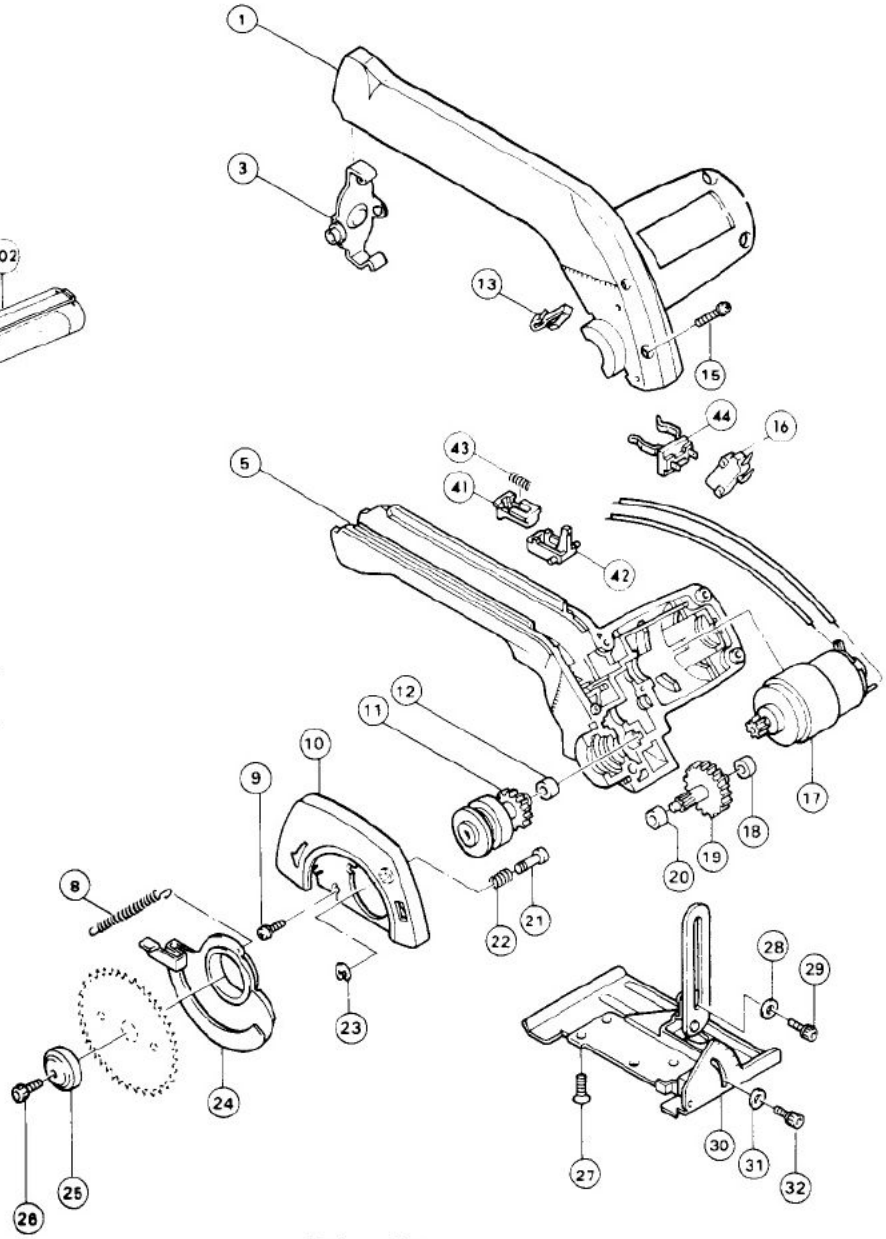

IMPORTANT — To assure product SAFETY and RELIABILITY, repairs, maintenance or adjustments should be performed by MAKITA Service Centers or other qualified service organizations. Always use MAKITA replacement parts.

Fig.	Part No.	Qty. Used	Description
1	182025-7	1	HOUSING SET (INCL. FIG. 3,5)
3	163157-9	1	SET PLATE
5	182025-7	1	HOUSING SET (INCL. FIG. 1,3)
8	231749-3	1	TENSION SPRING 5
9	911121-2	3	PAN HEAD SCREW M4×14
10	164872-8	1	BLADE CASE
11	153132-3	1	GEAR COMPLETE
12	214017-9	1	PLANE BEARING 5
13	232061-4	1	LEAF SPRING
15	911148-2	5	PAN HEAD SCREW M4×25
16	651862-5	1	SWITCH
17	629574-8	1	DC MOTOR 9.6V
18	214019-5	1	PLANE BEARING 4
19	226053-3A	1	GEAR COMPLETE
20	214019-5	1	PLANE BEARING 4
21	256625-0	1	PIN 5
22	231098-8	1	COMPRESSION SPRING 6
23	961011-9	1	STOP RING E-4
24	164548-7	1	SAFETY COVER
25	224177-9	1	OUTER FLANGE 28
26	922212-4	1	H.S.H. BOLT M5×12
27	912222-9	3	C.H.SCREW M5×16
28	253184-5	1	FLAT WASHER 5
29	922206-9	1	H.S.H. BOLT M5×10
30	163281-8	1	BASE
31	253184-5	1	FLAT WASHER 5
32	922206-9	1	H.S.H. BOLT M5×10
41	414169-8	1	LOCK OFF LEVER
42	414168-0	1	SWITCH LEVER
43	231390-2	1	COMPRESSION SPRING 3
44	643909-9	1	BATTERY HOLDER

ACCESSORIES

400	783202-0	1	HEX WRENCH 4
401	721003-8	1	COMBINATION SAW BLADE
402	632007-4	1	BATTERY (9.6V)
403	113087-4	1	1 HOUR CHARGER
404	191686-2	1	SAFETY GOGGLES