
PORTER-CABLE

D-HANDLE ROUTER


nearest Porter-Cable Service Center or other competent repair center.


6911
6912
694917

TYPE 1

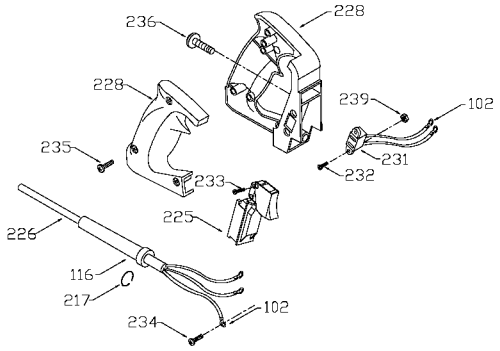

TYPES 2, 3, 4, 5, 6, 7

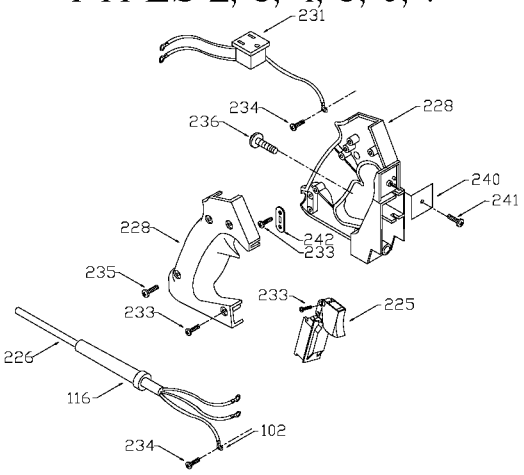

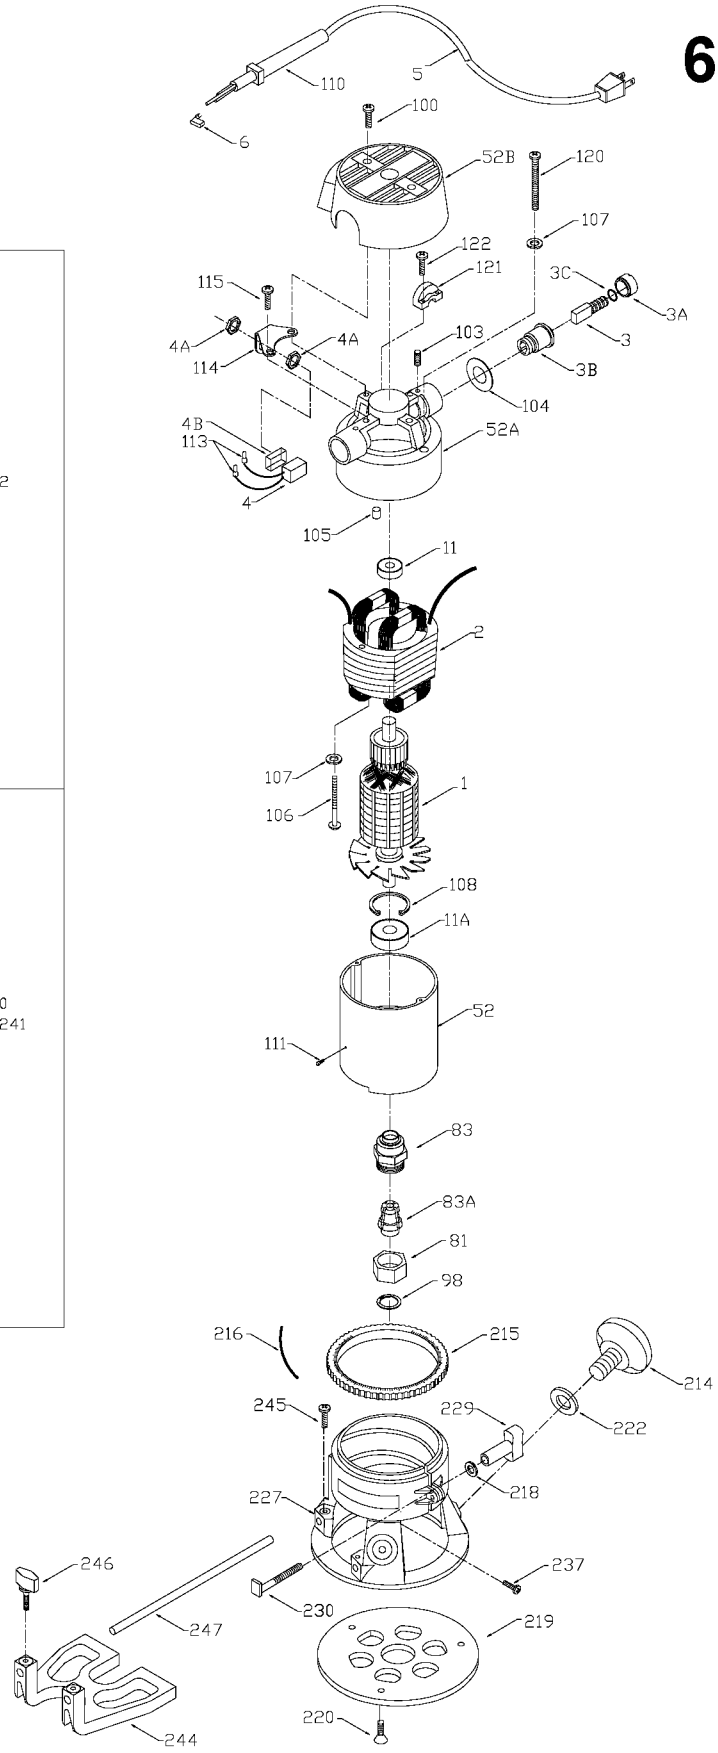

Parts List for 691 Type 3

Item Number	Part Number	Description	Qty Required
1	000000-00	No Longer Available	1
1	903660	ARMATURE	1
2	803104	LEAD	1
2	699326	FIELD	1
3	N031652	BRUSH	2
3	803483	BRUSH CAP	2
3	873497	BRUSH HOLDER	2
4	842606SV	SWITCH	1
4	694771	HEX NUT	10
5	876683	CORD KIT	1
5	876684	CORD KIT	1
5	873716	CORD	1
5	873717	CORD	1
11	855284	BEARING	3
11	878064SV	BEARING	1
52	903967SV	CASING & PINS FRONT	1
52	899192SV	REAR HOUSING	1
52	888727	MOTOR HOUSING CAP	1
81	875893	COLLET NUT	1
83	872793	CHUCK	1
83	42999	1/4 INCH COLLET ASSY	1
83	42975	3/8 INCH COLLET ASSY	1
83	42975	3/8 INCH COLLET ASSY	1
83	42950	1/2 INCH COLLET ASSY	1
83	876671	COLLET 1/2 INCH	1
83	876669	COLLET 1/4 INCH	1
83	876670	COLLET 3/8 INCH	1

COPYRIGHT© 2005. All Rights Reserved.
Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for 691 Type 3

Item Number	Part Number	Description	Qty Required
98	823030	SNAP-RING	10
100	878813	SCREW	10
102	849314	TERM	1
103	804360	SCREW	10
104	803496	WASHER	10
105	842597	PLUG	1
106	838312	SCREW	1
108	802426	RING	10
110	901266	STRAIN RELIEVER	1
111	800835	PIN	10
113	682063	CONNECTOR VS	1
114	842598	BRACKET SWITCH	1
115	802764	SCREW	10
116	810716	RELIEVER	1
120	681260	SCREW & WASHER	10
121	874137	CORD CLAMP	1
122	877817	SCREW	10
125	A22709	OPEN-END WRENCH	1
125	A22709	OPEN-END WRENCH	1
126	683157	WRENCH OPEN END	1
126	683157	WRENCH OPEN END	1
214	839279	KNOB	1
215	800942	RING	10
215	872998	DEPTH RING	1
216	800869	SPRING	3
218	823374	WASHER	10
219	875807	SUB BASE	1

COPYRIGHT© 2005. All Rights Reserved.
Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for 691 Type 3

Item Number	Part Number	Description	Qty Required
219	42186	ROUTER SUB-BASE	1
220	874117	SCREW	10
220	688860	SCREW	10
222	801821	WASHER	10
225	876770	SWITCH	1
226	802787	115V CORD	1
227	879348	BASE KIT	1
228	876335	HANDLE SET	1
229	874582	CLAMP KNOB	1
230	685526	SCREW	10
231	694125	OUTLET	1
233	882703	SCREW	1
234	892780	SCREW	10
235	859384	SCREW	1
236	803004	SCREW	10
237	694115	SCREW	1
240	694681	COVER	1
241	882183	SCREW	1
242	861434	CORD CLAMP	1
244	839120	EDGE GUIDE	1
244	42160	ROUTER EDGE GUIDE	1
245	803160	SCREW	10
246	882810	KNOB	1
247	824588	ROD GUIDE	1

COPYRIGHT© 2005. All Rights Reserved.
Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.