
# JET AL100-050-20 | Stock 133053

## Diagram A - AL100-050 Chain Hoist

Chain Hoist | Original JET parts reference

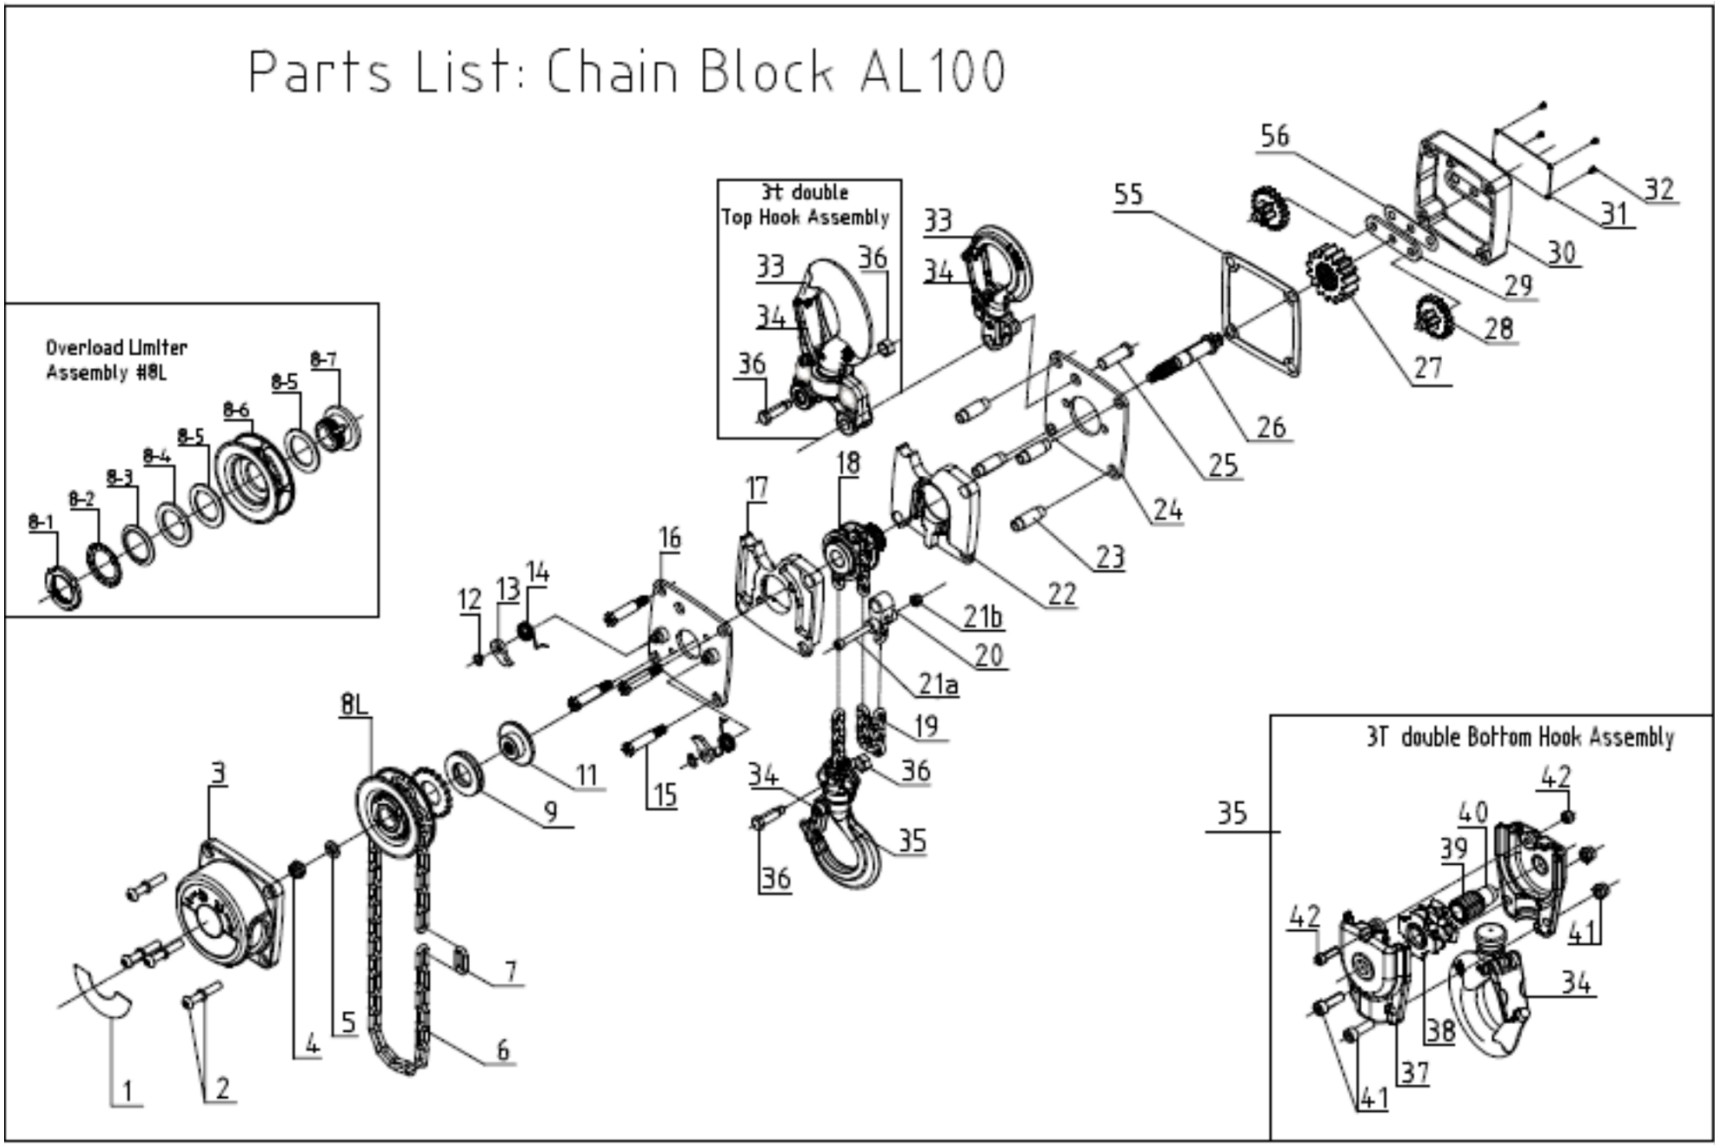


mmToolParts
Big Time Experience. Small Town Service. .com

# JET AL100-050-20 | Stock 133053

## Parts List A - AL100-050 Chain Hoist

Chain Hoist | Original JET parts reference

| Ref. | Part number | Description | Size | Qty. |
|---|---|---|---|---|
| 1 | JT9-AL100-50-01 | Warning Tag | | 1 |
| 2 | JT9-AL100-25-02 | Screw & Washer | M5x12 ;5mm | 4 |
| 3 | JT9-AL100-50-03 | Hand Wheel Cover | | 1 |
| 4 | JT9-GB8891-6 | Lock Nut | M6 | 1 |
| 5 | CM9-TS-1550041 | Washer | 6mm | 1 |
| 6 | JT9-AL100-50-06 | Hand Chain - specify length | 3.5x16 mm | 1 |
| 7 | JT9-AL100-50-07 | Hand Chain Connecting Link | | 1 |
| 8L | JT9-AL100-50-08L | Hand Wheel with Overload Protection | | 1 |
| 9 | JT9-AL100-50-09 | Fused Brake Disc | | 1 |
| 11 | JT9-AL100-50-11 | Brake Hub | | 1 |
| 12 | JT9-GB8941-06 | Retainer Ring | 6mm | 2 |
| 13 | JT9-JLH25-21 | Pawl | | 2 |
| 14 | JT9-JLH25-20 | Pawl Spring | | 2 |
| 15 | JT9-AL100-50-15 | Stay Bolt | | 4 |
| 16 | JT9-AL100-50-16 | Side Plate A Assembly | | 1 |
| 17 | JT9-AL100-50-17 | Load Chain Guide A | | 1 |
| 18 | JT9-AL100-50-18 | Load Sheave | | 1 |
| 19 | JT9-JLH50-48 | Load Chain | 4.3x12 mm | 1 |

mmToolParts
Big Time Experience. Small Town Service. .com

# JET AL100-050-20 | Stock 133053

## Parts List A - AL100-050 Chain Hoist (continued)

Chain Hoist | Original JET parts reference

| Ref. | Part number | Description | Size | Qty. |
|---|---|---|---|---|
| 20 | JT9-AL100-50-20 | Anchor Hanger | | 1 |
| 21 | JT9-AL100-50-21 | Anchor Pin (21a) / Nut (21b) | M4 | 1 |
| 22 | JT9-AL100-50-22 | Load Chain Guide B | | 1 |
| 23 | JT9-AL100-50-23 | Stay Bolt Sleeve | | 4 |
| 24 | JT9-AL100-50-24 | Side Plate B | | 1 |
| 25 | JT9-AL100-50-25 | Top Hook Shaft | | 1 |
| 26 | JT9-AL100-50-26 | Driving Shaft | | 1 |
| 27 | JT9-AL100-50-27 | Load Gear | | 1 |
| 28 | JT9-AL100-50-28 | Disc Gears | | 2 |
| 29 | JT9-AL100-50-29 | Gear Plate | | 1 |
| 30 | JT9-AL100-50-30 | Gear Case | | 1 |
| 31 | JT9-AL100-50-31 | Name Plate | | 1 |
| 32 | JT9-GB827-2-4 | Rivet | 2x4mm | 4 |
| 33 | JT9-AL100-50-33 | Top Hook Assembly | | 1 |
| 34 | JT9-JLH50-2 | Safety Latch Assembly | | 2 |
| 35 | JT9-AL100-50-35 | Bottom Hook Assembly | | 1 |
| 36 | JT9-JLH50-5G | Load Pin & Nut | | 1 |
| 55 | JT9-AL100-50-55 | Gasket | | 1 |
| 56 | JT9-AL100-50-56 | Shim | | 1 |

Note: When ordering replacement chain (Index #6, #19), specify length.

Where alternatives are listed, match the model, capacity, lift length, voltage, phase and hook style. Unnumbered component rows belong to the preceding assembly.

mmToolParts
Big Time Experience. Small Town Service. .com