
# DC330K Type 11 - Parts List

Use the figure number to match each part to the corresponding parts schematic.
DeWalt ServiceNet: DC330K Type 11 | Additional parts have no assigned figure

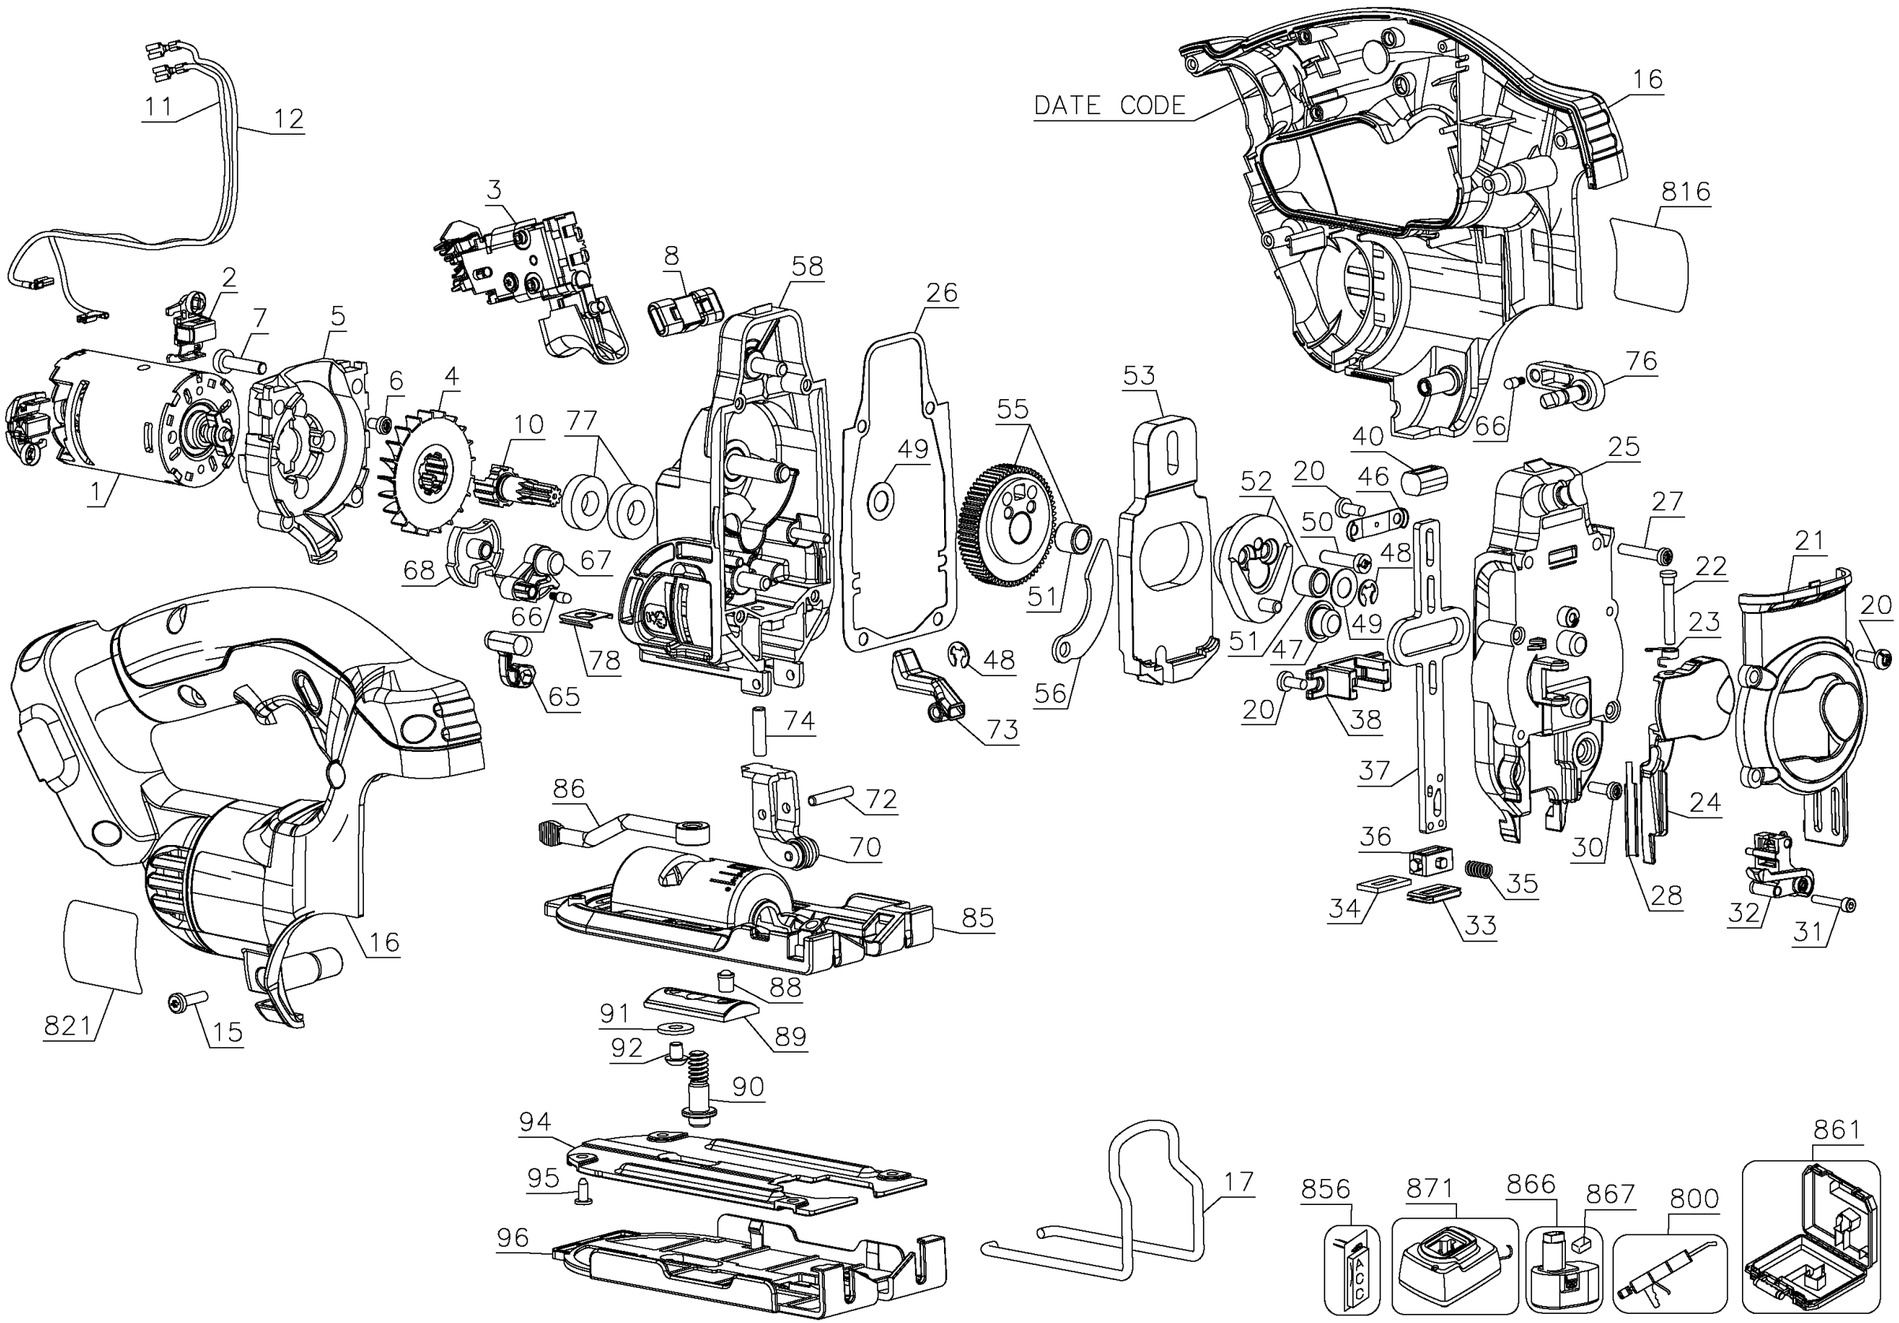




mmToolParts
Big Time Experience. Small Town Service. .com

# DC330K Type 11 - Parts List

Use the figure number to match each part to the corresponding parts schematic.
DeWalt ServiceNet: DC330K Type 11 | Additional parts have no assigned figure

| | | |
|---|---|---|
| Fig. 1 | 586202-01SV | MOTOR ASSY. |
| Fig. 2 | 603754-01 | BRUSH & HOLDER |
| Fig. 3 | 152274-23 | SWITCH |
| Fig. 4 | 496429-00 | FAN |
| Fig. 5 | 496428-00 | BAFFLE |
| Fig. 6 | 156179-01 | SCREW |
| Fig. 7 | 330045-15 | SCREW |
| Fig. 8 | 652425-00 | LEVER |
| Fig. 10 | 490989-00 | PINION |
| Fig. 11 | 621367-00 | LEAD PURPLE |
| Fig. 12 | 389923-00 | LEAD BLACK |
| Fig. 15 | 330065-07 | SCREW |
| Fig. 16 | N173566 | HOUSING ASSY. |
| Fig. 17 | 581269-00 | GUARD |
| Fig. 20 | 324006-00 | SCREW |
| Fig. 21 | 581577-00 | CASTING |
| Fig. 22 | 584627-00 | PIN |
| Fig. 23 | 581418-00 | SPRING |
| Fig. 24 | 586923-00 | ACTUATOR |
| Fig. 25 | 590334-02 | GEARCASE |
| Fig. 26 | 581244-00 | GASKET |
| Fig. 27 | 330045-09 | SCREW |
| Fig. 28 | 584451-00 | SPRING CLIP |
| Fig. 30 | 330045-06 | SCREW |
| Fig. 31 | 582837-00 | BOLT |
| Fig. 32 | N072135SV | BLADE CLAMP |
| Fig. 33 | 582262-00 | HOLDER |
| Fig. 34 | 582263-00 | FELT SEAL |
| Fig. 35 | 586646-00 | SPRING |

mmToolParts
Big Time Experience. Small Town Service. .com

# DC330K Type 11 - Parts List

Use the figure number to match each part to the corresponding parts schematic.
DeWalt ServiceNet: DC330K Type 11 | Additional parts have no assigned figure

| | | |
|---|---|---|
| Fig. 36 | 582259-00 | BEARING |
| Fig. 37 | 581274-00 | RECIPROCATOR |
| Fig. 38 | N621424 | SUPPORT BEARING |
| Fig. 40 | 490329-00 | BEARING |
| Fig. 46 | 582261-00 | CLAMP |
| Fig. 47 | 582257-00 | DRIVE ROLLER |
| Fig. 48 | 571181-00 | CLIP |
| Fig. 49 | 582829-00 | WASHER |
| Fig. 50 | N466547 | SCREW |
| Fig. 51 | 330004-02 | BEARING NEEDLE |
| Fig. 52 | N607672 | CRANK KIT |
| Fig. 53 | N034837 | COUNTERWEIGHT |
| Fig. 55 | N607665 | GEAR ASSEMBLY |
| Fig. 56 | 581247-00 | ACTUATOR |
| Fig. 58 | 585113-00SV | GEARCASE ASSY |
| Fig. 65 | 581255-05 | LEVER |
| Fig. 66 | 326467-00 | DETENT |
| Fig. 67 | 582830-05 | BODY |
| Fig. 68 | 582831-00 | BAFFLE |
| Fig. 70 | 581280-00 | BRACKET |
| Fig. 72 | 330041-29 | PIN |
| Fig. 73 | 584450-00 | NOZZLE |
| Fig. 74 | 330041-49 | PIN |
| Fig. 76 | 581257-01 | LEVER |
| Fig. 77 | 330003-95 | BEARING |
| Fig. 78 | N089310 | SPRING CLIP |
| Fig. 85 | 581263-00 | SHOE |
| Fig. 86 | 495746-00 | LEVER LOCK |
| Fig. 88 | 584686-00 | PLUNGER |

mmToolParts
Big Time Experience. Small Town Service. .com

# DC330K Type 11 - Parts List

Use the figure number to match each part to the corresponding parts schematic.
DeWalt ServiceNet: DC330K Type 11 | Additional parts have no assigned figure

| | | |
|---|---|---|
| Fig. 89 | 496996-00 | CLAMP |
| Fig. 90 | 582826-00 | BOLT |
| Fig. 91 | 582828-00 | WASHER |
| Fig. 92 | 582827-00 | BOLT |
| Fig. 94 | 581264-00 | SOLE PLATE |
| Fig. 95 | 389235-00 | SCREW |
| Fig. 96 | 581268-00 | SOLE PLATE |
| Fig. 800 | 283484-01 | GREASE |
| Fig. 816 | 587466-00 | BRAND LABEL |
| Fig. 821 | N416543 | RATING LABEL |
| Fig. 856 | 1004501-00 | FENCE |
| Fig. 856 | 402140-00 | ANTI SPLINTER DEVICE |
| Fig. 861 | N179861 | KIT BOX |
| Fig. 866 | DC9096 | BATTERY 18V - 2.4AH |
| Fig. 867 | 645221-00 | CAP |
| Fig. 871 | 388683-12 | CHARGER |

mmToolParts
Big Time Experience. Small Town Service. .com

# DC330K Type 11 - Parts List

Use the figure number to match each part to the corresponding parts schematic.

DeWalt ServiceNet: DC330K Type 11 | Additional parts have no assigned figure

## Additional parts - no figure assigned by DeWalt

| | | |
|---|---|---|
| - | NA705139 | BAG SA |

mmToolParts
Big Time Experience. Small Town Service. .com