
DW311K-BR Type 1 - Parts List

Use the figure number to match each part to the corresponding parts schematic.
DeWalt ServiceNet: DW311K-BR Type 1 | Additional parts have no assigned figure

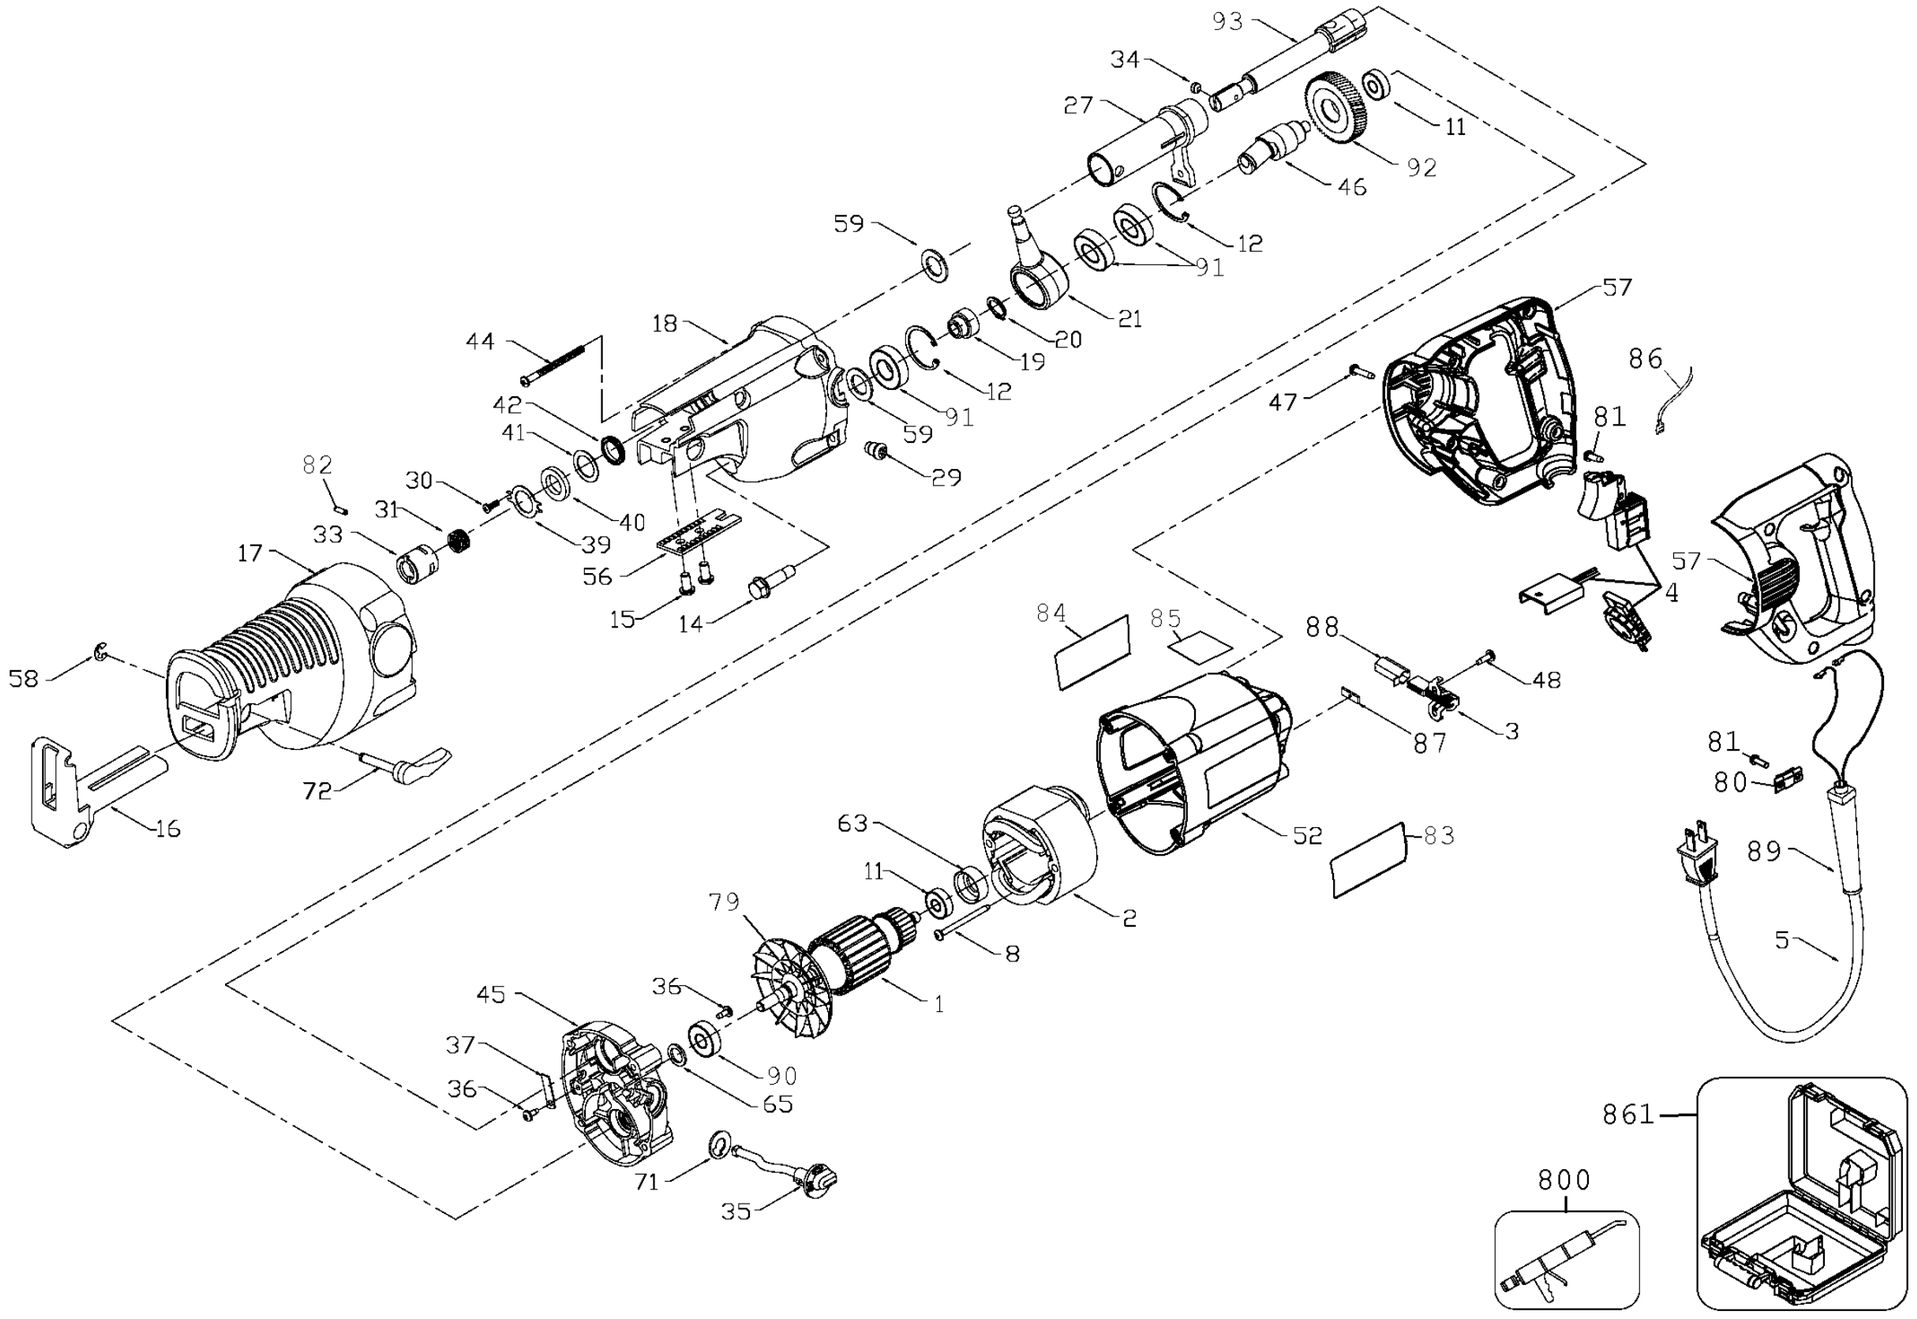

mmToolParts
Big Time Experience. Small Town Service. .com

DW311K-BR Type 1 - Parts List

Use the figure number to match each part to the corresponding parts schematic.
DeWalt ServiceNet: DW311K-BR Type 1 | Additional parts have no assigned figure

Fig. 1	634812-00SV	ARMATURE
Fig. 2	634810-00SV	FIELD
Fig. 3	874289	BRUSH & HOLDER SA
Fig. 4	5140102-37	SWITCH KIT
Fig. 5	330122-58	CORD SET
Fig. 8	882704	SCREW
Fig. 11	N110359	BEARING
Fig. 12	802302	RING
Fig. 14	879421	SCREW
Fig. 15	906952	SCREW
Fig. 16	911450SV	SHOE SA
Fig. 17	906725	COVER
Fig. 18	906701	HOUSING FRONT
Fig. 19	879429	SPACER
Fig. 20	853246	RING
Fig. 21	890819	PLATE
Fig. 27	883098	CARRIER
Fig. 29	879408	SCREW
Fig. 30	882255	SCREW
Fig. 31	648924-00	SPRING
Fig. 33	897774	COLLAR
Fig. 34	648594-00	CLAMPING BAR
Fig. 35	632169-00	SELECTOR
Fig. 36	882187	SCREW
Fig. 37	847418	SPRING
Fig. 39	879458	PLATE
Fig. 40	879457	FELT SEAL
Fig. 41	684931	WASHER
Fig. 42	902998	SEAL

mmToolParts
Big Time Experience. Small Town Service. .com

DW311K-BR Type 1 - Parts List

Use the figure number to match each part to the corresponding parts schematic.
DeWalt ServiceNet: DW311K-BR Type 1 | Additional parts have no assigned figure

Fig. 44	330019-19	SCREW
Fig. 45	906705	PLATE
Fig. 46	883097SV	DRIVE SHAFT
Fig. 47	330019-13	SCREW
Fig. 48	882703	SCREW
Fig. 52	631342-00	FIELD CASE
Fig. 56	906043	PLATE
Fig. 57	631234-00	HANDLE SA
Fig. 58	697965	RETAINER
Fig. 59	882348	FELT SEAL
Fig. 63	694432	HOLDER BEARING
Fig. 65	801852	SEAL
Fig. 71	908873	FELT SEAL
Fig. 72	651021-00	LEVER
Fig. 78	450212-00	TERMINAL
Fig. 79	878904SV	FAN
Fig. 80	450877-00	CORD CLAMP
Fig. 81	330019-02	SCREW
Fig. 82	638557-00	SPIROL PIN
Fig. 83	636945-00	IDENTITY LABEL
Fig. 84	650527-00	NAME PLATE
Fig. 85	636944-00	WARNING LABEL
Fig. 86	898878	LEAD RED
Fig. 87	865321	INSULATOR
Fig. 88	865323	BRUSH HOLDER
Fig. 89	N918736	CORD PROTECTOR
Fig. 90	605040-15	BEARING BALL
Fig. 91	879431	BEARING
Fig. 92	879401	GEAR

mmToolParts
Big Time Experience. Small Town Service. .com

DW311K-BR Type 1 - Parts List

Use the figure number to match each part to the corresponding parts schematic.
DeWalt ServiceNet: DW311K-BR Type 1 | Additional parts have no assigned figure

Fig. 93	N074353	DRIVE SHAFT
Fig. 800	286445-00	GREASE
Fig. 800	5140061-28	GREASE
Fig. 861	N009458	KITBOX

mmToolParts
Big Time Experience. Small Town Service. .com