
JET JBGM-6 | Stock 577109

Diagram A - Grinder Assembly - Shared JBGM-series

Bench Grinder | Original JET manual M-577109, Edition 1

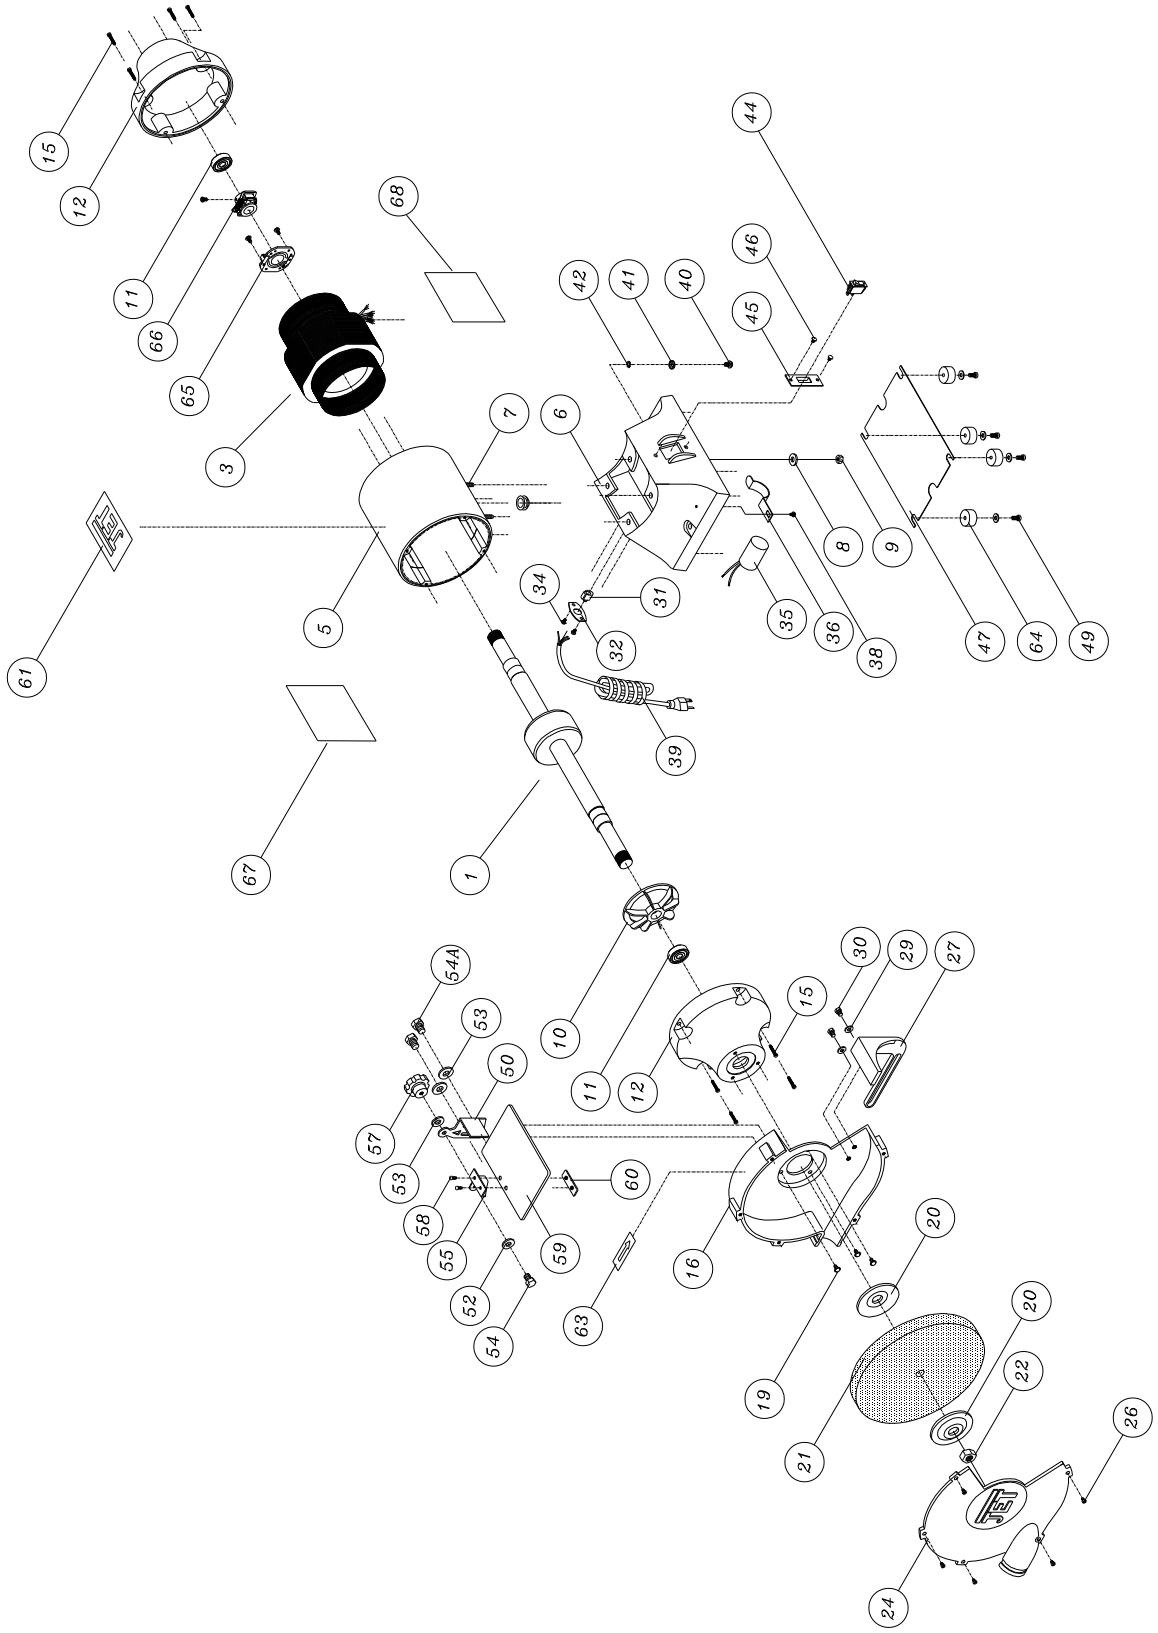

mmToolParts
Big Time Experience. Small Town Service. .com

JET JBGM-6 | Stock 577109

Parts List A - Grinder Assembly - Shared JBGM-series

Bench Grinder | Original JET manual M-577109, Edition 1

Ref.	Part number	Description	Size	Qty.
1	JBG6A-02P	Shaft and Rotor Assembly		1
	JBG8A-02P	Shaft and Rotor Assembly		1
3	JBG6A-03	Stator Assembly		1
	JBG8A-03	Stator Assembly		1
5	JBG6A-05G	Motor Housing		1
	JBG8A-05G	Motor Housing		1
6	JBG6A-06G	Base		1
	JBG8A-06G	Base		1
7	JBG6A-07	Cross Screw	1/4" x 7/8"	4
8	TS-0720071	Lock Washer	1/4"	4
9	TS-0561011	Hex Nut	1/4"	4
10	JBG6A-10	Fan		1
	JBG8A-10	Fan		1
11	BB-6202ZZ	Ball Bearing (JBG-6A)		2
	BB-6204ZZ	Ball Bearing (JBG-8A)		2
12	JBG6A-12G	Cover		2
	JBG8A-12G	Cover		2
15	JBG6A-15	Screw	3/16" x 5/8"	4
16	JBG6A-16B	Inner Wheel Guard - left		1
	JBG8A-16B	Inner Wheel Guard - left		1
	JBG10A-18	Flat Washer (JBG-10A only - not shown)		4
19	JBG6A-19	Cross Screw	1/4" x 1/2"	3

mmToolParts
Big Time Experience. Small Town Service. .com

JET JBGM-6 | Stock 577109

Parts List A - Grinder Assembly - Shared JBGM-series (continued)

Bench Grinder | Original JET manual M-577109, Edition 1

Ref.	Part number	Description	Size	Qty.
20	JBG6A-20	Wheel Flange	1/2" ID, 2"OD	2
	JBG8A-20	Wheel Flange	5/8" ID, 2-3/4"OD	2
21	576208	Grinding Wheel	Ø6" x 3/4", 46 grit	1
	576220	Grinding Wheel	Ø8" x 3/4", 46 grit	1
22	JBG6A-22	Nut - left hand thread	1/2"	1
	JBG8A-22	Nut - left hand thread	5/8"	1
24	JBG6A-24B	Outer Wheel Guard - left		1
	JBG8A-24P	Outer Wheel Guard - left		1
26	JBG6A-26	Cross Screw	1/4" x 1/2"	5
27	JBG6A-27	Tool Rest - left		1
	JBG8A-27	Tool Rest - left		1
29	TS-0680031	Flat Washer	5/16"	2
30	TS-0051031	Hex Cap Bolt	5/16" x 3/4"	2
31	JBG6A-31	Rubber Guide		1
	JBG8A-31	Rubber Guide		1
32	JBG6A-32	Cord Plate		1
	JBG8A-32	Cord Plate		1
34	JBG6A-34	Cross Screw	3/16" x 1/4"	2
35	JBG6A-35	Condenser (125 VAC, 100MFD)		1
	JBG8A-35	Condenser (125 VAC, 200MFD)		1
36	JBG6A-36	Bracket		1
	JBG8A-36	Bracket		1

mmToolParts
Big Time Experience. Small Town Service. .com

JET JBGM-6 | Stock 577109

Parts List A - Grinder Assembly - Shared JBGM-series (continued)

Bench Grinder | Original JET manual M-577109, Edition 1

Ref.	Part number	Description	Size	Qty.
38	JBG6A-38	Screw	3/16" x 1/4v	1
39	JBG6A-39	Power Cord		1
	JBG8A-39	Power Cord		1
40	JBG6A-40	Cross Screw	3/16" x 3/8"	1
41	JBG6A-41	Star Washer	3/16"	1
42	JBG6A-42	Clip		1
	JBG8A-42	Clip		1
44	JBG6A-44	Rocker Switch		1
	JBG8A-44	Toggle Switch		1
45	JBG6A-45	Switch Plate		1
	JBG8A-45	Switch Plate		1
46	JBG6A-46	Screw	3/16" x 1/4"	2
47	JBG6A-47	Base Plate		1
	JBG8A-47	Base Plate		1
49	JBG6A-49	Cross Screw	3/16" x 1/2"	4
	JBG8A-49	Cross Screw	3/16" x 1/2"	4
50	JBG6A-50	Eye Shield Plate - left		1
	JBG8A-50	Eye Shield Plate - left		1
52	TS-0720071	Lock Washer	1/4"	1
53	TS-0680021	Flat Washer	1/4"	3
54	JBG6A-54	Cross Screw	1/4" x 1/2"	1
	JBG8A-54	Cross Screw	1/4" x 1/2"	1

mmToolParts
Big Time Experience. Small Town Service. .com

JET JBGM-6 | Stock 577109

Parts List A - Grinder Assembly - Shared JBGM-series (continued)

Bench Grinder | Original JET manual M-577109, Edition 1

Ref.	Part number	Description	Size	Qty.
54A	JBG6A-54	Cross Screw	1/4" x 3/8"	2
55	JBG6A-55	Eye Shield Plate - left		1
	JBG8A-55	Eye Shield Plate - left		1
	JBG10A-55	Eye Shield Plate - left		1
57	JBG6A-57	Lock Hub (JBG-6A/8A)	1/4"	1
58	JBG6A-58	Cross Screw	3/16" x 3/8"	2
59	JBG6A-59	Eye Shield		1
	JBG6A-59A	Eye Shield Assembly		1
	JBG8A-59	Eye Shield		1
	JBG8A-59A	Eye Shield Assembly		1
60	JBG6A-60	Eye Shield Bracket Plate		1
61	JET-92	JET Logo	92x38mm	1
63	JBG6A-63	Direction Label		1
64	JBG6A-64	Rubber Foot (6A/8A)		4
65	JBG6A-65	Switch Seat		1
	JBG8A-65	Switch Seat		1
66	JBG6A-66	Centrifugal Start Switch		1
	JBG8A-66	Centrifugal Start Switch		1
67	LM000297	ID Label, JBGM-6		1
	LM000298	ID Label, JBGM-8		1
68	LM000299	Warning Label, JBGM	2-3/4" x 4-1/4"	1
	577115	Contact Wheel (not shown)	2” x 3-1/2”	1

JET provides a shared diagram and parts list for JBGM-6 and JBGM-8. Model-specific alternatives and JET's original applicability descriptions are retained; match the part to your model.

JET lists only the contact wheel for the Multitool attachment in this manual. For other attachment replacement parts, JET directs users to Multitool at 800-660-0880.

mmToolParts
Big Time Experience. Small Town Service. .com