
JET JTJ-5ST | Stock 454505

Diagram A - Toe Jack

Toe Jack | Original JET parts reference

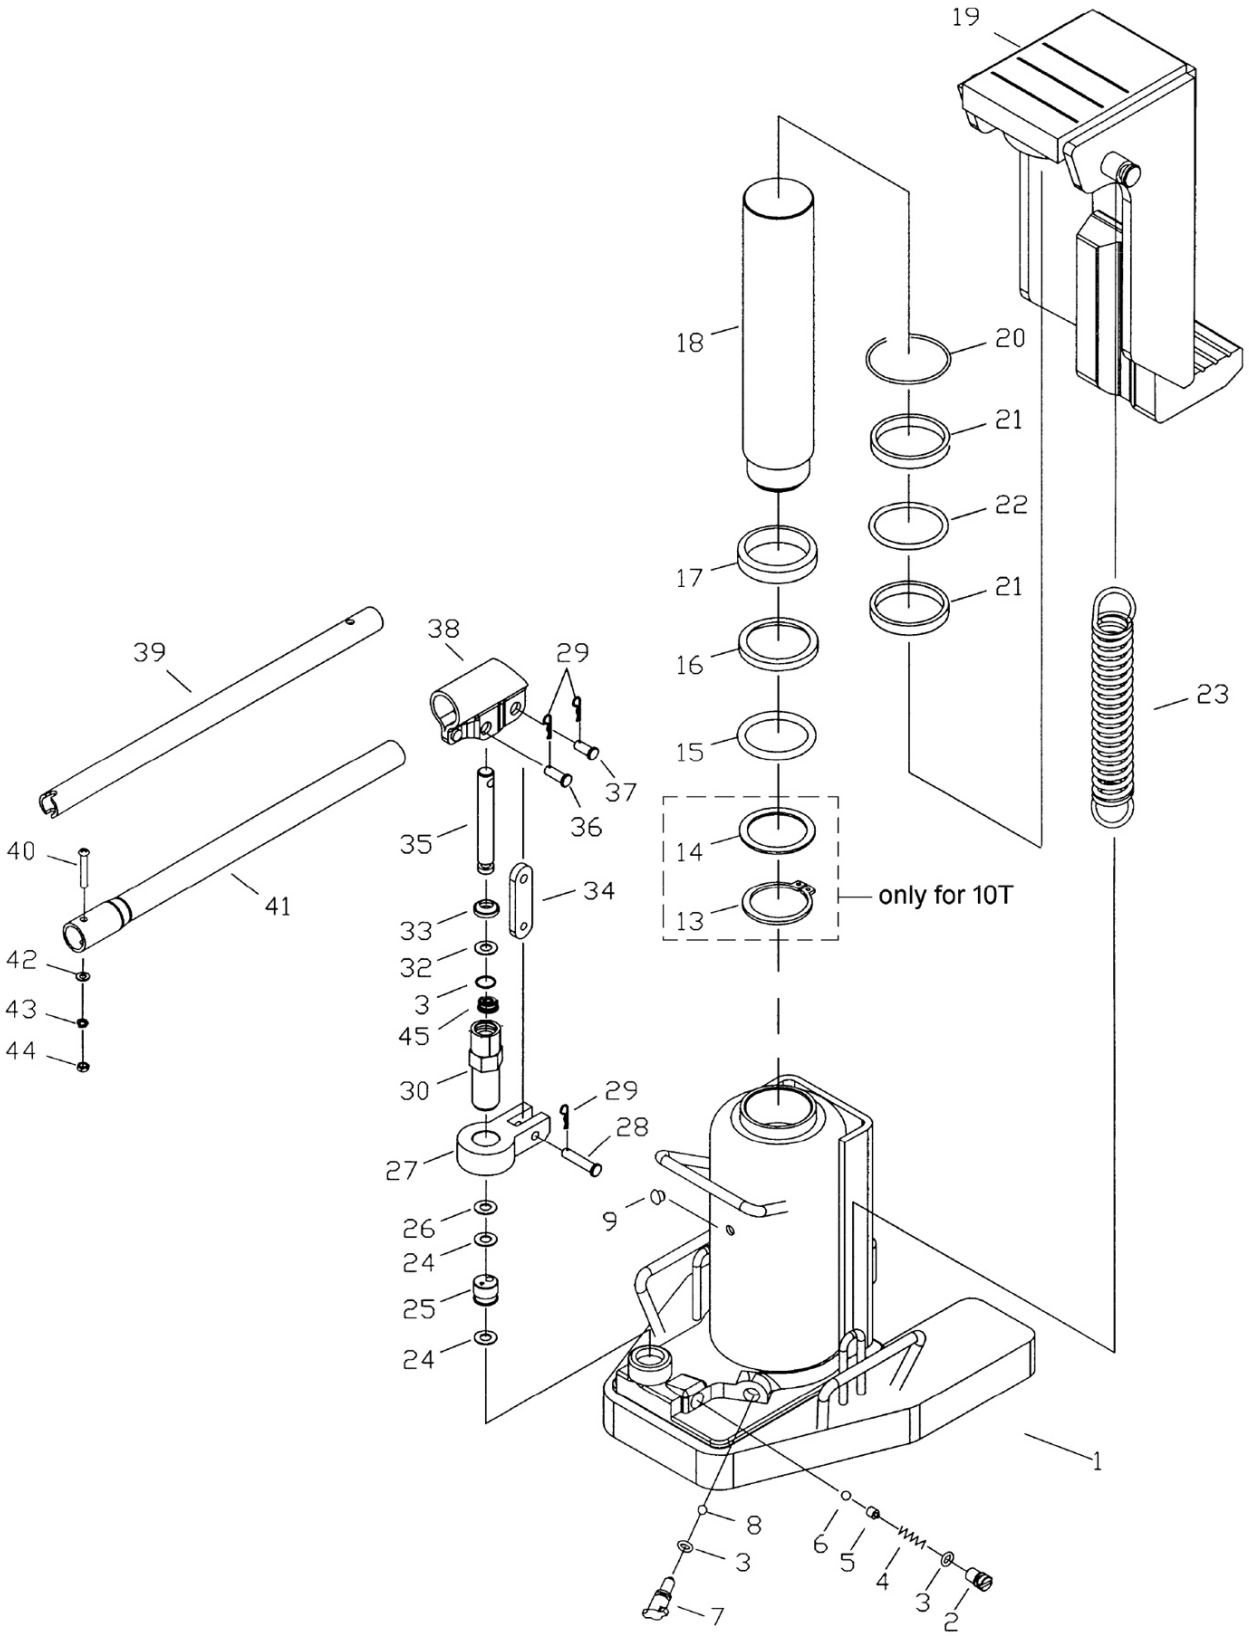

mmToolParts
Big Time Experience. Small Town Service. .com

JET JTJ-5ST | Stock 454505

Parts List A - Toe Jack

Toe Jack | Original JET parts reference

Ref.	Part number	Description	Size	Qty.
1	**	Body		1
2	JT9-JTJ5ST-02	Safety Valve Screw		1
3	JT9-JTJ10ST-03	O-Ring	7.1x2.65mm	3
4	JT9-JTJ5ST-04	Safety Valve Spring		1
5	JT9-JTJ5ST-05	Ball Seat		1
6	JT9-SB-4MM	Steel Ball	4mm	1
7	JT9-JTJ5ST-07	Release Stem		1
8	JT9-SB-6MM	Steel Ball	6mm	1
9	JT9-JTJ5ST-09	Oil Fill Plug		1
15	JT9-JTJ5ST-15	O-Ring	35.5x4.6mm	1
16	JT9-JTJ5ST-16	Sealing Washer		1
17	JT9-JTJ5ST-17	Piston Ring		1
18	JT9-JTJ5ST-18	Ram		1
19	**	Toe		1
20	JT9-JTJ5ST-20	Snap Ring		1
21	JT9-JTJ5ST-21	Bushing		2
22	JT9-JTJ5ST-22	O-Ring	42.5x3.55mm	1
23	JT9-JTJ5ST-23	Return Spring		2
24	JT9-JTJ5ST-24	Copper Washer		2
25	JT9-JTJ5ST-25	Oil Valve Assembly		1

mmToolParts
Big Time Experience. Small Town Service. .com

JET JTJ-5ST | Stock 454505

Parts List A - Toe Jack (continued)

Toe Jack | Original JET parts reference

Ref.	Part number	Description	Size	Qty.
26	JT9-JTJ5ST-26	Nylon Gasket		1
27	**	Link Base		1
28	JT9-JTJ5ST-28	Pin		1
29	JT9-JTJ5ST-29	Pin		3
30	JT9-JTJ5ST-30	Pump Cylinder		1
32	JT9-JTJ5ST-32	Nylon Gasket		1
33	JT9-JTJ5ST-33	Dustproof Ring		1
34	**	Rod Joint		1
35	JT9-JTJ5ST-35	Pump Plunger		1
36	JT9-JTJ5ST-36	Pin		1
37	JT9-JTJ5ST-37	Pin		1
38	**	Handle Socket		1
39	JT9-JTJ10ST-HA	Rear Handle		1
40	JT9-TS-2285302	Pan Head Screw	M5x30	1
41	JT9-JTJ10ST-41	Front Handle		1
42	JT9-TS-1550031	Flat Washer	M5	1
43	JT9-TS-2361051	Lock Washer	M5	1
44	JT9-TS-1540031	Hex Nut	M5	1
45	**	Rubber Seals type Y	12*5.4*5.4	1
	JT9-JTJ5ST-ID	ID Label (not shown)	JTJ5ST-ID	1

** These parts are shown for reference only and are not available for order individually.

mmToolParts
Big Time Experience. Small Town Service. .com