
JET JTS-10DD

Diagram A - Saw Body and Stand

10-inch direct-drive table saw

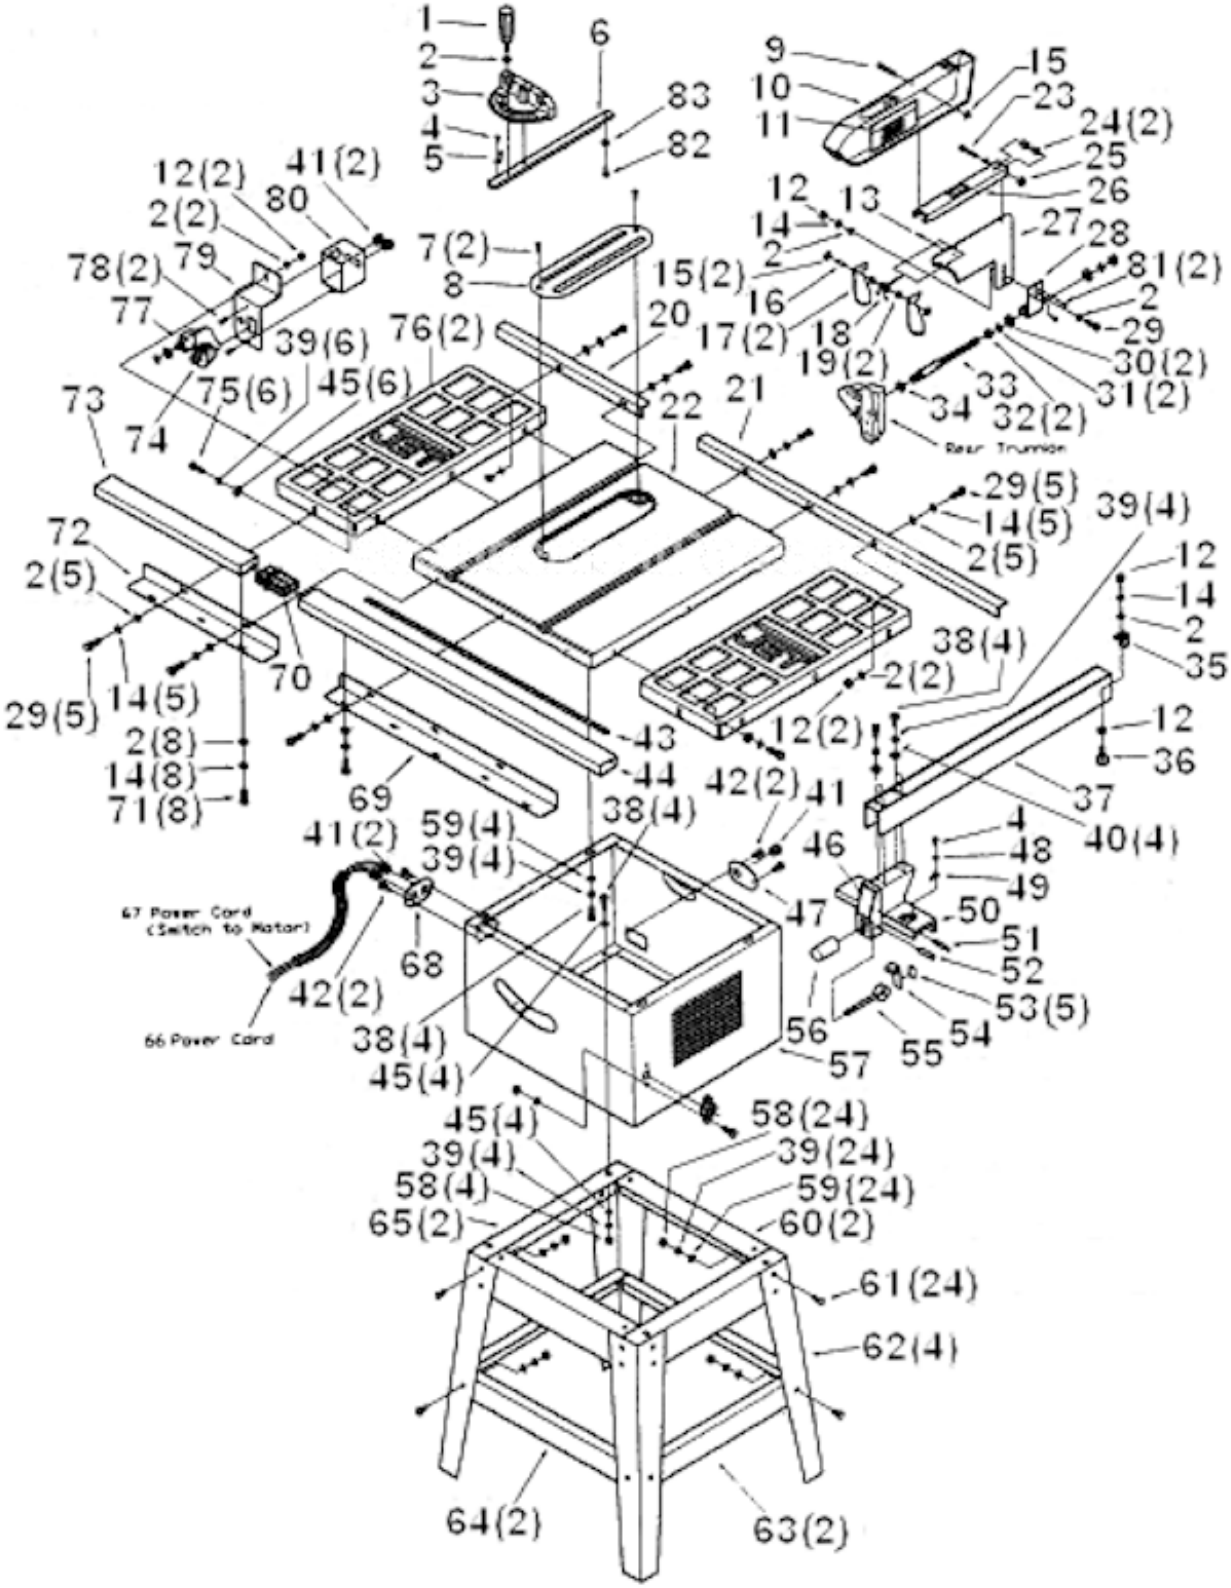

mmToolParts
Big Time Experience. Small Town Service. .com

JET JTS-10DD

Parts List A - Saw Body and Stand

10-inch direct-drive table saw

Ref.	Part number	Description
1	JSL10TS-1	Knob
2	JSL10TS-2	Flat Washer
3	JSL10TS-3	Miter Gauge Body
4	JSL10TS-4	Round Head Screw 3/16 x 3/8
5	JWS18HO-27	Plate
6	JSL10TS-6	Guide Plate
7	JSL10TS-7	PhillipS Screw
8	JSL10TS-8	Table Insert
9	JT9-JTAS10-G1	PIN
10	JTAS10-G2	Guard
11	JT9-JTAS10-G8	WARNING LABEL
12	TS-0561011	Hex Nut
13	JT9-JTAS10-G10	PIN
14	JSL10TS-14	Lock Washer
15	JTAS10-G7	Lock Grommet
16	JT9-JTAS10-G23	PIN
17	JT9-JTAS10-G24	ANTI-KICKBACK PAWL
18	JT9-JTAS10-G25	SPRING
19	JT9-JTAS10-G26	SPACER
20	JSL10TS-20W	Rear Rail Short
21	JSL10TS-21W	Rear Rail Long
22	JSL10TS-22	Table
23	JT9-TS-0207091	HEX SOCKET CAP SCREW
24	JT9-JTAS10-G5	SPACER
25	TS-0561011	Hex Nut
26	JSL10TS-26	Support Arm
27	JSL10TS-27	Splitter
28	JSL10TS-28	Bracket
29	JSL10TS-29	Hex Screw
30	JSL10TS-30	Flat Washer
31	JSL10TS-31	Lock Washer
32	JSL10TS-32	Hex Nut

Quantities are not specified. Reference numbers match the diagram; 800-series entries identify additional assemblies or parts.

mmToolParts
Big Time Experience. Small Town Service. .com

JET JTS-10DD

Parts List A - Saw Body and Stand

10-inch direct-drive table saw

Ref.	Part number	Description
33	JSL10TS-33	Shaft
34	JSL10TS-34	Lock Washer
35	JSL10TS-35	Rear Hook
36	JSL10TS-36	Sliding Pad
37	JSL10TS-37	Fence
38	JSL10TS-38	Hex Cap Bolt
39	JSL10TS-39	Lock Washer
40	JSL10TS-40	Washer
41	JT9-JTAS10-27	CORD CLAMP
42	JT9-JTAS10-28	TAP SCREW
43	JSL10TS-43	Scale
44	JSL10TS-44W	Guide Rail Long
45	JSL10TS-45	Flat Washer
46	JSL10TS-46	Label
47	JTAS10-46	Clamp Plate
48	JSL10TS-48	Lock Washer
49	JSL10TS-49	Pointer
50	JSL10TS-50	Fence Body
51	JSL10TS-51	Pin
52	JSL10TS-52	Pin
53	JSL10TS-53	Pad
54	JSL10TS-54W	Lock Plate
55	JSL10TS-55	Lock Handle
56	JSL10TS-56	Knob
57	JSL10TS-57W	Cabinet
58	JSL10TS-58	Hex Nut
59	JSL10TS-59	Flat Washer
60	JSL10TS-60W	Stand Top Front and Rear, Long
61	JT9-TS-0152011	BOLT- CARRIAGE HEAD
62	JSL10TS-62W	Stand Leg
63	JSL10TS-63W	Cross Brace Left and Right, Short
64	JSL10TS-64W	Cross Brace Front and Rear, Long

Quantities are not specified. Reference numbers match the diagram; 800-series entries identify additional assemblies or parts.

mmToolParts
Big Time Experience. Small Town Service. .com

JET JTS-10DD

Parts List A - Saw Body and Stand

10-inch direct-drive table saw

Ref.	Part number	Description
65	JSL10TS-65W	Stand Top Left and Right, Short
66	JSL10TS-66	POWER CORD
67	JSL10TS-67	Power Cord Switch to Motor
68	JT9-JTAS10-29	CORD PLATE
69	JSL10TS-69W	Front Rail Long
70	JSL10TS-70	Connector
71	JSL10TS-71	Hex Screw
72	JSL10TS-72W	Front Rail Short
73	CM9-JSL10TS-73W	GUIDE RAIL SHORT
74	JSL10TS-74	Switch
75	JSL10TS-75	Hex Cap Bolt
76	CM9-JSL10TS-76W	EXTENSION WING
77	JSL10TS-77	Thermal Reset Switch
78	JSL10TS-78	Tap Screw
79	JSL10TS-79W	Switch Plate
80	JSL10TS-80	Switch Box
81	JSL10TS-81	Round Head Screw
82	JSL10TS-82	Screw
83	JSL10TS-83	Guide Washer
800	JSL10TS-10A	Blade Guard Assembly CP
800	JSL10TS-22NW	Table
800	JSL10TS-3A	Miter Guage Assembly CP
800	JSL10TS-3AN	Miter Guage Assembly CP
800	JSL10TS-50A	Fence Assembly CP
800	JSL10TS-6N	Guide Bar
800	JSL10TS-74A	Switch Assembly


Quantities are not specified. Reference numbers match the diagram; 800-series entries identify additional assemblies or parts.

mmToolParts
Big Time Experience. Small Town Service. .com

JET JTS-10DD

Diagram B - Motor and Trunnion

10-inch direct-drive table saw

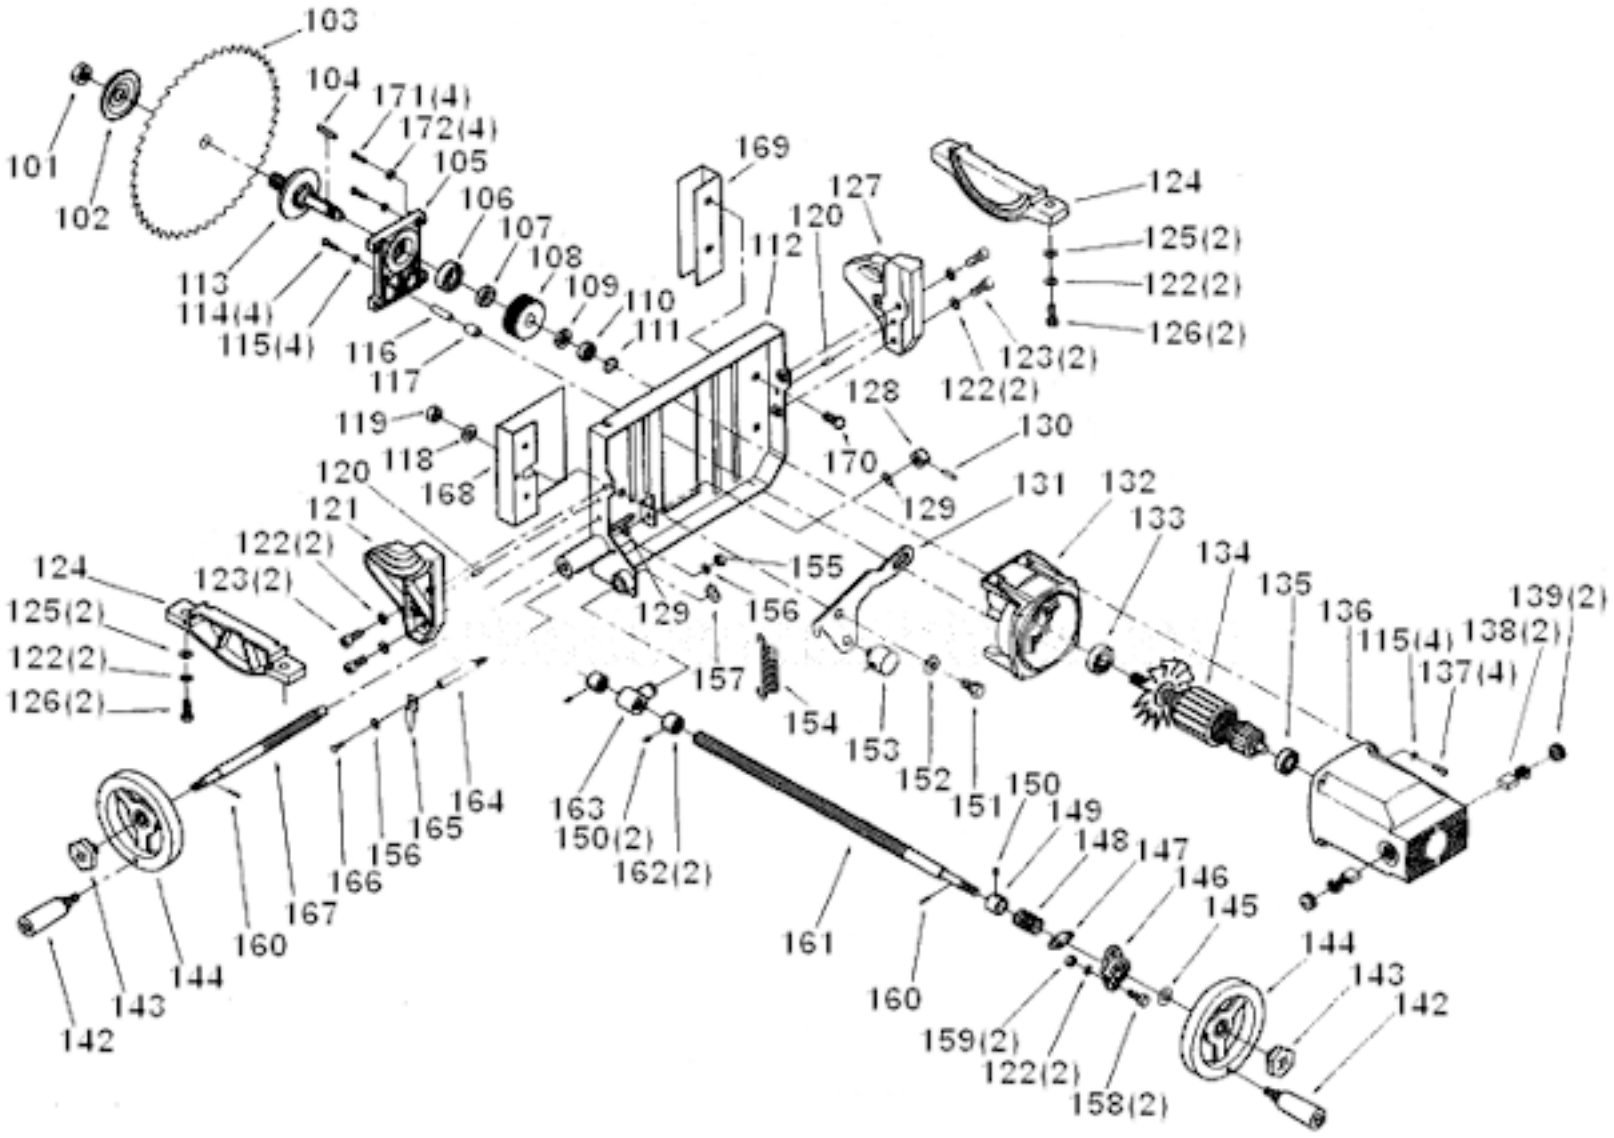

mmToolParts
Big Time Experience. Small Town Service. .com

JET JTS-10DD

Parts List B - Motor and Trunnion

10-inch direct-drive table saw

Ref.	Part number	Description
101	jtas10-101	ARBOR NUT
102	JT9-JTAS10-102	ARBOR FLANGE
103	JSL10TS-103	Saw Blade
104	JSL10TS-104	Key
105	JSL10TS-105	Gear Box Cover
106	BB-6202ZZ	Ball Bearing
107	JSL10TS-107	Bearing Load Spacer
108	JSL10TS-108	Gear
109	JSL10TS-109	Arbor Nut
110	JT9-BB-608ZZ	BALL BEARING
111	JSL10TS-111	Wave Washer
112	JSL10TS-112	Motor Bracket
113	JSL10TS-113	Arbor w/Flange
114	JSL10TS-114	Hex Socket Cap Screw
115	JSL10TS-115	Lock Washer
116	JSL10TS-116	Pin
117	JSL10TS-117	Spacer
118	JSL10TS-118	Lock Washer
119	JSL10TS-119	Hex Nut
120	JSL10TS-120	Roll Pin
121	JSL10TS-121	Front Trunnion
122	JSL10TS-122	Lock Washer
123	JSL10TS-123	Hex Socket Cap Screw
124	JSL10TS-124	Trunnion Bracket
125	JSL10TS-125	Flat Washer
126	JSL10TS-126	Hex Cap Bolt
127	JSL10TS-127	Rear Trunnion
128	JSL10TS-128	Spacer
129	JSL10TS-129	Flat Washer
130	JSL10TS-130	Roll Pin
131	JSL10TS-131	Connect Plate
132	JSL10TS-132	Gear Box

Quantities are not specified. Reference numbers match the diagram; 800-series entries identify additional assemblies or parts.

mmToolParts
Big Time Experience. Small Town Service. .com

JET JTS-10DD

Parts List B - Motor and Trunnion

10-inch direct-drive table saw

Ref.	Part number	Description
133	BB-6202ZZ	Ball Bearing
134	JSL10TS-134	Roter Assembly
135	BB-620ZZ	Ball Bearing
136	JSL10TS-136	Motor Housing
137	JSL10TS-137	Hex Socket Cap Screw
138	JSL10TS-138	Carbon Brush
139	JSL10TS-139	Brush Cap
142	JSL10TS-142	Hand Wheel Handle
143	JSL10TS-143	Lock Knob
144	JSL10TS-144	Hand Wheel
145	JSL10TS-145	Flat Washer
146	JSL10TS-146W	Shield Plate
147	JSL10TS-147	Hand Wheel Rod
148	JSL10TS-148	Spring
149	JSL10TS-149	Set Spacer
150	JSL10TS-150	Set Screw
151	JSL10TS-151	Bolt
152	JSL10TS-152	Flat Washer
153	JSL10TS-153	Cross Connect
154	JSL10TS-154	Spring
155	JSL10TS-155	Hex Nut
156	JSL10TS-156	Lock Washer
157	JSL10TS-157	Snap Ring
158	JSL10TS-158	Hex Bolt
159	JSL10TS-159	Hex Nut
160	JSL10TS-160	Roll Pin
161	JSL10TS-161	Leadscrew
162	JSL10TS-162	Set Spacer
163	JSL10TS-163	Connector
164	JSL10TS-164	Pointer Bracket
165	JSL10TS-165	Pointer
166	JSL10TS-166	Round Head Screw

Quantities are not specified. Reference numbers match the diagram; 800-series entries identify additional assemblies or parts.

mmToolParts
Big Time Experience. Small Town Service. .com

JET JTS-10DD

Parts List B - Motor and Trunnion

10-inch direct-drive table saw

Ref.	Part number	Description
167	JSL10TS-167	Leadscrew
168	JSL10TS-168	Front Guard
169	JSL10TS-169	Rear Guard
170	JSAS10-28	Tap Screw
171	JSL10TS-171	Round Head Screw
172	JSL10TS-172	Hex Nut
800	JSL10TS-136CP	Motor Assembly CP
800	JSL10TS-HK	Hardware Kit
800	JSL10TS-TS	Tilt Scale
800	JSL10TS-WL	Warning Label
800	JTAS10-170	Arbor Wrench

Quantities are not specified. Reference numbers match the diagram; 800-series entries identify additional assemblies or parts.

mmToolParts
Big Time Experience. Small Town Service. .com