
JET L-100-1000WO-10 | Stock 108100

Diagram A - L100-1000 Chain Hoist

Chain Hoist | Original JET parts reference

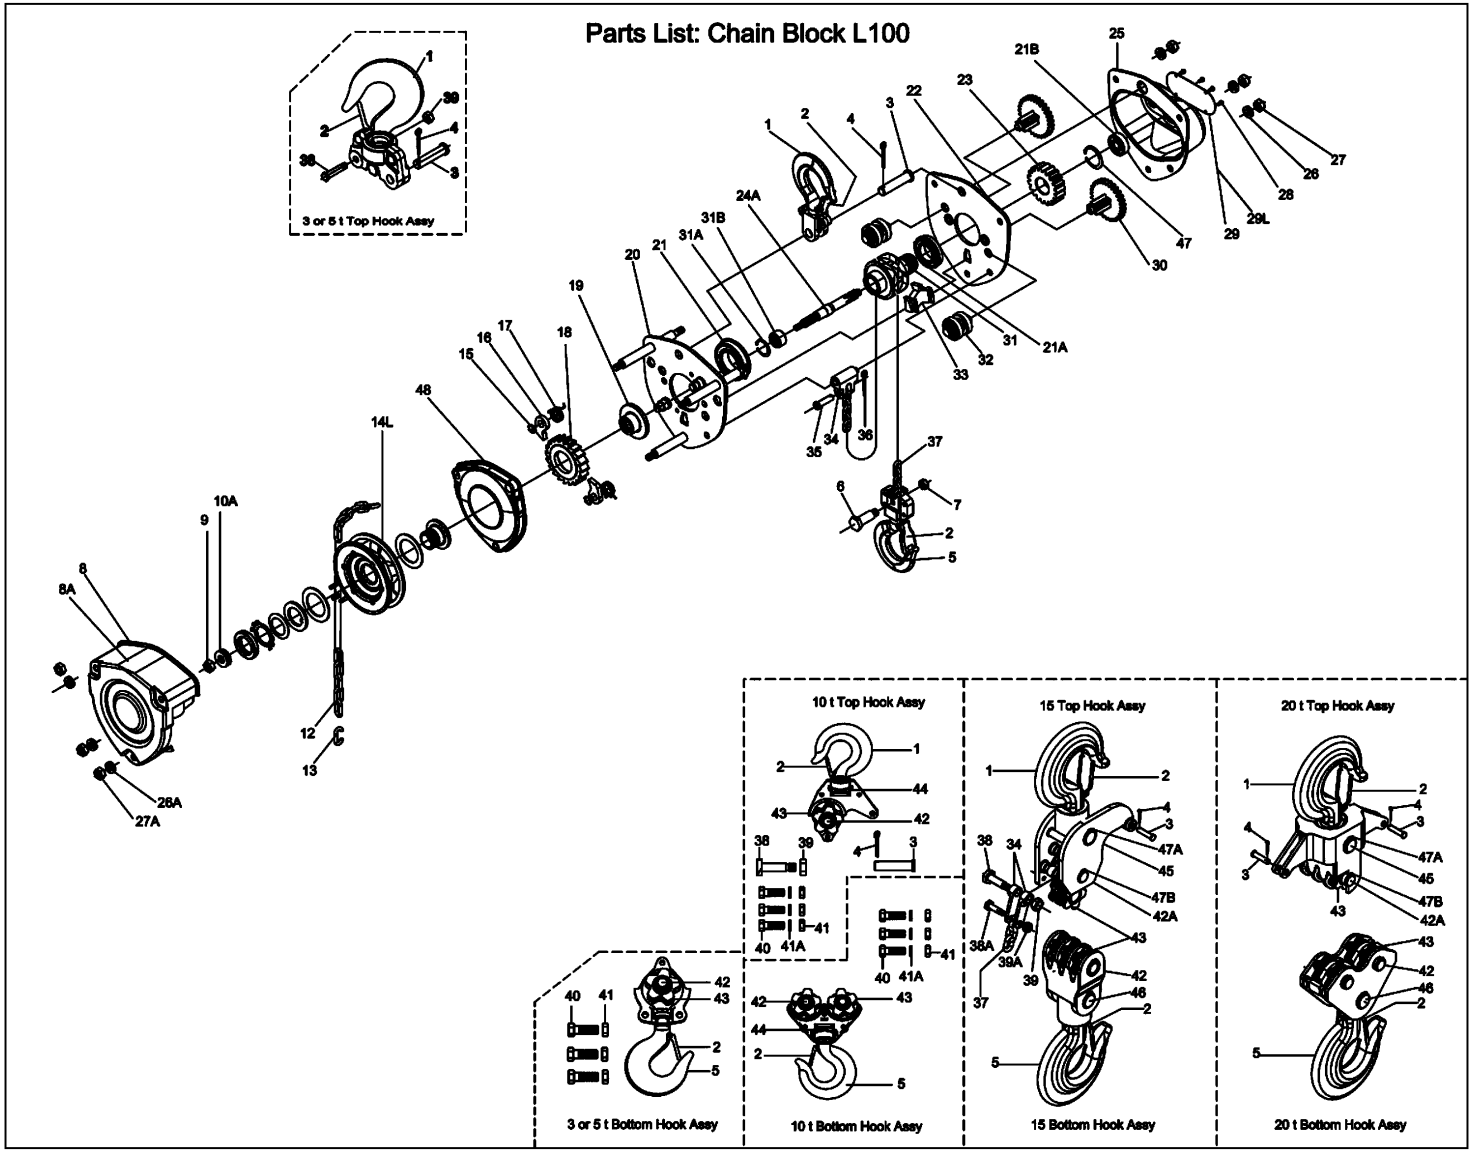

mmToolParts
Big Time Experience. Small Town Service. .com

JET L-100-1000WO-10 | Stock 108100

Parts List A - L100-1000 Chain Hoist

Chain Hoist | Original JET parts reference

Ref.	Part number	Description	Size	Qty.
1	JT1-439	Top Hook Assembly		1
		Top Hook		1
		Safety Latch		1
		Double Spring		1
		Socket Head Cap Screw	M5x30	1
		Lock Nut	M5	1
		Top Hook Holder		1
		Hook Collar Bushing		1
		Idle Shaft		1
		Idle Sheave		1
		Needle Bearing		1
		Socket Head Cap Screw	M12x40	2
		Lock Nut	M12	2
		Lock washer	M12	2
2	JT9-L100-1000-2	Safety Latch Assembly		2
		Safety Latch		2
		Double Spring		2
		Socket Head Cap Screw	M5x30	2
		Lock Nut	M5	2
3	JT9-L100-500-3	Top Hook Shaft		1
4	JT9-L100-500-4	Split Pin	2.5x22 mm	1
5	JT9-L100-1000-5	Bottom Hook Assembly		1
		Bottom Hook		1
		Safety Latch		1
		Double Spring		1
		Socket Head Cap Screw	M5x30	1
		Lock Nut	M5	1

mmToolParts
Big Time Experience. Small Town Service. .com

JET L-100-1000WO-10 | Stock 108100

Parts List A - L100-1000 Chain Hoist (continued)

Chain Hoist | Original JET parts reference

Ref.	Part number	Description	Size	Qty.
		Idle Shaft		2
		Idle Sheave		2
		Needle Bearing		1
		Socket Head Cap Screw	M12x45	3
		Lock Nut	M12	3
		Lock Washer	M12	3
		Hook Collar Bushing		1
		Bottom Hook Holder		1
8	JT9-L100-500-8G	Hand Wheel Cover Assembly		1
		Hand Wheel Cover		1
		Hand Chain Guide		2
8A	JT9-L100-50-8A	Warning Label		1
9	JT9-L100-100-9-1	Wheel Stopper	M8	1
10A	JT1-2787	Bearings		1
12	JT9-L100-100-12	Hand Chain - specify length	5x25 mm	1
13	JT9-L100-100-13	Hand Chain Connecting Link		1
14L	JT9-0-1000WO-14-1L	Overload Limiter Assembly		1
		Overload Limiter Knob		1
		Brake Disc		2
		Hand Chain Wheel		1
		Bushing in Hand Chain Wheel		1
		Disc Spring Plate		1
		Disc Spring		1
		Disc Spring Stopper		1
		Lock Nut		1
15	JT9-L100-100-15	Snap Ring	10 mm	2
16	JT9-L100-100-16	Pawl		2
17	JT9-L100-100-17	Pawl Spring		2

mmToolParts
Big Time Experience. Small Town Service. .com

JET L-100-1000WO-10 | Stock 108100

Parts List A - L100-1000 Chain Hoist (continued)

Chain Hoist | Original JET parts reference

Ref.	Part number	Description	Size	Qty.
18	JT9-L100-500-18-1	Ratchet Disc Assembly		1
		Ratchet Disc		1
		Ratchet Bushing		1
19	JT9-L100-500-19-1	Disc Hub		1
20	JT9-L100-500-20-1	Wheel Side Plate Assembly		1
		Wheel Side Plate		1
		Stay Bolt		3
		Pawl Pin		2
		Brake Cover		1
		Double Seal Ball Bearing	d35xD62x14 mm	1
21	JT9-L100-500-21	Double Seal Ball Bearing	d35xD62x14 mm	1
21A	JT9-L100-500-21	Double Seal Ball Bearing	d35xD62x14 mm	1
21B	JT9-L100-500-21B	Double Seal Ball Bearing	d12xD32x10 mm	1
22	JT9-L100-500-22	Gear Side Plate Assembly		1
		Gear Side Plate		1
		Bushing		2
		Double Seal Ball Bearing	d35xD62x14 mm	1
23	JT9-L100-500-23	Load Gear		1
24A	JT1-2796	Drive Shaft		1
25	JT9-L100-500-25G	Gear Case Assembly		1
		Gear Case		1
		Bushing		2
		Double Seal Bearing	d12xD32x10 mm	1
26	JT9-F002118	Lock Washer (Black Oxide)	12mm	3
26A	JT1-3001	Lock Washer (Black Oxide)	8mm	3
27	JT1-2998	Acorn Nut (Black Oxide)	M12	3
27A	JT9-F001754	Acorn Nut (Black Oxide)	M8	3

mmToolParts
Big Time Experience. Small Town Service. .com

JET L-100-1000WO-10 | Stock 108100

Parts List A - L100-1000 Chain Hoist (continued)

Chain Hoist | Original JET parts reference

Ref.	Part number	Description	Size	Qty.
28	JT9-L100-100-28	Rivet	3x6 mm	4
29	JT9-LM000028	Name Plate, L100-1000 with overload		1
30	JT1-3000	Spur Gear Assembly		2
		Spur Gear		2
		Pinion Gear		2
31	JT9-L100-500-31	Load Sheave		1
31A	JT9-L100-500-31A	C-Clip	24 mm	1
31B	JT9-L100-500-31B	Needle Bearing HK1715	17x42x15 mm	1
32	JT9-L100-500-32	Guide Roller		2
33	JT9-L100-500-33	Stripper		1
34	JT9-L100-500-34	Chain Anchor Plate		1
35	JT9-L100-500-35	Chain Anchor Pin		1
36	JT9-L100-500-36	Split Pin	2x18 mm	1
37	JT9-L100-500-37	Load Chain - specify length	9x27mm	1
38	JT9-L100-1000-38	Top Hook Pin		1
39	JT1-2998	Lock Nut	M10	2
40	JT9-F005454	Socket Head Cap Screw	M12x40	2
40A	JT9-F005455	Socket Head Cap Screw	M12x45	3
41	JT9-F003084	Lock Nut	M12	5
41A	JT9-F002646	Washer	M12	5
42	JT9-L100-500-42	Idle Shaft		1
43	JT9-L100-500-43	Idle Sheave		1
44	JT9-L100-1000-44	Hook Collar Assembly		2
		Steel Ball		52
		Set Screw	M12	2
47	JT9-L100-500-47	Snap Ring	32mm	1
48	JT9-L100-500-48G	Dust Cover		1
	JT9-L100-WT	Warning Tag (not shown)		1

Note: When ordering replacement chain (Index #12, #37), specify length.

Where alternatives are listed, match the model, capacity, lift length, voltage, phase and hook style. Unnumbered component rows belong to the preceding assembly.

mmToolParts
Big Time Experience. Small Town Service. .com