
# JET L-100-500WO-20 | Stock 208120

## Diagram A - L100-500 Chain Hoist

Chain Hoist | Original JET parts reference

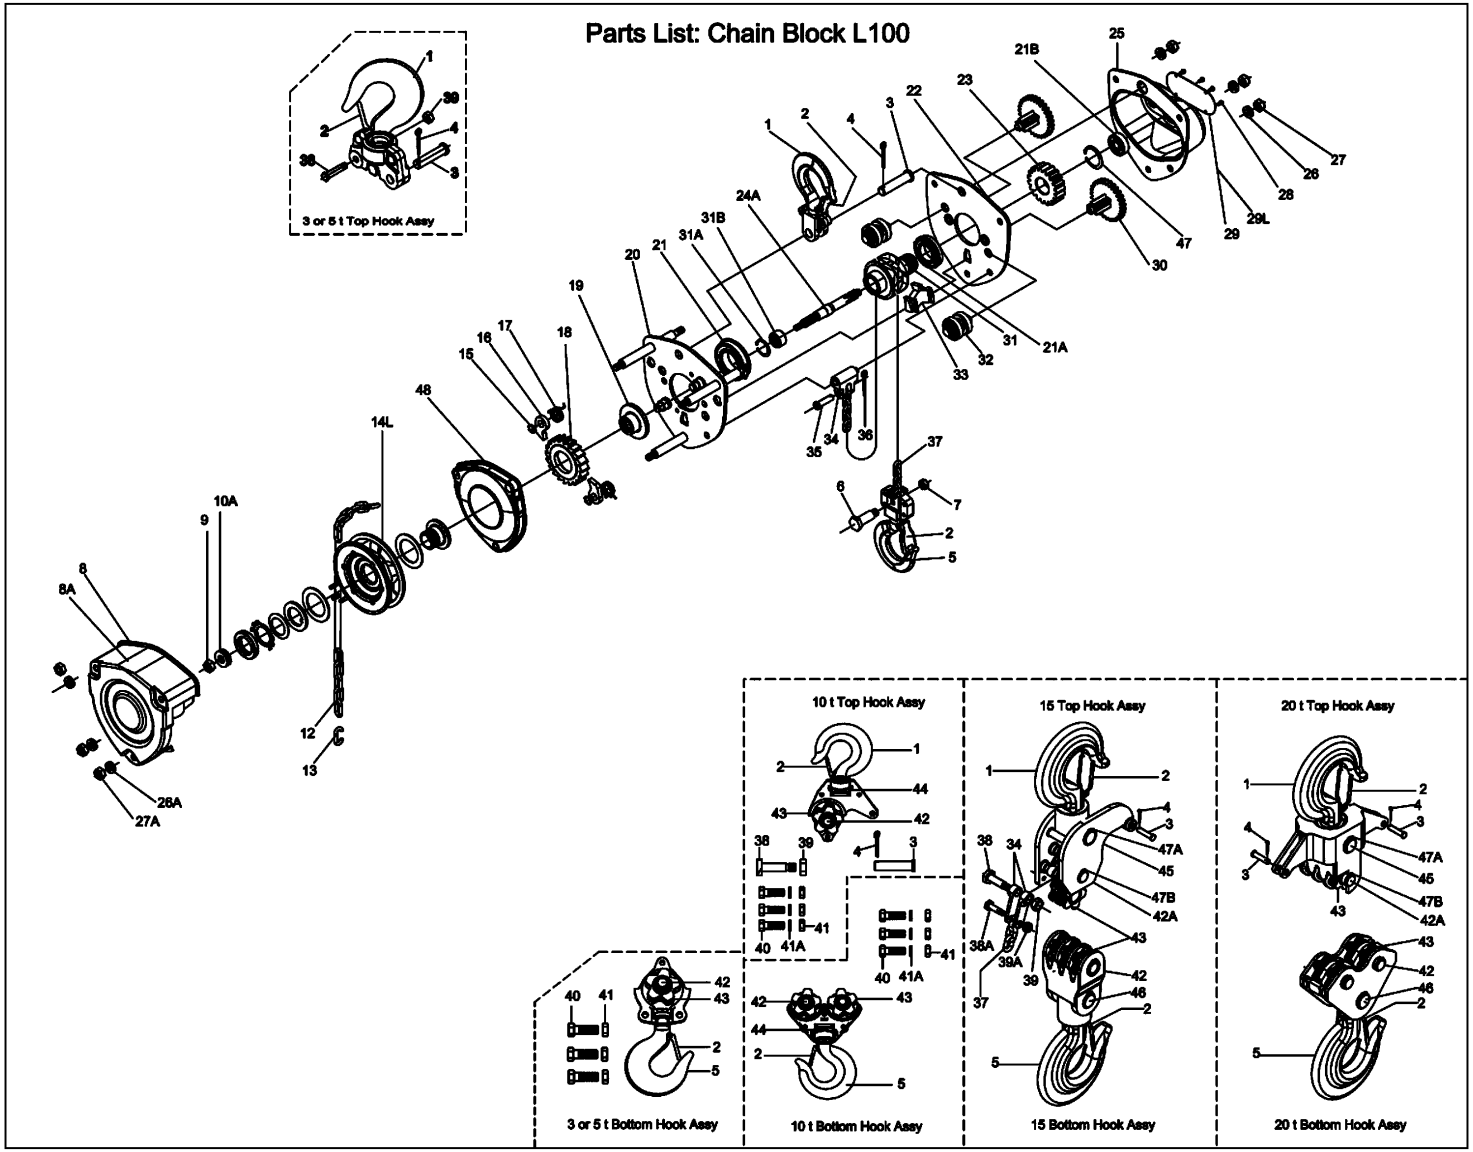


mmToolParts
Big Time Experience. Small Town Service. .com

# JET L-100-500WO-20 | Stock 208120

## Parts List A - L100-500 Chain Hoist

Chain Hoist | Original JET parts reference

| Ref. | Part number | Description | Size | Qty. |
|---|---|---|---|---|
| 1 | JT9-L100-500-1 | Top Hook Assembly | | 1 |
| | | Top Hook | | 1 |
| | | Safety Latch | | 1 |
| | | Double Spring | | 1 |
| | | Socket Head Cap Screw | M5x30 | 1 |
| | | Lock Nut | M5 | 1 |
| | | Top Hook Holder | | 1 |
| | | Rivet | 10x32 mm | 2 |
| 2 | JT9-L100-500-2 | Safety Latch Assembly | | 2 |
| | | Safety Latch | | 2 |
| | | Double Spring | | 2 |
| | | Socket Head Cap Screw | M5x30 | 2 |
| | | Lock Nut | M5 | 2 |
| 3 | JT9-L100-500-3 | Top Hook Shaft | | 1 |
| 4 | JT9-L100-500-4 | Split Pin | 2.5x22 mm | 1 |
| 5 | JT9-L100-500-5 | Bottom Hook Assembly | | 1 |
| | | Bottom Hook | | 1 |
| | | Safety Latch | | 1 |
| | | Double Spring | | 1 |
| | | Socket Head Cap Screw | M5x30 | 1 |
| | | Lock Nut | M5 | 1 |
| | | Idle Shaft | | 1 |
| | | Idle Sheave | | 1 |
| | | Socket Head Cap Screw | M10x30 | 3 |

mmToolParts
Big Time Experience. Small Town Service. .com

# JET L-100-500WO-20 | Stock 208120

## Parts List A - L100-500 Chain Hoist (continued)

Chain Hoist | Original JET parts reference

| Ref. | Part number | Description | Size | Qty. |
|---|---|---|---|---|
| | | Lock Nut | M10 | 3 |
| | | Bottom Hook Holder | | 1 |
| 8 | JT9-L100-500-8G | Hand Wheel Cover Assembly | | 1 |
| | | Hand Wheel Cover | | 1 |
| | | Hand Chain Guide | | 2 |
| 8A | JT9-L100-50-8A | Warning Label | | 1 |
| 9 | JT9-L100-100-9-1 | Wheel Stopper | M8 | 1 |
| 10A | JT1-2787 | Bearings | | 1 |
| 12 | JT9-L100-100-12 | Hand Chain - specify length | 5x25 mm | 1 |
| 13 | JT9-L100-100-13 | Hand Chain Connecting Link | | 1 |
| 14L | JT9-00-500WO-14-1L | Overload Limiter Assembly | | 1 |
| | | Overload Limiter Knob | | 1 |
| | | Brake Disc | | 2 |
| | | Hand Chain Wheel | | 1 |
| | | Bushing in Hand Chain Wheel | | 1 |
| | | Disc Spring Plate | | 1 |
| | | Disc Spring | | 1 |
| | | Disc Spring Stopper | | 1 |
| | | Lock Nut | | 1 |
| 15 | JT9-L100-100-15 | Snap Ring | 10 mm | 2 |
| 16 | JT9-L100-100-16 | Pawl | | 2 |
| 17 | JT9-L100-100-17 | Pawl Spring | | 2 |
| 18 | JT9-L100-500-18-1 | Ratchet Disc Assembly | | 1 |
| | | Ratchet Disc | | 1 |

mmToolParts
Big Time Experience. Small Town Service. .com

# JET L-100-500WO-20 | Stock 208120

## Parts List A - L100-500 Chain Hoist (continued)

Chain Hoist | Original JET parts reference

| Ref. | Part number | Description | Size | Qty. |
|---|---|---|---|---|
| | | Ratchet Bushing | | 1 |
| 19 | JT9-L100-500-19-1 | Disc Hub | | 1 |
| 20 | JT9-L100-500-20-1 | Wheel Side Plate Assembly | | 1 |
| | | Wheel Side Plate | | 1 |
| | | Stay Bolt | | 3 |
| | | Pawl Pin | | 2 |
| | | Brake Cover | | 1 |
| | | Double Seal Ball Bearing | d35xD62x14 mm | 1 |
| 21 | JT9-L100-500-21 | Double Seal Ball Bearing | d35xD62x14 mm | 1 |
| 21A | JT9-L100-500-21 | Double Seal Ball Bearing | d35xD62x14 mm | 1 |
| 21B | JT9-L100-500-21B | Double Seal Ball Bearing | d12xD32x10 mm | 1 |
| 22 | JT9-L100-500-22 | Gear Side Plate Assembly | | 1 |
| | | Gear Side Plate | | 1 |
| | | Bushing | | 2 |
| | | Double Seal Ball Bearing | d35xD62x14 mm | 1 |
| 23 | JT9-L100-500-23 | Load Gear | | 1 |
| 24A | JT1-2796 | Drive Shaft | | 1 |
| 25 | JT9-L100-500-25G | Gear Case Assembly | | 1 |
| | | Gear Case | | 1 |
| | | Bushing | | 2 |
| | | Double Seal Bearing | d12xD32x10 mm | 1 |
| 26 | JT9-F002118 | Lock Washer (Black Oxide) | 12mm | 3 |
| 26A | JT9-F002114 | Lock Washer (Black Oxide) | 8mm | 3 |
| 27 | JT1-2998 | Acorn Nut (Black Oxide) | M12 | 3 |

mmToolParts
Big Time Experience. Small Town Service. .com

# JET L-100-500WO-20 | Stock 208120

## Parts List A - L100-500 Chain Hoist (continued)

Chain Hoist | Original JET parts reference

| Ref. | Part number | Description | Size | Qty. |
|---|---|---|---|---|
| 27A | JT9-F001754 | Acorn Nut (Black Oxide) | M8 | 3 |
| 28 | JT9-L100-100-28 | Rivet | 3x6 mm | 4 |
| 29 | JT1-2999 | Name Plate, L100-500 with overload | | 1 |
| 30 | JT1-3000 | Spur Gear Assembly | | 2 |
| | | Spur Gear | | 2 |
| | | Pinion Gear | | 2 |
| 31 | JT9-L100-500-31 | Load Sheave | | 1 |
| 31A | JT9-L100-500-31A | C-Clip | 24 mm | 1 |
| 31B | JT9-L100-500-31B | Needle Bearing HK1715 | 17x42x15 mm | 1 |
| 32 | JT9-L100-500-32 | Guide Roller | | 2 |
| 33 | JT9-L100-500-33 | Stripper | | 1 |
| 34 | JT9-L100-500-34 | Chain Anchor Plate | | 1 |
| 35 | JT9-L100-500-35 | Chain Anchor Pin | | 1 |
| 36 | JT9-L100-500-36 | Split Pin | 2x18 mm | 1 |
| 37 | JT9-L100-500-37 | Load Chain - specify length | 9x27mm | 1 |
| 38 | JT9-L100-500-38 | Top Hook Pin | | 1 |
| 39 | JT9-F001755 | Lock Nut | M10 | 1 |
| 40 | JT9-F005404 | Socket Head Cap Screw. | M10x30 | 3 |
| 41 | JT9-F001755 | Lock Nut | M10 | 3 |
| 42 | JT9-L100-500-42 | Idle Shaft | | 1 |
| 43 | JT9-L100-500-43 | Idle Sheave | | 1 |
| 47 | JT9-L100-500-47 | Snap Ring | 32mm | 1 |
| 48 | JT9-L100-500-48G | Dust Cover | | 1 |
| | JT9-L100-WT | Warning Tag (not shown) | | 1 |

Note: When ordering replacement chain (Index #12, #37), specify length.

Where alternatives are listed, match the model, capacity, lift length, voltage, phase and hook style. Unnumbered component rows belong to the preceding assembly.

mmToolParts
Big Time Experience. Small Town Service. .com