ISANTA SM MEMBER

CE

PalletPro™ 100XP

4” Coil Nailer



Parts Reference Guide

Guía de referencia de piezas

Pièces Guide de référence

Schematic Drawings Inside
Plano esquemático en el interior
Schéma intérieur

Repair Kit
YKO777

SENCO®

Senco Brands, Inc.
4270 Ivy Pointe Blvd.
Cincinnati, OH 45245
1-800-543-4596
www.senco.com

NFG05L Feb. 18, 2014, Replaces 12/11/2013

Questions? Comments? call SENCO’s toll-free Action-Line: 1-800-543-4596
(North and South America Only) or email: toolprof@senco.com


¿Tiene preguntas? ¿Comentarios? Llame a la línea gratuita de acción de Senco: 1-800-543-4596
(sólo para América del Norte y del Sur) o envíe un correo electrónico: toolprof@senco.com

Des questions? Des commentaires? Communiquez avec le service d'assistance sans frais de Senco: 1-800-543-4596
(Amérique du Nord et Amérique du Sud seulement) ou envoyer un courriel: toolprof@senco.com

© 2013 by Senco Brands, Inc.

SENCO®


Tool #	Model
# de la herramienta	Modelo
No de l'outil	Modèle
5L0001N	CONTACT ACTUATION
5L2001N	CONTACT ACTUATION

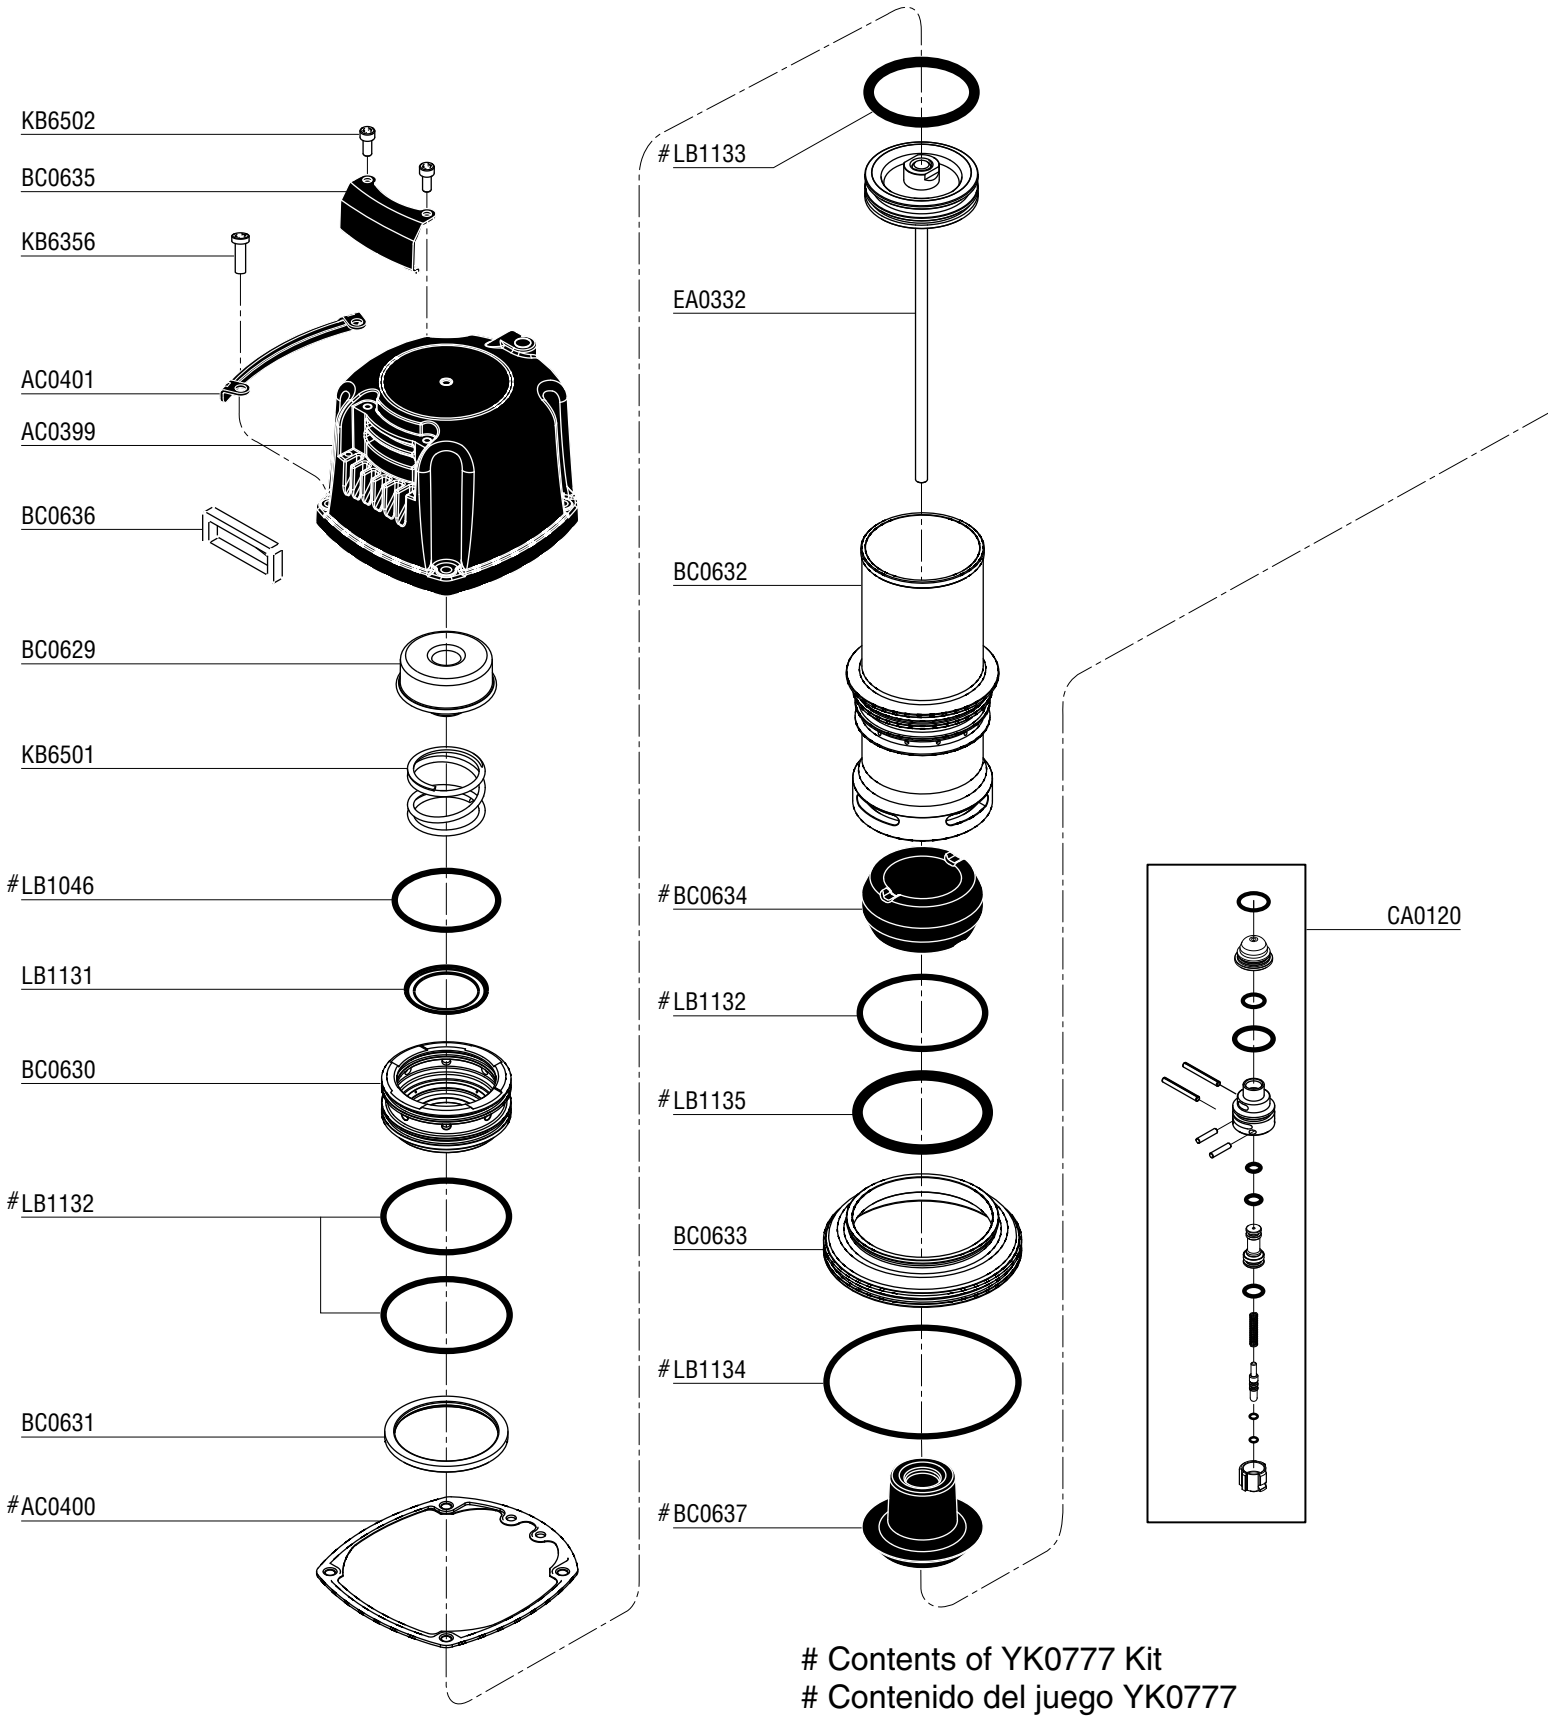

Contents of YK0777 Kit
Contenido del juego YK0777
Contenu de la trousse YK0777

4” Coil Nailer

PalletPro™ 100XP

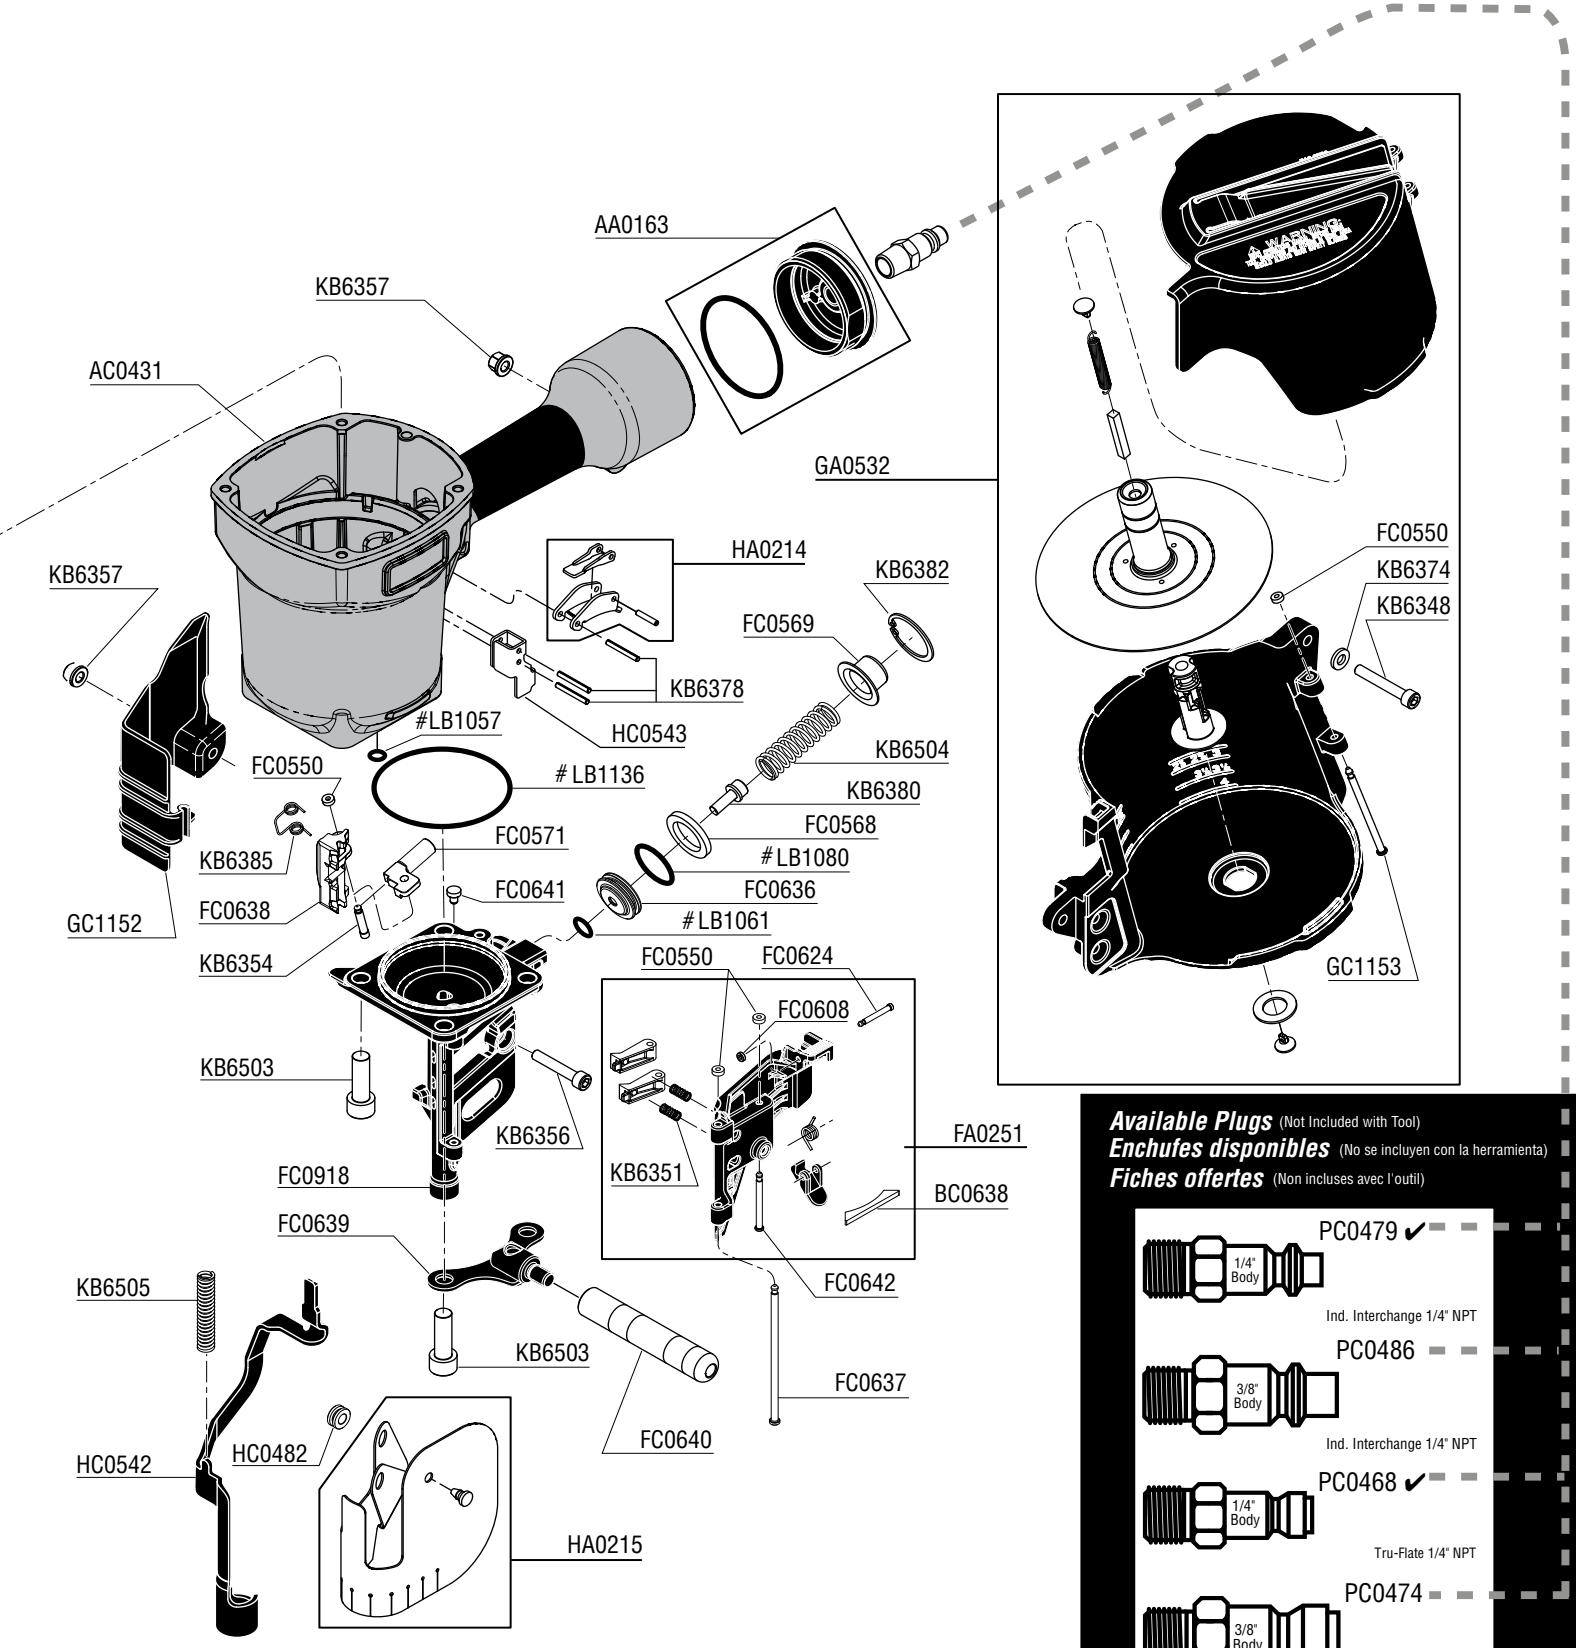

Available Plugs (Not Included with Tool)
Enchufes disponibles (No se incluyen con la herramienta)
Fiches offertes (Non incluses avec l’outil)

✔ *Recommended Plugs*
Plugs shown smaller than actual size

✔ *Enchufes recomendados*
Los enchufes se muestran más pequeños del tamaño real

✔ *Fiches recommandées*
Les fiches illustrées sont plus petites que les formats réels

SENCO®

4” Coil Nailer

PalletPro™ 100XP

REPLACEMENT PARTS LIST • LISTA DE PARTES DE REPUESTO • LISTE DE PIÈCES DE RECHANGE

PART NO.	DESCRIPTION	DESCRIPCIÓN	DÉSIGNATION
AA0163	CAP	TAPA	BOUCHON
AC0399	CAP	TAPA	BOUCHON
AC0400	SEAL, CYLINDER CAP	SELLO	JOINT
AC0401	COVER	PLACA	BOUCLIER ANTIABRASIF
AC0431	MAIN BODY	CARCASA	CORPS
BC0629	SEAL	SELLO	JOINT
BC0630	VALVE	VÁLVULA	VALVE
BC0631	CYLINDER COLLAR	CILINDRO	CYLINDRE
BC0632	CYLINDER	CILINDRO	CYLINDRE
BC0633	SPACER, CYLINDER	SEPARADOR	ENRETOISE
BC0634	STOP, PISTON	TOPPE	ARRÊT
BC0635	DEFLECTOR	DESVIADOR	DÉFLECTEUR
BC0636	MUFFLER	SILENCIADOR	SILENCIEUX
BC0637	STOP, PISTON	TOPPE	ARRÊT
BC0638	SEAL	SELLO	JOINT
CA0120	VALVE ASSEMBLY	ASAMBLE DE VALVULA	VALVE D'ASSEMBLÉE
EA0332	DRIVER ASSY	PERCUSOR	COUTEAU
FA0251	DOOR	PUERTA	PORTE
FC0550	RETAINER	JUNTA TÓRICA	RETENUE
FC0568	STOP	TOPPE	ARRÊT
FC0569	CAP	TAPA	BOUCHON
FC0571	PISTON, FEED	PISTON	PISTON
FC0608	RETAINER	JUNTA TÓRICA	RETENUE
FC0624	PIN	PASADOR	GOUPILLE
FC0918	GUIDE BODY	PLACA DE NARIZ	FRONT
FC0636	PISTON, FEED	PISTON	PISTON
FC0637	PIN	PASADOR	GOUPILLE
FC0638	FEED PAWL	ALIMENTADOR	POUSSOIR
FC0639	PLATE	PLACA	PLAQUE
FC0640	HANDLE	MANIJA	POIGNÉE
FC0641	RETAINER	JUNTA TÓRICA	RETENUE
FC0642	PIN	PASADOR	GOUPILLE
GA0532	MAGAZINE ASY	CARGADOR	MAGASIN
GC1152	COVER	CUBIERTA	COUVERCLE
GC1153	PIN	PASADOR	GOUPILLE
HA0214	TRIGGER ASSEMBLY	ASAMBLE DE GATILLO	GÂCHETTE D 'ASSEMBLÉE
HA0215	COVER	CUBIERTA	COUVERCLE
HC0482	RING	ANILLO	ANNEAU
HC0542	SAFETY ELEMENT	SEGURO	PALPEUR DE SÉCURITÉ
HC0543	SAFETY ELEMENT	SEGURO	PALPEUR DE SÉCURITÉ
KB6348	SCREW	TORNILLO	VIS
KB6351	SPRING	RESORTE	RESSORT
KB6354	PIN	PASADOR	GOUPILLE
KB6356	SCREW	TORNILLO	VIS
KB6357	NUT	TUERCA	ÉCROU
KB6374	WASHER	ARANDELA	RONDELLE
KB6378	PIN	PASADOR	GOUPILLE
KB6380	SCREW	TORNILLO	VIS
KB6382	RING	ANILLO	ANNEAU
KB6385	SPRING	RESORTE	RESSORT
KB6501	SPRING	RESORTE	RESSORT
KB6502	SCREW	TORNILLO	VIS
KB6503	SCREW	TORNILLO	VIS
KB6504	SPRING	RESORTE	RESSORT
KB6505	SPRING	RESORTE	RESSORT
LB1046	SEAL	SELLO	JOINT
LB1057	SEAL	SELLO	JOINT
LB1061	SEAL	SELLO	JOINT
LB1080	SEAL	SELLO	JOINT
LB1131	SEAL	SELLO	JOINT
LB1132	SEAL	SELLO	JOINT
LB1133	SEAL	SELLO	JOINT
LB1134	SEAL	SELLO	JOINT
LB1135	SEAL	SELLO	JOINT
LB1136	SEAL	SELLO	JOINT