SENCO®

SC2

ISANTA MEMBE R


Parts Reference Guide

CE

Repair Kits

YK0370

YK0371

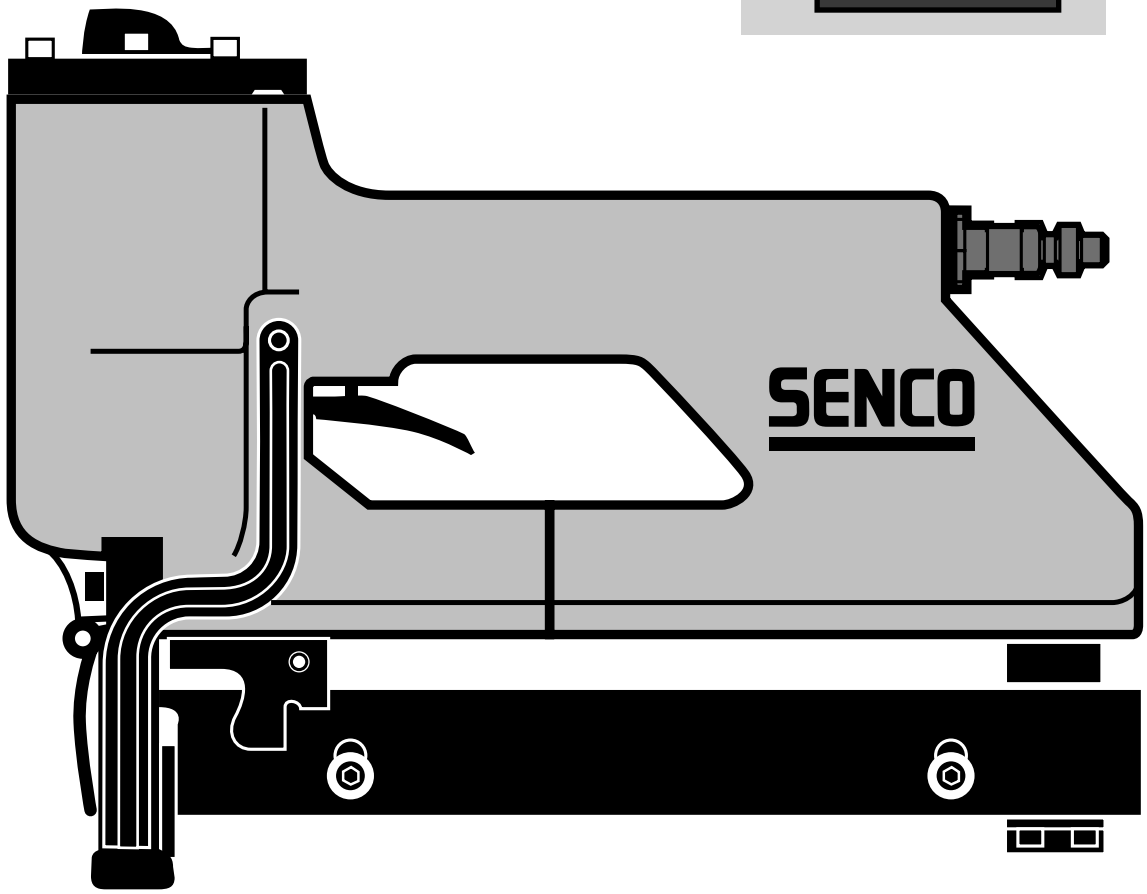

*** Schematic Drawings inside**

NFG047 Revised January 26, 2005 (Replaces 6/30/04) ©1992, 2005 by SENCO Products, Inc. Cincinnati, Ohio 45244—U.S.A.

Senco Products, Inc.
8485 Broadwell Rd.
Cincinnati, OH 45244

Visit our website: www.senco.com


Questions? Comments? call SENCO's toll-free
Action-line:1-800-543-4596
or e-mail: toolprof@senco.com

SC2


SENCO

Model
470001N

* Does Not Include O-rings
* No incluye sellos de gomas
* Ohne Dichtringe
* Joints exclus

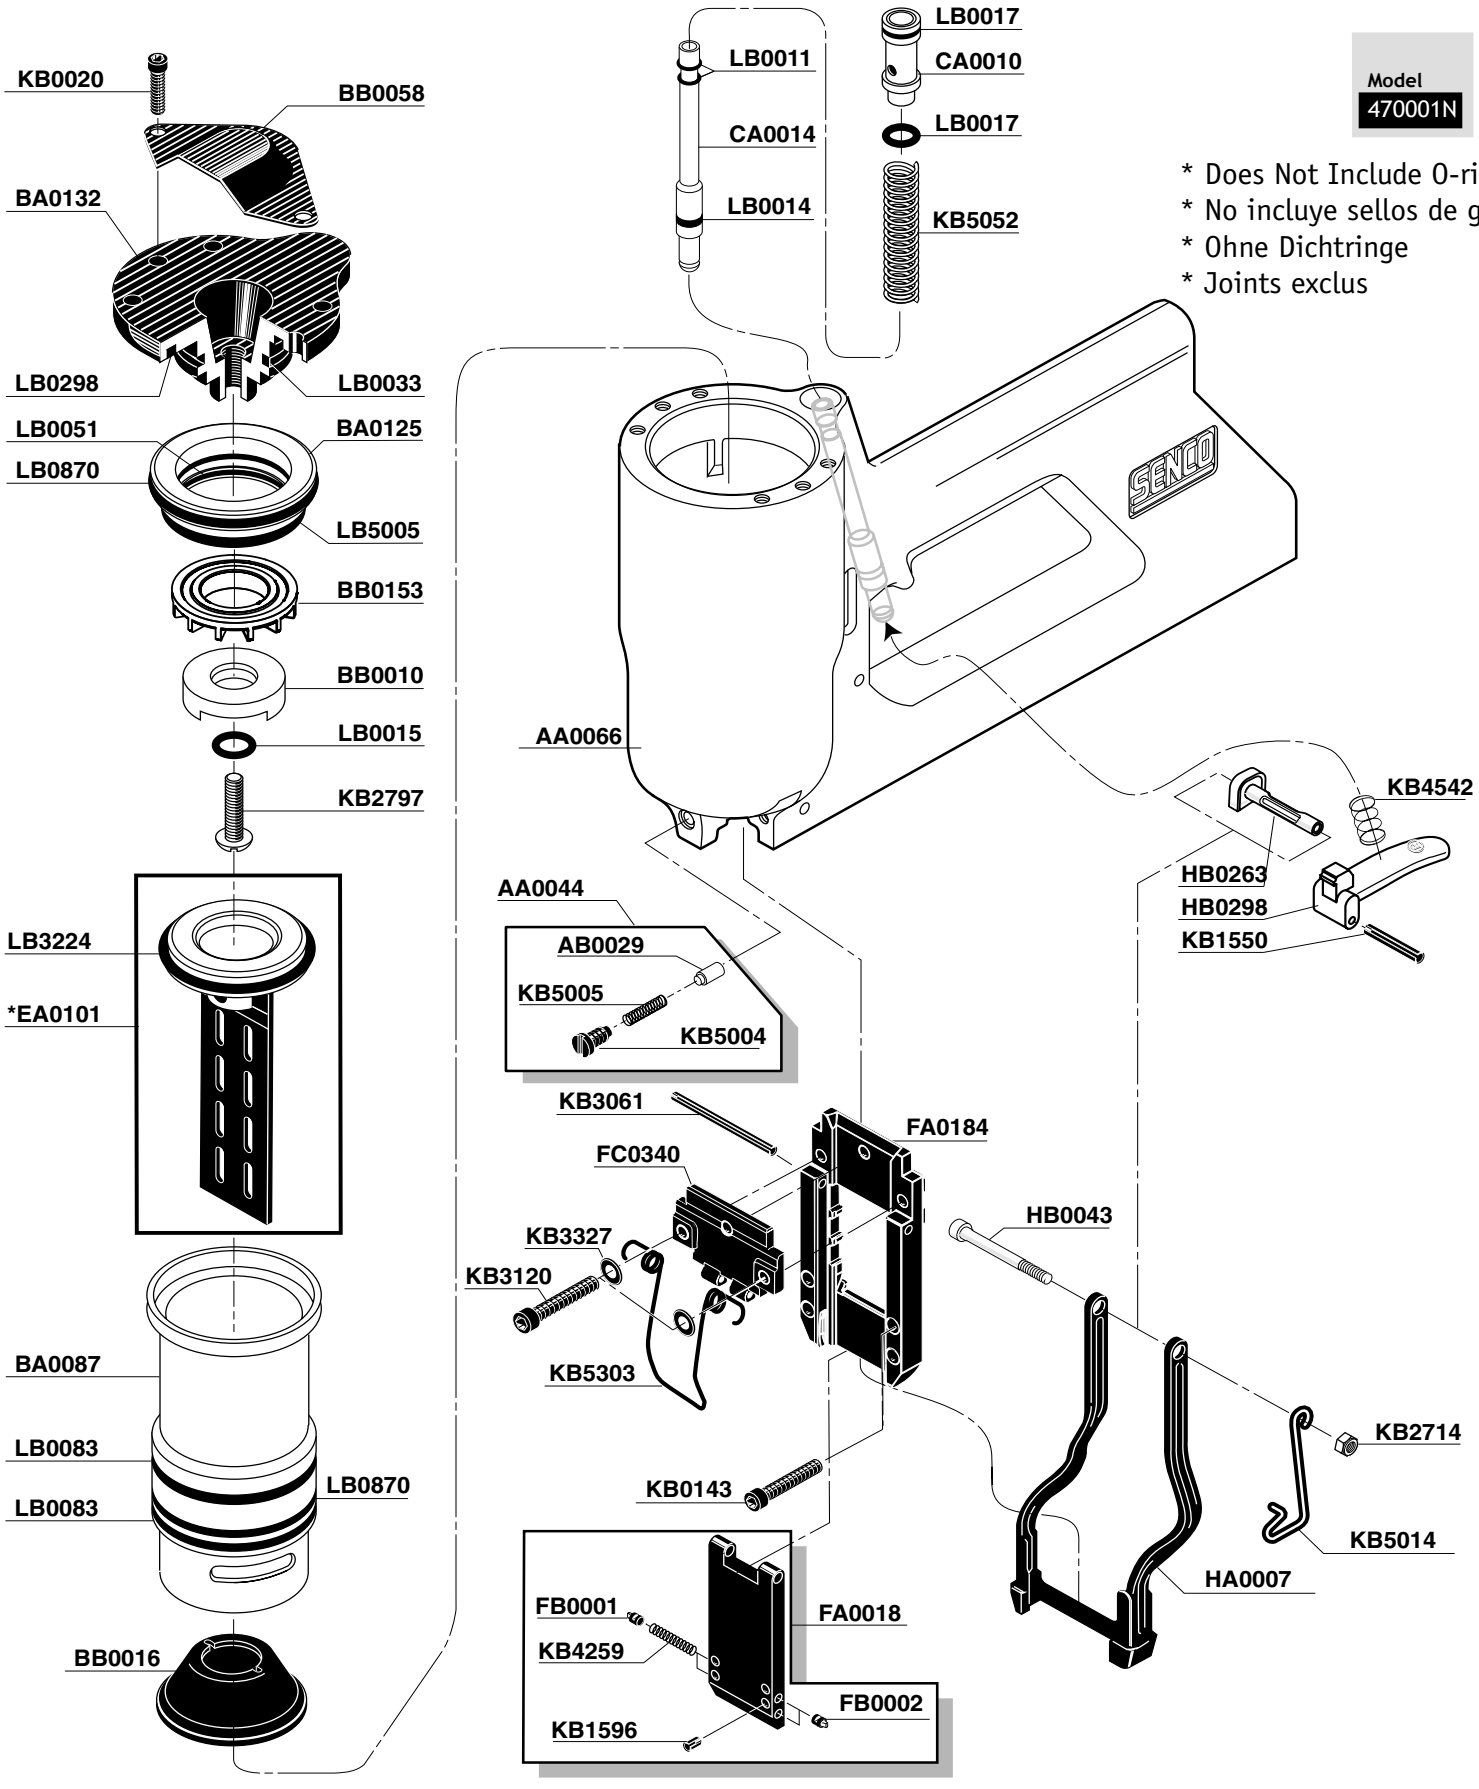

SC2

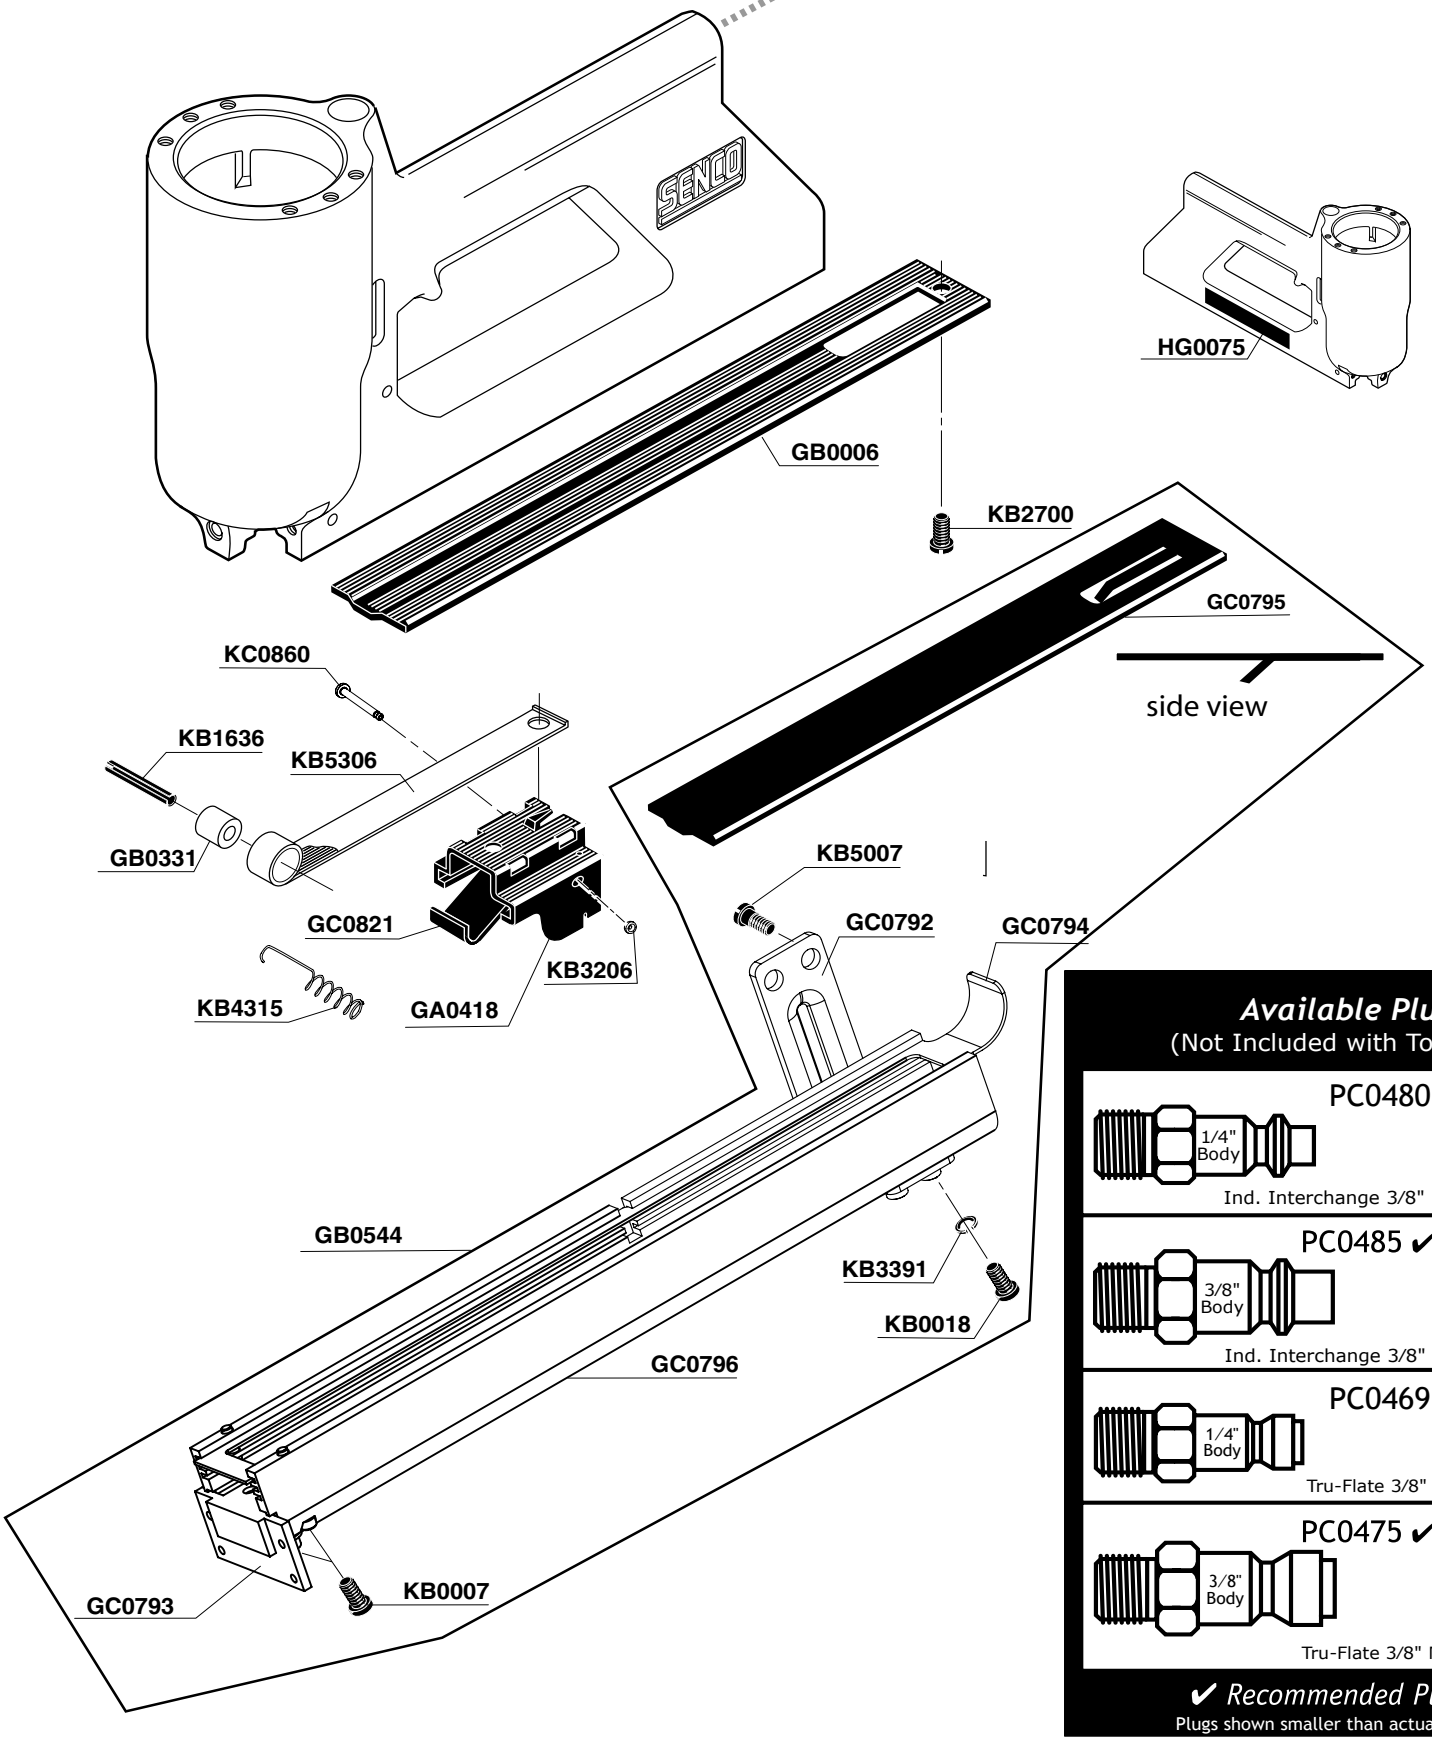

Available Plugs
(Not Included with Tool)

PC0480

Ind. Interchange 3/8" NPT

PC0485 ✔

Ind. Interchange 3/8" NPT

PC0469

Tru-Flate 3/8" NPT

PC0475 ✔

Tru-Flate 3/8" NPT

✔ *Recommended Plugs*
Plugs shown smaller than actual size

NFG047 Revised January 26, 2005 (Replaces 6/30/04) ©1992, 2005 by SENCO Products, Inc. Cincinnati, Ohio 45244—U.S.A.

SC2

REPLACEMENT PARTS LIST•LISTA DE PARTES DE REPUESTO•ERSATSTEILE-LISTE•LISTE DE PIÈCES DE RECHANGE

PART NO.	DESCRIPTION	DESCRIPCIÓN	BESCHREIBUNG	DÉSIGNATION
AA0044	DETENT ASSY.	ASAMBLE DE FRENO	BREMSE-ZUSAMMENBAU	FREIN D 'ASSEMBLÉE
AA0066	MAIN BODY ASSY.	ASAMBLE DE CARCASA	GEHÄUSE-ZUSAMMENBAU	CORPS D 'ASSEMBLÉE
AB0029	DETENT	FRENO	BREMSE	FREIN
BA0087	CYLINDER ASSY.	ASAMBLE DE CILINDRO	ZYLINDER-ZUSAMMENBAU	CYLINDRE D 'ASSEMBLÉE
BA0125	VALVE ASSY.	ASAMBLE DE VÁLVULA	VENTIL-ZUSAMMENBAU	VALVE D 'ASSEMBLÉE
BA0132	CAP ASSY.	ASAMBLE DE TAPA	KAPPE-ZUSAMMENBAU	BOUCHON D 'ASSEMBLÉE
BB0010	SPACER	SEPARADOR	DISTANZSTÜCK	ENTRETOISE
BB0016	STOP	TOPE	PUFFER	ARRÊT
BB0058	DEFLECTOR	DESVIADOR	ABWEISER	DÉFLECTEUR
BB0153	VALVE	VÁLVULA	VENTIL	VALVE
CA0010	HOUSING ASSY.	ASAMBLE DE ALOJAMIENTO	GEHÄUSE-ZUSAMMENBAU	CORPS D 'ASSEMBLÉE
CA0014	CORE ASSY.	ASAMBLE DE VÁSTAGO	VENTILSTIFT-ZUSAMMENBAU	NOYAU D 'ASSEMBLÉE
EA0101	PISTON/DRIVER ASSY.	ASAMBLE DE PISYON Y	KOLBEN/TREIBER-	PISTON/COUTEAU
FA0018	PLATE	PLACA	PLATTE	PLAQUE
FA0184	GUIDE BODY	PLACA DE NARIZ	NAGELFÜHRUNG	FRONT
FB0001	PIN	PASADOR	STIFT	GOUPILLE
FB0002	PIN	PASADOR	STIFT	GOUPILLE
FC0340	PLATE	PLACA	PLATTE	PLAQUE
GA0418	FEEDER SHOE	ALIMENTADOR	NAGELSCHIEBER	POUSSOIR
GB0006	GUIDE	GUÍA	FÜHRUNG	GUIDE
GB0331	ROLLER	RODILLO	ROLLE	GALET
GB0544	MAGAZINE ASSEMBLY	ASAMBLE DE CARGADOR	MAGAZIN-ZUSAMMENBAU	MAGASIN D'ASSEMBLÉE
GC0792	BRACKET	SOPORTE	HALTERUNG	SUPPORT DE FIXATION
GC0793	PLATE	PLACA	PLATTE	PLAQUE
GC0794	COVER	CUBIERTA	ABDECKUNG	COUVERCLE
GC0795	RETAINER	JUNTA TÓRICA	SICHERUNGSRING	RETENUE
GC0796	MAGAZINE	CARGADOR	MAGAZIN	MAGASIN
GC0821	LEVER	PALANCA	HEBEL	LEVIER
HA0007	SAFETY ELEMENT	SEGURO	AUSLÖSESICHERUNG	PALPEUR DE SÉCURITÉ
HB0043	SCREW	TORNILLO	SCHRAUBE	VIS
HB0263	BUSHING	CASQUILLO	HÜLSE	DOUILLE
HB0298	TRIGGER	GATILLO	AUSLÖSER	GACHETTE
HG0075	LABEL	ETIQUETA	AUFKLEBER	ETIQUETTE
KB0007	SCREW	TORNILLO	SCHRAUBE	VIS
KB0018	SCREW	TORNILLO	SCHRAUBE	VIS
KB0020	SCREW	TORNILLO	SCHRAUBE	VIS
KB0143	SCREW	TORNILLO	SCHRAUBE	VIS
KB1550	PIN	PASADOR	STIFT	GOUPILLE
KB1596	PIN	PASADOR	STIFT	GOUPILLE
KB1636	PIN	PASADOR	STIFT	GOUPILLE
KB2700	SCREW	TORNILLO	SCHRAUBE	VIS
KB2714	NUT	TUERCA	MUTTER	ÉCROU
KB2797	SCREW	TORNILLO	SCHRAUBE	VIS
KB3061	PIN	PASADOR	STIFT	GOUPILLE
KB3120	SCREW	TORNILLO	SCHRAUBE	VIS
KB3206	RETAINER	JUNTA TÓRICA	SICHERUNGSRING	RETENUE
KB3327	WASHER	ARANDELA	SCHEIBE	RONDELLE
KB3391	WASHER	ARANDELA	SCHEIBE	RONDELLE
KB4259	SPRING	MUELLE	FEDER	RESSORT
KB4315	SPRING	MUELLE	FEDER	RESSORT
KB4542	SPRING	MUELLE	FEDER	RESSORT
KB5004	SCREW	TORNILLO	SCHRAUBE	VIS
KB5005	SPRING	MUELLE	FEDER	RESSORT
KB5007	SCREW	TORNILLO	SCHRAUBE	VIS
KB5014	SPRING	MUELLE	FEDER	RESSORT
KB5052	SPRING	MUELLE	FEDER	RESSORT
KB5303	SPRING	MUELLE	FEDER	RESSORT
KB5306	SPRING	MUELLE	FEDER	RESSORT
KC0860	PIN	PASADOR	STIFT	GOUPILLE
LB0011	SEAL	SELLO	DICHTUNG	JOINT
LB0014	SEAL	SELLO	DICHTUNG	JOINT
LB0015	SEAL	SELLO	DICHTUNG	JOINT
LB0017	SEAL	SELLO	DICHTUNG	JOINT
LB0033	SEAL	SELLO	DICHTUNG	JOINT
LB0051	SEAL	SELLO	DICHTUNG	JOINT
LB0083	SEAL	SELLO	DICHTUNG	JOINT
LB0298	SEAL	SELLO	DICHTUNG	JOINT
LB0870	SEAL	SELLO	DICHTUNG	JOINT
LB3224	SEAL	SELLO	DICHTUNG	JOINT
LB5005	SEAL	SELLO	DICHTUNG	JOINT