
# JET TPFA-Y | Stock 350195

## Diagram A - Table powerfeed

Exploded diagrams and replacement parts

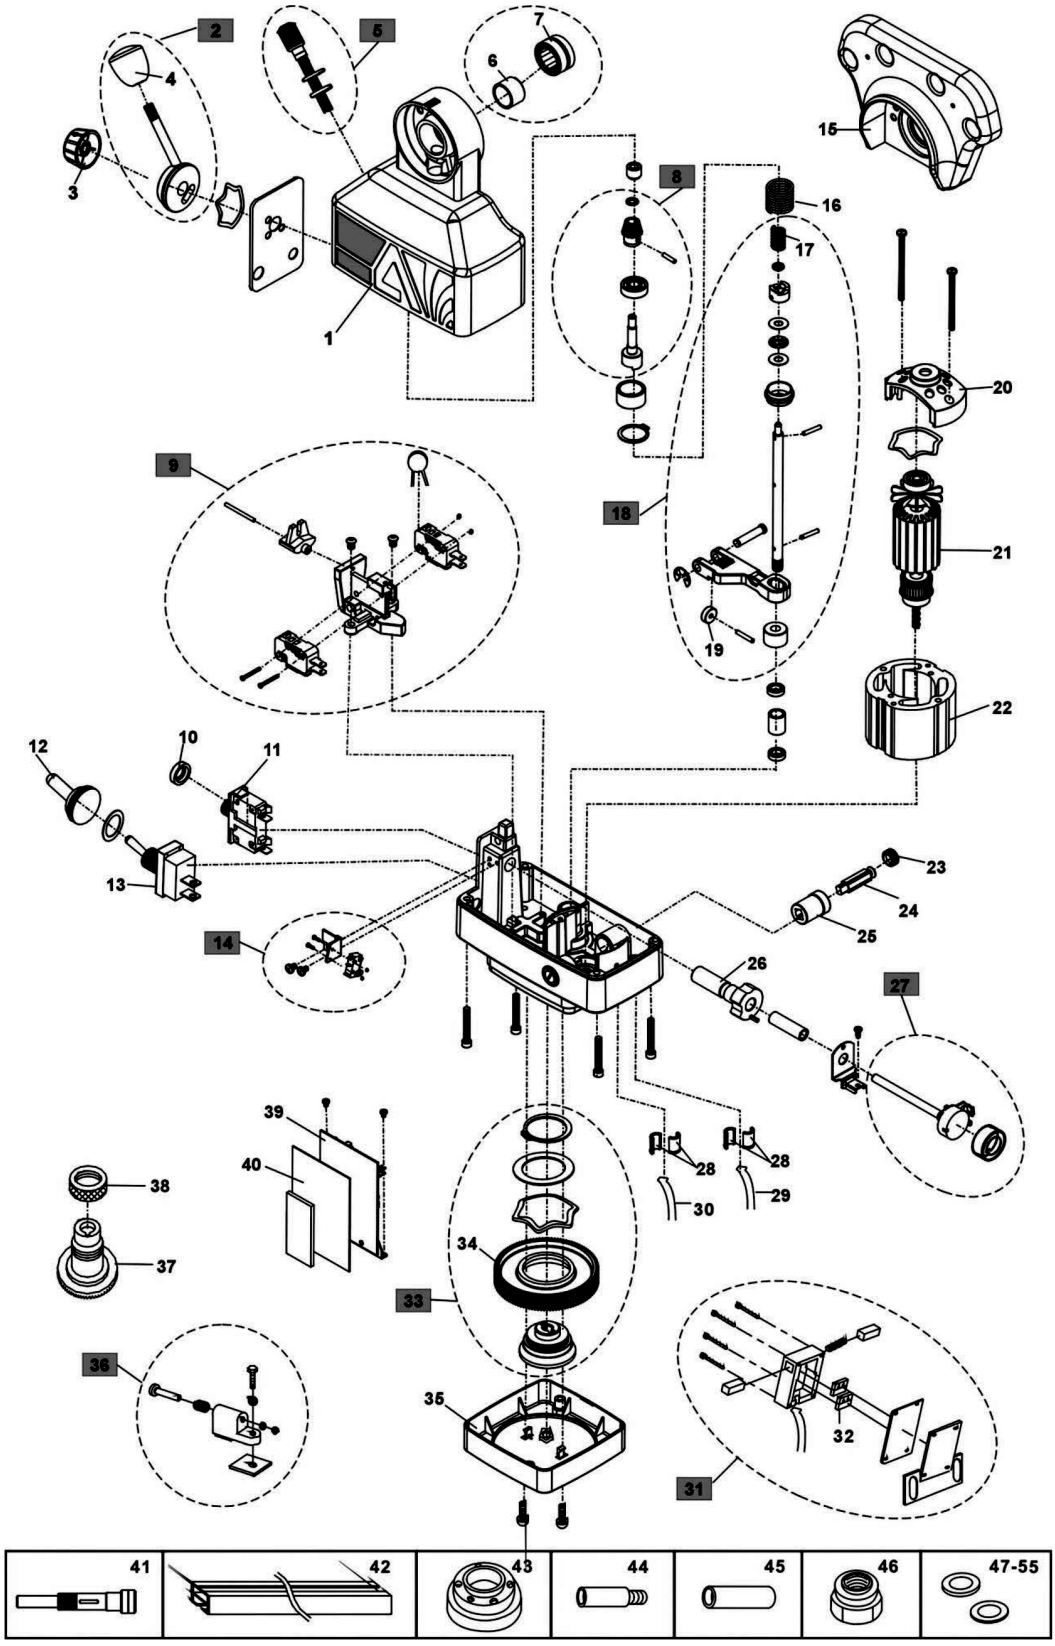


mmToolParts
Big Time Experience. Small Town Service. .com

# JET TPFA-Y | Stock 350195

## Parts List A - Table powerfeed

Exploded diagrams and replacement parts

| Ref. | Part number | Description | Size | Qty. |
|---|---|---|---|---|
| 1 | TPFA2-PT000-11 | Top Housing | TPFA-X | 1 |
| 2 | TPFA2-P01810-11 | Control Handle Assembly | 180° | 1 |
| | P01816-11 | Control Handle Assembly (TPFA-Z only) | 90° | 1 |
| 3 | TPFA2-P01811-00 | Speed Control Knob/Black | ø35.5 x ø29.9 x 19mm | 1 |
| 4 | E0913-00 | Handle Knob Assembly/Black | ø31.8 x 33mm | 1 |
| 5 | C0509 | Anti-Vandal switch | | 1 |
| 6 | A0101B | Inner Ring | ø24 x 16mm | 1 |
| 7 | A0101C | Needle Bearing | | 1 |
| 8 | TPFA-PT200 | SP Drive Gear Assembly | 780 in/lb | 1 |
| 9 | TPFA2-C0501-6V | Direction Switch Assembly | | 1 |
| 10 | A0102-01 | Cap of Circuit Breaker | | 1 |
| 11 | TPFA2-A0102 | Circuit Breaker | | 1 |
| 12 | E0907-01 | Cap of ON/OFF Switch | R13-25A | 1 |
| 13 | TPFA2-E0907 | ON/OFF Switch | | 1 |
| 14 | C0508 | Brake Switch Assembly | 6A 125VAC/250AC | 1 |
| 15 | PZ001-13 | Adaptor | | 1 |
| | PZ001-13BH | Adaptor (black hammer color) | | 1 |
| 16 | A0112 | Spring for Top Housing | | 1 |
| 17 | A0301-05 | Spring for clutch | | 1 |

mmToolParts
Big Time Experience. Small Town Service. .com

# JET TPFA-Y | Stock 350195

## Parts List A - Table powerfeed (continued)

Exploded diagrams and replacement parts

| Ref. | Part number | Description | Size | Qty. |
|---|---|---|---|---|
| 18 | PB300 | Forklift Assembly | | 1 |
| 19 | P01028 | Forklift Ring | | 2 |
| 20 | P01082 | Armature Mount | | 1 |
| 21 | P01907 | SP Armature Assembly | 780 in/lb | 1 |
| 22 | TPFA2-E0926V | Motor Field | | 1 |
| 23 | TPFA2-E0906 | Carbon Brush Cap | | 2 |
| 24 | TPFA2-E0905 | Brush | | 2 |
| 25 | TPFA2-P01004 | Carbon Brush Holder | | 2 |
| 26 | TPFA2-E0902V | 250 Cam Assembly | | 1 |
| 27 | TPFA2-P01905 | Potentiometer Assembly | 10K | 1 |
| 28 | E0917 | Strain Relief | | 1 |
| 29 | TPFA2-E24002 | Control Cord | 0.75 x 4C x 1.7M | 1 |
| 30 | E23017 | Power Cord | 0.75 x 3C x 2.7M | 1 |
| 31 | P01910-AL | Limit Switch Assembly | | 1 |
| 32 | TPFA2-F1104 | Micro Switch | | 2 |
| 33 | PB800 | Plastic Gear Assembly | | 1 |
| 34 | TPFA2-PB801 | Plastic Gear | | 1 |
| 35 | P01809LS-00 | Bottom Cover /Black | | 1 |
| 36 | P01916-1 | X axis Travel Stop Set | | 1 |
| | P01916 | Y/Z axis Travel Stop Set | | 1 |

mmToolParts
Big Time Experience. Small Town Service. .com

# JET TPFA-Y | Stock 350195

## Parts List A - Table powerfeed (continued)

Exploded diagrams and replacement parts

| Ref. | Part number | Description | Size | Qty. |
|---|---|---|---|---|
| 37 | P01017 | Bevel Gear (X/Y) | 5/8” x 1/8” (780 in /lb) | 1 |
| | P01032 | Bevel Gear (Z) | 22 x 4mm. | 1 |
| 38 | TPFA2-A0100-01 | Dial Lock Nut | 1/4" x 20W | 1 |
| 39 | TPFA2-PB400 | Circuit Board Assembly | | 1 |
| 40 | TPFA2-E0918V | Circuit Board Insulator | | 1 |
| 41 | P01922 | Extension Shaft | 16T | 1 |
| 42 | A0301-15A | T-Way Track | 59.5 cm | 1 |
| 43 | PFB-01A | Steel Stand | 29.6 mm | 1 |
| 44 | PFB-16 | Extension Shaft | 60 mm | 1 |
| 45 | PFB-03 | Extension Shaft Ring | 40 mm | 1 |
| 46 | PFR-76A | Nut | 1/2”-20 x 14.3mm | 1 |
| 47 | TPFA2-A0100-02A | Washer (Optional /not shown) | 0.2 x ø34 x Ø45mm | N |
| 48 | TPFA2-A0100-02B | Washer (Optional /not shown) | 0.4 x ø34 x Ø45mm | N |
| 49 | TPFA2-A0100-02C | Washer (Optional /not shown) | 0.6 x ø34 x Ø45mm | N |
| 50 | TPFA2-A0100-02D | Washer (Optional /not shown) | 0.1 x ø34 x Ø45mm | N |
| 51 | TPFA2-A0100-04A | Washer (Optional /not shown) | 0.2 x ø16 x Ø23.5mm | N |
| 52 | TPFA2-A0100-04B | Washer (Optional /not shown) | 0.4 x ø16 x Ø23.5mm | N |
| 53 | TPFA2-A0100-04C | Washer (Optional /not shown) | 0.6 x ø16 x Ø23.5mm | N |
| 54 | TPFA2-A0100-04E | Washer (Optional /not shown) | 0.1 x ø16 x Ø23.5mm | N |
| 55 | TPFA2-A0100-07A | Washer (Optional /not shown) | 2 x ø16 x Ø25.4mm | N |

Shared X/Y/Z parts reference. Variant-specific and optional components are identified in the descriptions; select parts for the installed axis. N denotes an optional quantity as printed by JET.

mmToolParts
Big Time Experience. Small Town Service. .com