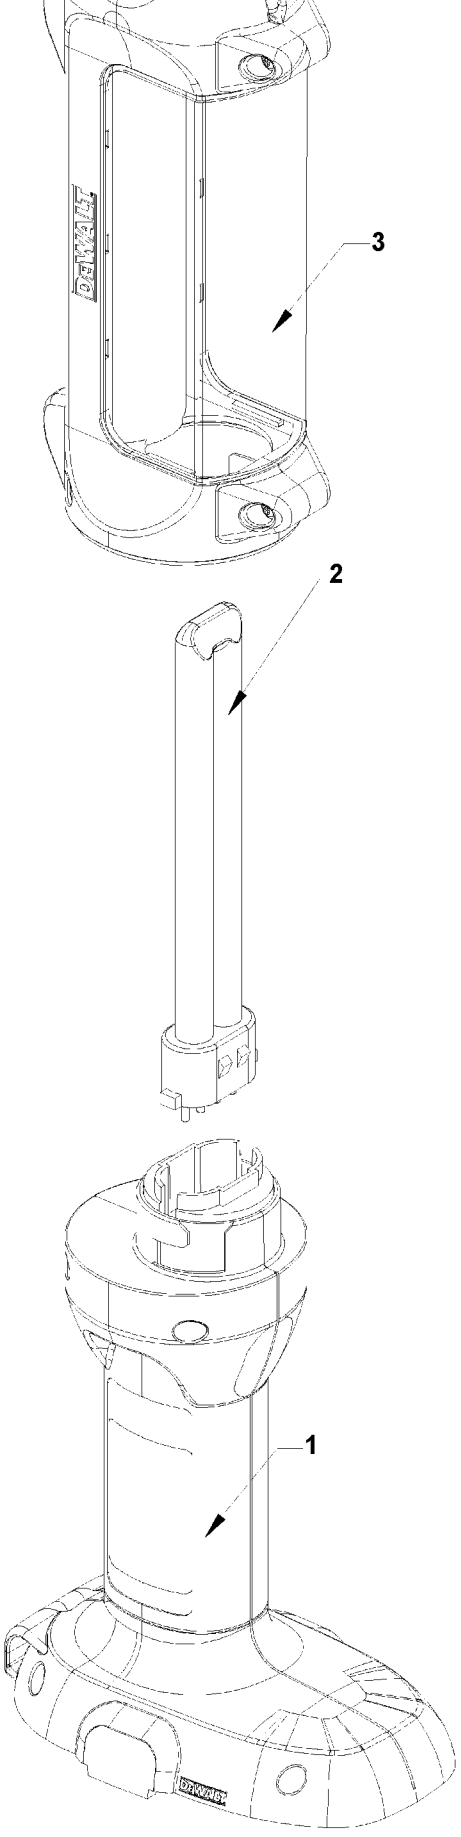
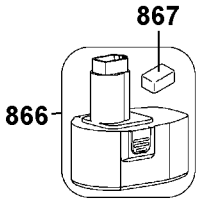
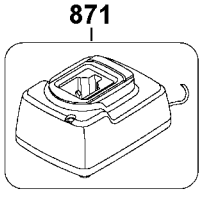

3
2
1


867
866


871

Parts List for DC528 Type 1

Item Number	Part Number	Description	Qty Required
1	5140061-05	HANDLE ASSEMBLY	1
2	5140060-17	FLUORESCENT BULB	1
3	5140027-35	TOP HOUSING ASSY	1
866	DC9071	BATTERY PACK	1
866	DC9091	BATTERY PACK	1
867	645221-00	BATTERY CAP	1
871	388683-12	1 HOUR CHARGER	1

COPYRIGHT© 2005. All Rights Reserved.
Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.