
# JET 5SS-3C-10 | Stock 531000

## Diagram A - Hoist Assembly

Electric Chain Hoist | Original JET parts reference

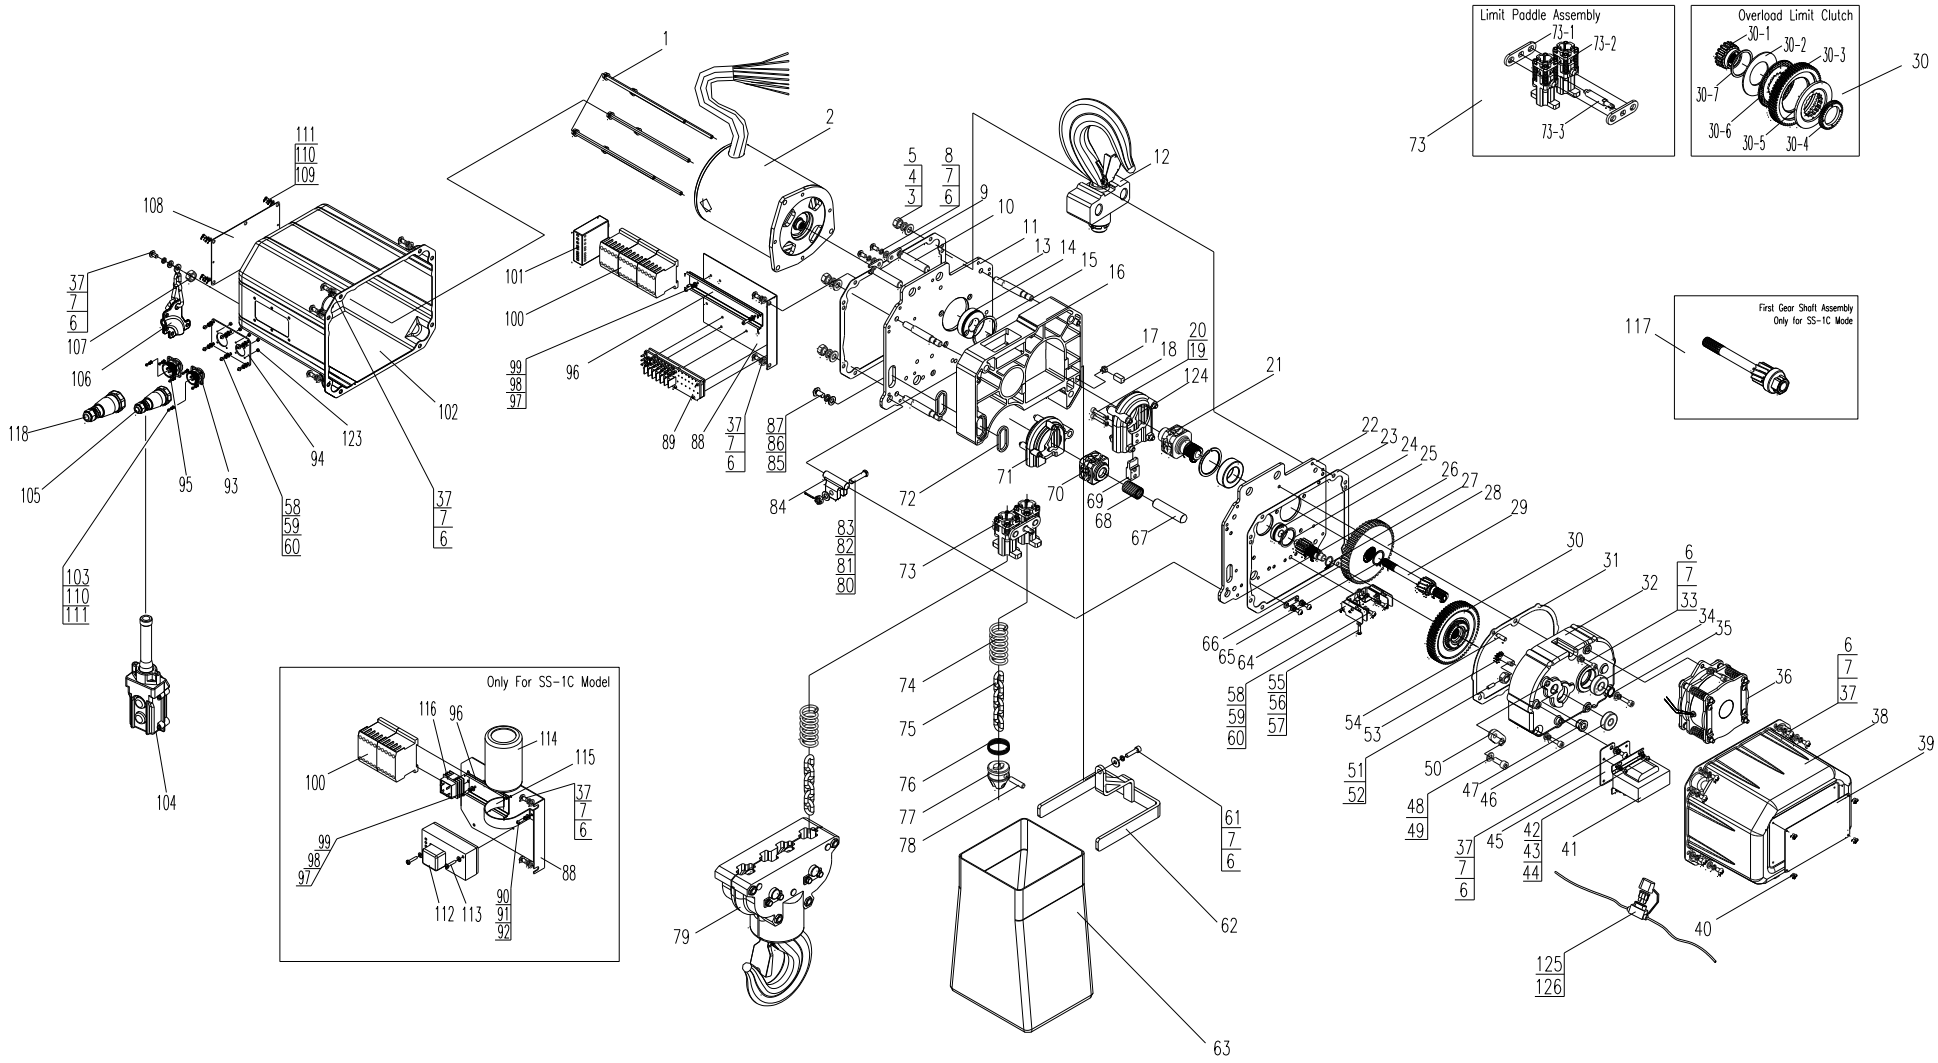


mmToolParts
Big Time Experience. Small Town Service. .com

# JET 5SS-3C-10 | Stock 531000

## Parts List A - Hoist Assembly

Electric Chain Hoist | Original JET parts reference

| Ref. | Part number | Description | Size | Qty. |
|---|---|---|---|---|
| 1 | JT9-1SS-3C-001 | Motor Stay Bolt (include Lock Washer, Plain Washer) M8x16 | | 3 |
| 2 | JT9-1SS-1C-002A | Motor Assembly for 1 Phase | | 1 |
| | JT9-1SS-3C-002A | Motor Assembly for 3 Phase | | 1 |
| 3 | JT9-1/2SS-3C-008 | Hex Nut | M10 | 8 |
| 4 | JT9-1/2SS-3C-009 | Lock Washer | 10mm | 8 |
| 5 | JT9-1/2SS-3C-010 | Plain Washer | 10mm | 8 |
| 6 | JT9-1/2SS-3C-011 | Plain Washer | 6mm | 30 |
| 7 | JT9-1/2SS-3C-012 | Lock Washer | 6mm | 30 |
| 8 | JT9-1/2SS-3C-013 | Phillips Pan Head Machine Screw | M6x12 | 2 |
| 9 | JT9-1SS-3C-014 | Stay Bolt Block for Top Hook Assembly | | 2 |
| 10 | JT9-3SS-3C-015 | Stay Bolt for Top Hook Assembly | | 2 |
| 11 | JT9-5SS-3C-016 | Motor Side Plate | | 1 |
| 12 | JT9-5SS-3C-017 | Top Hook Assembly for 5T | | 1 |
| 13 | JT9-1SS-3C-018 | Stay Bolt for Motor Side Plate | | 4 |
| 14 | JT9-1SS-3C-019 | Ball Bearing with Retainer | 150207 | 2 |
| 15 | JT9-1SS-3C-020 | Stop Ring | 72/78.8 | 2 |
| 16 | JT9-3SS-3C-021 | Sheave Cover | | 1 |
| 17 | JT9-1SS-3C-022 | Lock Nut | M8 | 1 |
| 18 | JT9-1SS-3C-023 | Rubber Plug | | 2 |
| 19 | JT9-1SS-3C-024 | Socket Head Cap Screw | M6x25 | 2 |
| 20 | JT9-1SS-3C-025 | Lock Washer | 6mm | 2 |
| 21 | JT9-1SS-3C-026 | Lift Wheel | | 1 |
| 22 | JT9-5SS-3C-027 | Gear Side Plate | | 1 |
| 23 | JT9-1SS-3C-028 | Gear Side Plate Gasket | | 2 |
| 24 | JT9-1SS-3C-029 | Ball Bearing with Retainer | 50403 | 1 |
| 25 | JT9-1SS-3C-030 | Stop Ring | 62/67.6 | 1 |
| 26 | JT9-5SS-3C-031 | Second Gear Shaft | | 1 |
| 27 | JT9-1SS-3C-032 | Snap Ring | 20mm | 1 |

mmToolParts
Big Time Experience. Small Town Service. .com

# JET 5SS-3C-10 | Stock 531000

## Parts List A - Hoist Assembly (continued)

Electric Chain Hoist | Original JET parts reference

| Ref. | Part number | Description | Size | Qty. |
|---|---|---|---|---|
| 28 | JT9-5SS-3C-033 | Lift Gear | | 1 |
| 29 | JT9-1SS-3C-034 | First Gear Shaft for 3 Phase | | 1 |
| 30 | JT9-1SS-1C-035 | Overload Limit Clutch for 1 Phase | | 1 |
| | JT9-1SS-3C-035 | Overload Limit Clutch for 3 Phase | | 1 |
| 30-1 | JT9-1SS-3C-03501 | Spline Sleeve | | 1 |
| 30-2 | JT9-1SS-3C-03502 | Wing Spring | | 1 |
| 30-3 | JT9-1SS-1C-03503 | Middle Gear for 1 Phase | | 1 |
| | JT9-1SS-3C-03503 | Middle Gear for 3 Phase | | 1 |
| 30-4 | JT9-1SS-3C-03504 | Adjust Round Nut | | 1 |
| 30-5 | JT9-1SS-3C-03505 | Clutch Support | | 1 |
| 30-6 | JT9-1SS-3C-03506 | Friction Disc | | 1 |
| 30-7 | JT9-1SS-3C-03507 | Adjust Washer | | 1 |
| 31 | JT9-1SS-3C-036 | Gear Case Seal | | 1 |
| 32 | JT9-1SS-3C-037 | Gear Case | | 1 |
| 33 | JT9-1/2SS-3C-038 | Socket Head Cap Screw | M6x20 | 5 |
| 34 | JT9-1SS-3C-039 | Ball Bearing | 180205kz1 | 1 |
| 35 | JT9-1SS-3C-040 | Snap Ring (for 3 Phase only) | 25mm | 1 |
| 36 | JT9-1SS-1C-041 | DC Brake for 1 Phase | | 1 |
| | JT9-1SS-3C-041 | DC Brake for 3 Phase | | 1 |
| 37 | JT9-1/2SS-3C-042 | Phillips Pan Head Machine Screw | M6x10 | 20 |
| 38 | JT9-1SS-3C-043 | Gear Side Cover | | 1 |
| 39 | JT9-LM000118 | Capacity Label for 5-Ton | | 1 |
| 40 | JT9-1/2SS-3C-045 | Socket Head Cap Screw | M3x6 | 4 |
| 41 | JT9-1/2SS-1C-046UG | Transformer for 1 Phase | | 1 |
| | JT9-1/2SS-3C-046UG | Transformer for 3 Phase | | 1 |
| 42 | JT9-1/2SS-3C-047 | Phillips Pan Head Machine Screw | M4x6 | 4 |
| 43 | CM9-TS-2361041 | Lock Washer | 4mm | 4 |
| 44 | CM9-TS-1550021 | Plain Washer | 4mm | 4 |

mmToolParts
Big Time Experience. Small Town Service. .com

# JET 5SS-3C-10 | Stock 531000

## Parts List A - Hoist Assembly (continued)

Electric Chain Hoist | Original JET parts reference

| Ref. | Part number | Description | Size | Qty. |
|---|---|---|---|---|
| 45 | JT9-1/2SS-3C-050 | Transformer Bracket | | 1 |
| 46 | JT9-1SS-3C-051 | Ball Bearing | 180203kz1 | 1 |
| 47 | JT9-1SS-3C-052 | Steel Collar | | 1 |
| 48 | JT9-TS-1550061 | Plain Washer | 8mm | 1 |
| 49 | JT9-1/2SS-3C-054 | Socket Head Cap Screw | M8x20 | 1 |
| 50 | JT9-1SS-3C-055 | Lock Plate for Clutch | | 1 |
| 51 | JT9-1/2SS-3C-056 | Round Pin | A5x16 | 1 |
| 52 | JT9-1/2SS-3C-057A | Adjust Round Nut | | 1 |
| 53 | JT9-1SS-3C-058 | Adjust Shaft | | 1 |
| 54 | JT9-1/2SS-3C-059 | Round Pin | A6x12 | 2 |
| 55 | JT9-1/2SS-3C-060 | Phillips Pan Head Machine Screw | M4x16 | 1 |
| 56 | CM9-TS-1550021 | Plain Washer | 4mm | 1 |
| 57 | JT9-1/2SS-3C-062 | Hex Nut | M4 | 1 |
| 58 | JT9-1/2SS-3C-063 | Phillips Pan Head Machine Screw | M5x10 | 8 |
| 59 | JT9-TS-2361051 | Lock Washer | 5mm | 8 |
| 60 | JT9-TS-1550031 | Plain Washer | 5mm | 8 |
| 61 | JT9-1SS-3C-066 | Socket Head Cap Screw | M8x25 | 1 |
| 62 | JT9-1/2SS-3C-067 | Chain Container Bracket | | 1 |
| 63 | ** | Chain Container (see chart page 19) | | 1 |
| 64 | JT9-1/2SS-3C-069UG | Limit Switch Set | | 1 |
| 65 | JT9-1SS-3C-070 | Snap Ring | 34mm | 1 |
| 66 | JT9-3SS-3C-061 | Hinge Plate | | 1 |
| 67 | JT9-3SS-3C-064 | Sheave Shaft | | 1 |
| 68 | JT9-3SS-3C-083 | Needle | 3x39.8b | 24 |
| 69 | JT9-1SS-3C-071 | Block | | 1 |
| 70 | JT9-3SS-3C-088 | Sheave | | 1 |
| 71 | JT9-3SS-3C-089 | Sheave Guide | | 1 |
| 72 | JT9-1/2SS-3C-072 | Cable Input Seal | | 2 |

mmToolParts
Big Time Experience. Small Town Service. .com

# JET 5SS-3C-10 | Stock 531000

## Parts List A - Hoist Assembly (continued)

Electric Chain Hoist | Original JET parts reference

| Ref. | Part number | Description | Size | Qty. |
|---|---|---|---|---|
| 73 | JT9-1SS-3C-073 | Limit Paddle Assembly | | 1 |
| 73-1 | JT9-1SS-3C-07301 | Side Plate | | 2 |
| 73-2 | JT9-1SS-3C-07302 | Chain Guide Block | | 1 |
| 73-3 | JT9-1SS-3C-07303 | Chain Guide Shaft | | 1 |
| 74 | JT9-1SS-3C-074 | Limit Spring | | 2 |
| 75 | JT9-1SS-3C-075 | Load Chain for 1T, 2T, 3T, and 5T * | Ø 8x24mm | 1 |
| 76 | JT9-1SS-3C-076 | Retainer Ring | | 1 |
| 77 | JT9-1SS-3C-077 | Chain Stop | | 1 |
| 78 | JT9-1SS-3C-078 | Pin | | 1 |
| 79 | JT9-5SS-3C-079 | Bottom Hook Assembly for 5T | | 1 |
| 80 | JT9-2SS-3C-08007 | Pin | | 1 |
| 81 | JT9-1/2SS-3C-010 | Plain Washer | 10mm | 1 |
| 82 | JT9-1SS-3C-08009 | Slotted Hex Nut | M10 | 1 |
| 83 | JT9-5SS-3C-088 | Cotton Pin | 2.5x20 | 1 |
| 84 | JT9-5SS-3C-08006 | Chain Holder | | 1 |
| 85 | JT9-1SS-3C-081 | Phillips Pan Head Machine Screw | M8x16 | 1 |
| 86 | JT9-1/2SS-3C-082 | Lock Washer | 8mm | 1 |
| 87 | ** | Plain Washer | 8mm | 1 |
| 88 | JT9-1/2SS-1C-085 | Electric Component Board for 1 Phase | | 1 |
| | JT9-1/2SS-3C-085 | Electric Component Board for 3 Phase | | 1 |
| 89 | JT9-1/2SS-3C-086 | Volts Conversion (for 3 Phase Single Speed) | | 1 |
| 90 | JT9-1/2SS-3C-047 | Phillips Pan Head Machine Screw (for 1 Phase only) M4x6 | | 1 |
| 91 | CM9-TS-2361041 | Lock Washer (for 1 Phase only) | 4mm | 1 |
| 92 | CM9-TS-1550021 | Plain Washer (for 1 Phase only) | 4mm | 1 |
| 93 | JT9-1/2SS-3C-090UG | Female Connector for Push Button Cord | 7P | 1 |
| 94 | JT9-1/2SS-3C-091UG | Quick Connector Board | | 1 |
| 95 | JT9-1/2SS-3C-092UG | Female Connector for Power Cord | 4P | 1 |
| 96 | JT9-1SS-1C-093 | Contactor Holder for 1 Phase | | 1 |

mmToolParts
Big Time Experience. Small Town Service. .com

# JET 5SS-3C-10 | Stock 531000

## Parts List A - Hoist Assembly (continued)

Electric Chain Hoist | Original JET parts reference

| Ref. | Part number | Description | Size | Qty. |
|---|---|---|---|---|
| | JT9-1/2SS-3C-093 | Contactor Holder for 3 Phase | | 1 |
| 97 | JT9-TS-2284082 | Phillips Pan Head Machine Screw | M4x8 | 2 |
| 98 | CM9-TS-2361041 | Lock Washer | 4mm | 2 |
| 99 | CM9-TS-1550021 | Plain Washer | 4mm | 2 |
| 100 | JT9-1/2SS-1C-097UG | Magnetic Contactor for 1 Phase | | 2 |
| | JT9-1/2SS-3C-097UG | Magnetic Contactor for 3 Phase, single speed | | 2 |
| 101 | JT9-1/2SS-3C-098 | Reverse Phase Inspector (3 Phase only) | 230V/460V/3Ph/60Hz | 1 |
| 102 | JT1-590 | Motor Side Cover | | 1 |
| 103 | JT9-1/2SS-3C-103UG | Phillips Pan Head Machine Screw | M3x12 | 8 |
| 104 | JT9-1/2SS-3C-104 | Pushbutton Control for 1 Phase and 3 Phase, Single Speed | | 1 |
| 105 | JT9-1/2SS-3C-105UG | Male Plug | 7P | 1 |
| 106 | JT9-1/2SS-3C-106 | Cable Holder | | 1 |
| 107 | JT9-1/2SS-3C-022 | Lock Nut | M6 | 1 |
| 108 | JT9-LM000120 | Name Plate for 5T 1PH | | 1 |
| | JT9-LM000119 | Name Plate for 5T 3PH | | 1 |
| 109 | JT9-1/2SS-3C-109 | Phillips Pan Head Machine Screw | M3x6 | 4 |
| 110 | JT9-1/2SS-3C-110 | Lock Washer | 3mm | 12 |
| 111 | JT9-1/2SS-3C-111 | Plain Washer | 3mm | 12 |
| 112 | JT9-1/2SS-1C-099-A | Solid State Switch (1 Phase only) | | 1 |
| 113 | JT9-TS-2284352 | Phillips Pan Head Machine Screw | M4x35 | 2 |
| 114 | JT9-1/2SS-1C-101 | Capacitor (for 1 Phase only) | Ø65, 600uF | 1 |
| 115 | JT9-1/2SS-1C-113 | Capacitor Holder (for 1 Phase only) | Ø 65 | 1 |
| 116 | JT9-1/2SS-1C-114 | Rectifier (for 1 Phase only) | 50A | 1 |
| 117 | JT9-1SS-1C-112 | First Gear Shaft Assembly (for 1 Phase only) | | 1 |
| 118 | JT9-1/2SS-3C-123UG | Male Plug | 4P | 1 |
| 123 | JT9-1/2SS-3C-128 | Lock Nut | M3 | 8 |
| 124 | JT9-1SS-3C-129 | Chain Guide | | 1 |
| 125 | JT9-1/2SS-3C-130 | Fuse | 2A | 1 |
| 126 | JT9-1/2SS-3C-131 | Fuse Cover | | 1 |

* Specify length of Load Chain when ordering.

** These parts are shown for reference only and are not available for order individually. Non-proprietary parts,


Where alternatives are listed, match the model, capacity, lift length, voltage, phase and hook style. Unnumbered component rows belong to the preceding assembly.

mmToolParts
Big Time Experience. Small Town Service. .com

# JET 5SS-3C-10 | Stock 531000

## Diagram B - Power Cord

Electric Chain Hoist | Original JET parts reference

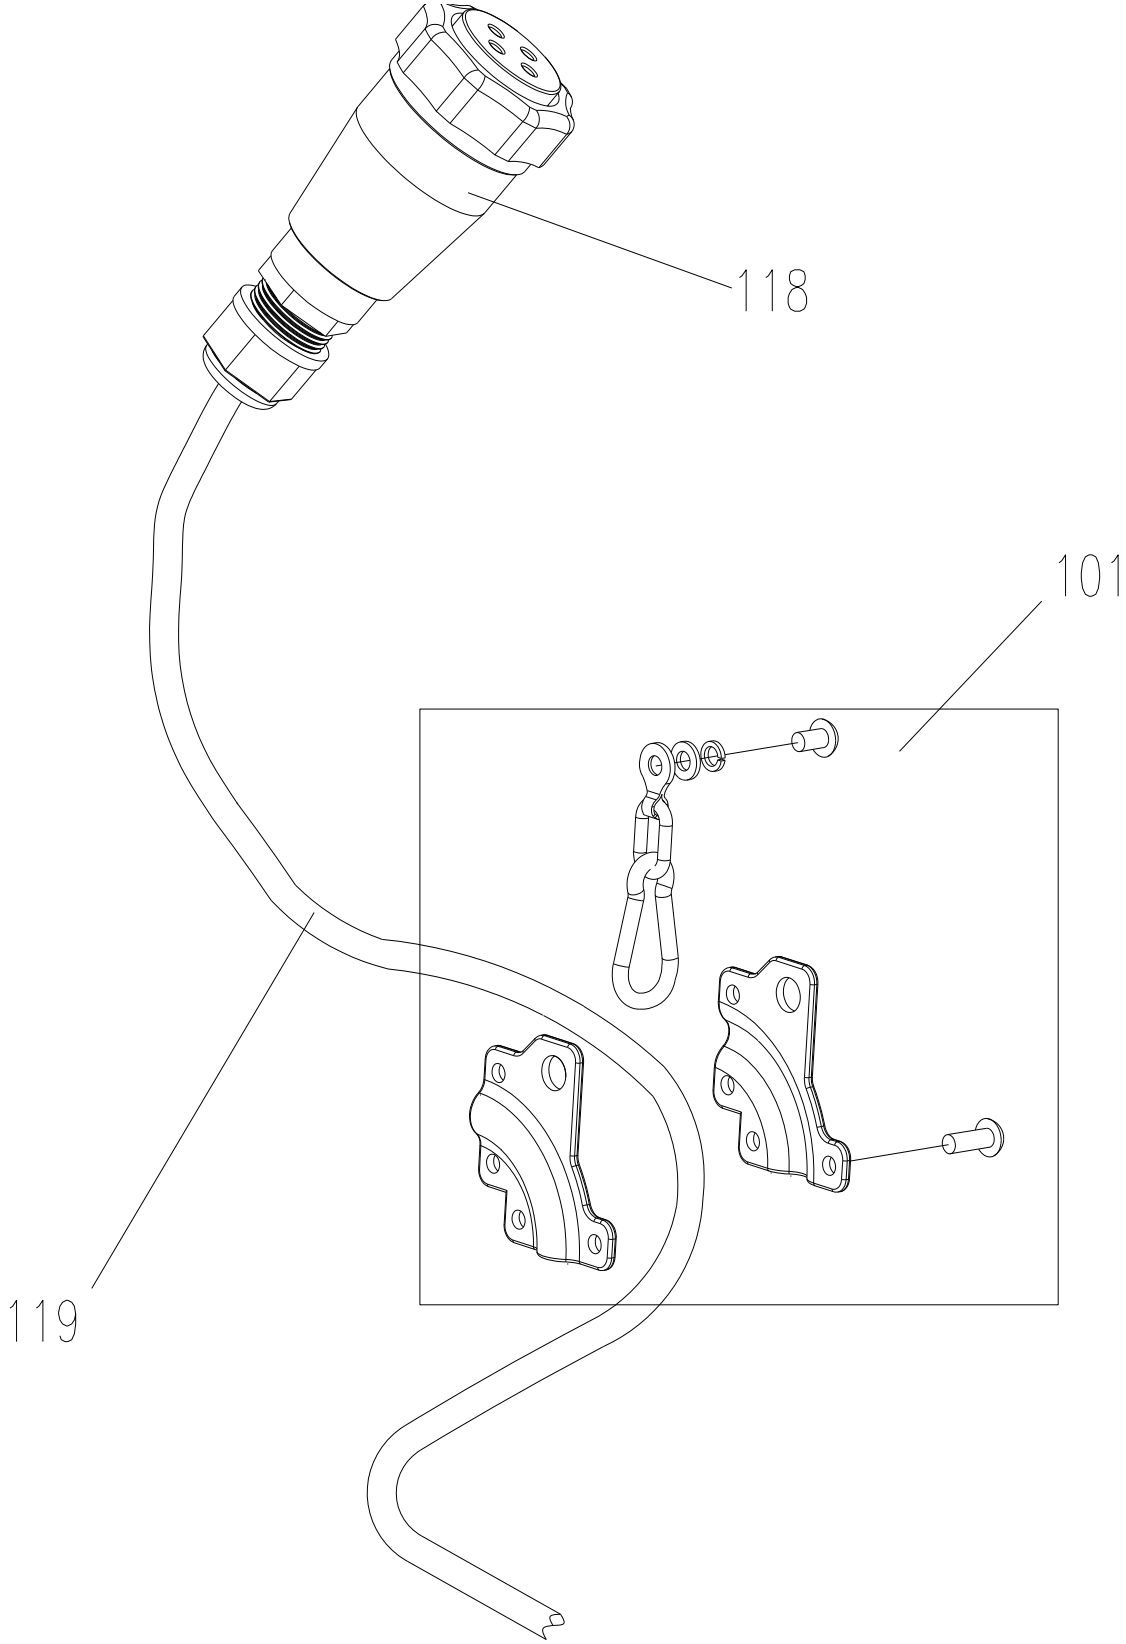


mmToolParts
Big Time Experience. Small Town Service. .com

# JET 5SS-3C-10 | Stock 531000

## Parts List B - Power Cord

Electric Chain Hoist | Original JET parts reference

| Ref. | Part number | Description | Size | Qty. |
|---|---|---|---|---|
| 101 | JT9-1/2SS-3C-106 | Cord Holder Assembly | | 1 |
| 118 | JT9-1/2SS-3C-123UG | Male Plug | 4P | 1 |
| 119 | JT9-1/2SS-1C-124 | Power Cord for 1 Phase | | 1 |
| | JT9-1/2SS-3C-124 | Power Cord for 3 Phase | | 1 |


Where alternatives are listed, match the model, capacity, lift length, voltage, phase and hook style. Unnumbered component rows belong to the preceding assembly.

mmToolParts
Big Time Experience. Small Town Service. .com

# JET 5SS-3C-10 | Stock 531000

## Diagram C - Control Pendant

Electric Chain Hoist | Original JET parts reference

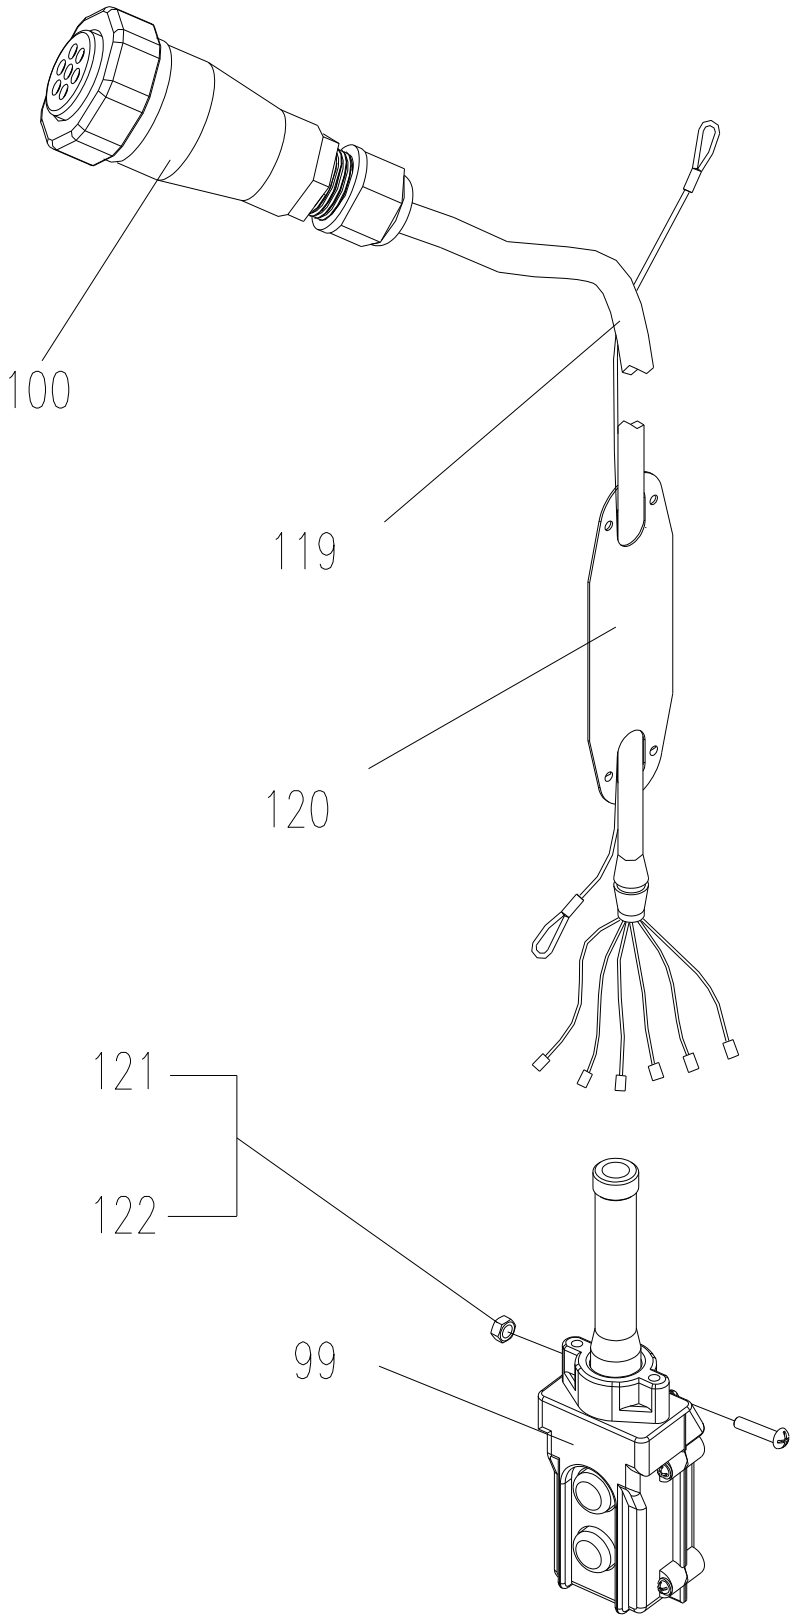


mmToolParts
Big Time Experience. Small Town Service. .com

# JET 5SS-3C-10 | Stock 531000

## Parts List C - Control Pendant

Electric Chain Hoist | Original JET parts reference

| Ref. | Part number | Description | Size | Qty. |
|---|---|---|---|---|
| 99 | JT9-1/2SS-3C-104 | Pushbutton Control (1 and 3 Phase, Single Speed) | | 1 |
| 100 | JT9-1/2SS-3C-105UG | Male Plug | 7P | 1 |
| 119 | JT9-1/2SS-3C-124A | Pushbutton Cord | | 1 |
| 120 | JT9-1/2SS-3C-125 | Caution Tag | | 1 |
| 121 | JT9-1/2SS-3C-126 | Phillips Pan Head Machine Screw | M4x25 | 1 |
| 122 | JT9-TS-1541001 | Nylon Lock Hex Nut | M4 | 1 |
| | JT9-152211 | PBC-210CN, 2-Button Pendant Controller, 10’ Lift | | |
| | JT9-152216 | PBC-215CN, 2-Button Pendant Controller, 15’ Lift | | |
| | JT9-152221 | PBC-220CN, 2-Button Pendant Controller, 20’ Lift | | |
| | 152231 | PBC-230CN, 2-Button Pendant Controller, 30’ Lift | | |


Where alternatives are listed, match the model, capacity, lift length, voltage, phase and hook style. Unnumbered component rows belong to the preceding assembly.

mmToolParts
Big Time Experience. Small Town Service. .com

# JET 5SS-3C-10 | Stock 531000

## Diagram D - Motor Assembly

Electric Chain Hoist | Original JET parts reference

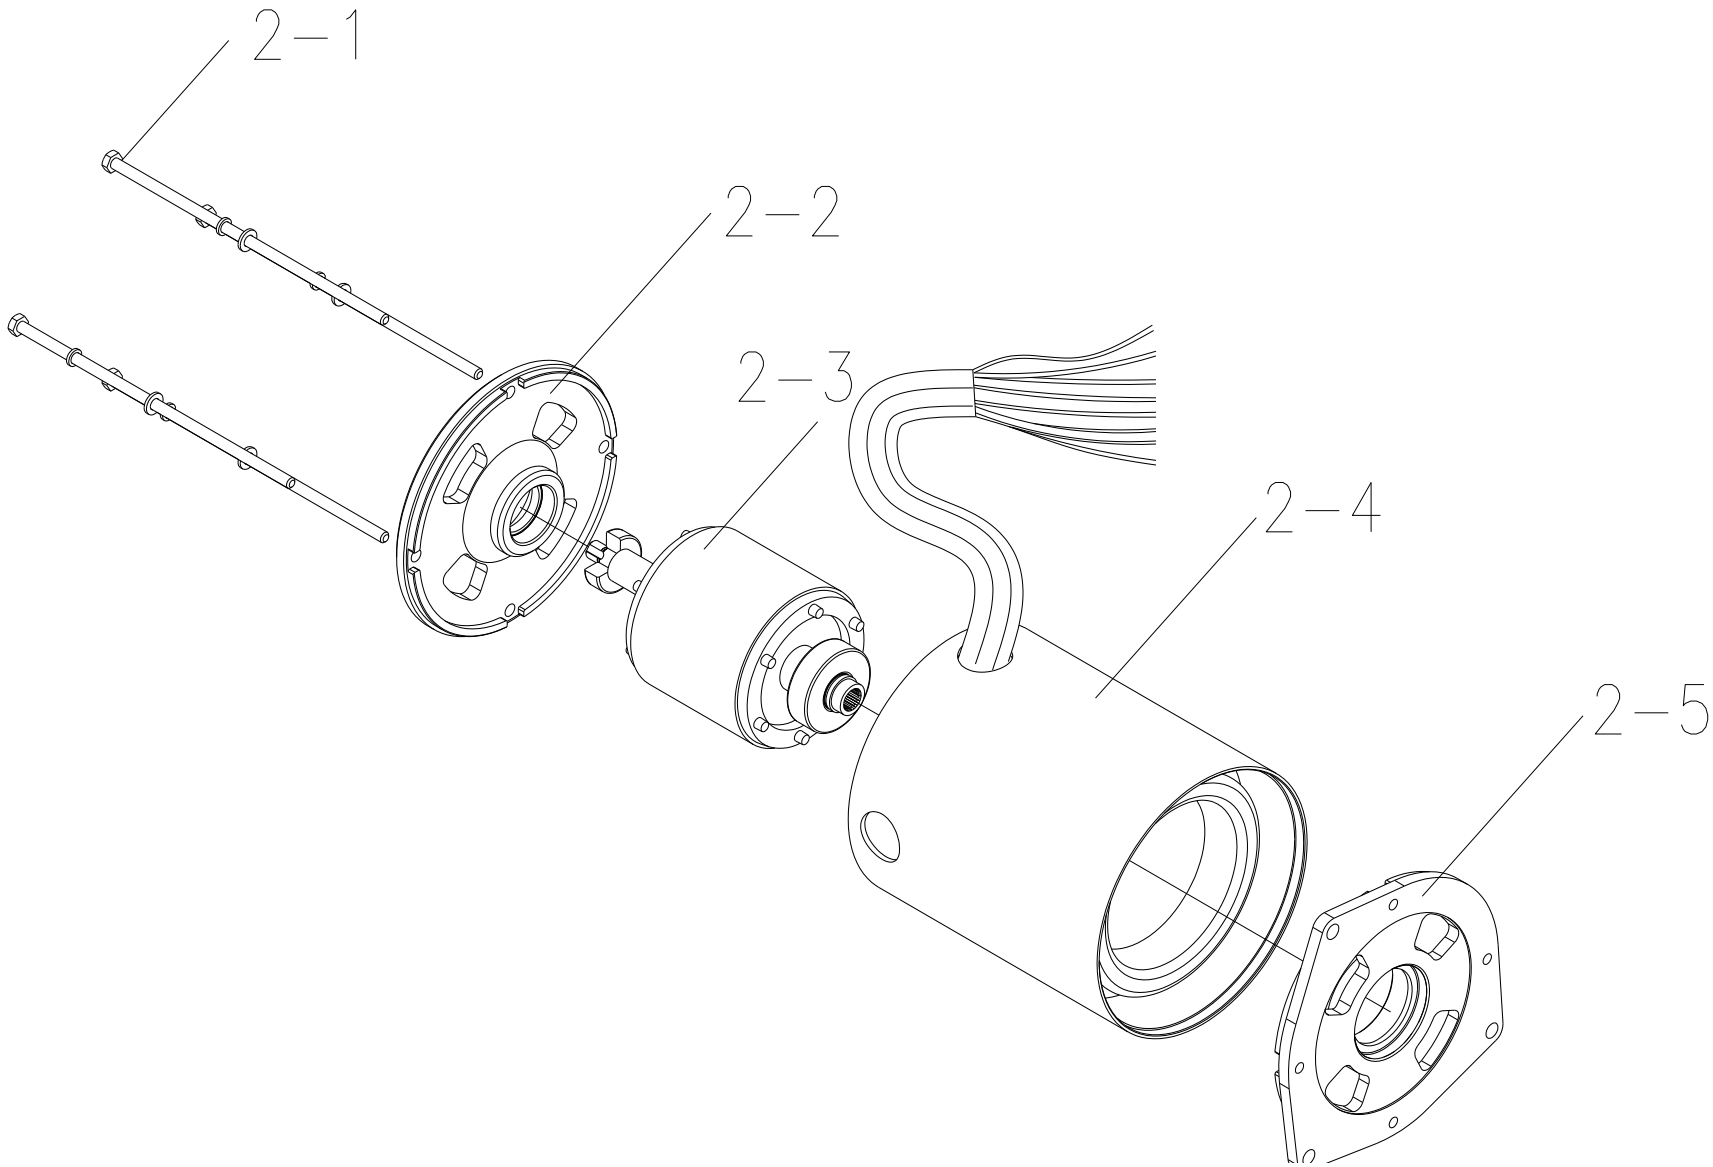


mmToolParts
Big Time Experience. Small Town Service. .com

# JET 5SS-3C-10 | Stock 531000

## Parts List D - Motor Assembly

Electric Chain Hoist | Original JET parts reference

| Ref. | Part number | Description | Size | Qty. |
|---|---|---|---|---|
| | JT9-1SS-1C-002A | Motor Assembly, 1 Phase (#2-2 thru 2-5) | | 1 |
| | JT9-1SS-3C-002A | Motor Assembly, 3 Phase (#2-2 thru 2-5) | | 1 |
| 2-1 | JT9-1SS-3C-001 | Motor Stay Bolt | | 4 |
| 2-2 | JT9-1SS-1C-002 | Motor Bracket for 1 Phase | | 1 |
| | JT9-1SS-3C-002 | Motor Bracket for 3 Phase | | 1 |
| 2-3 | JT9-1SS-1C-004A | Rotor Assembly for 1 Phase | | 1 |
| | JT9-1SS-3C-004A | Rotor Assembly for 3 Phase, Single Speed | | 1 |
| 2-4 | JT9-1SS-1C-006 | Motor Case Assembly for 1 Phase | | 1 |
| | JT9-1SS-3C-006 | Motor Case Assembly for 3 Phase, Single Speed | | 1 |
| 2-5 | JT9-1SS-1C-007 | Motor Right-End Cover for 1 Phase | | 1 |
| | JT9-1SS-3C-007 | Motor Right-End Cover for 3 Phase | | 1 |


Where alternatives are listed, match the model, capacity, lift length, voltage, phase and hook style. Unnumbered component rows belong to the preceding assembly.

mmToolParts
Big Time Experience. Small Town Service. .com

# JET 5SS-3C-10 | Stock 531000

## Diagram E - Brake Assembly

Electric Chain Hoist | Original JET parts reference

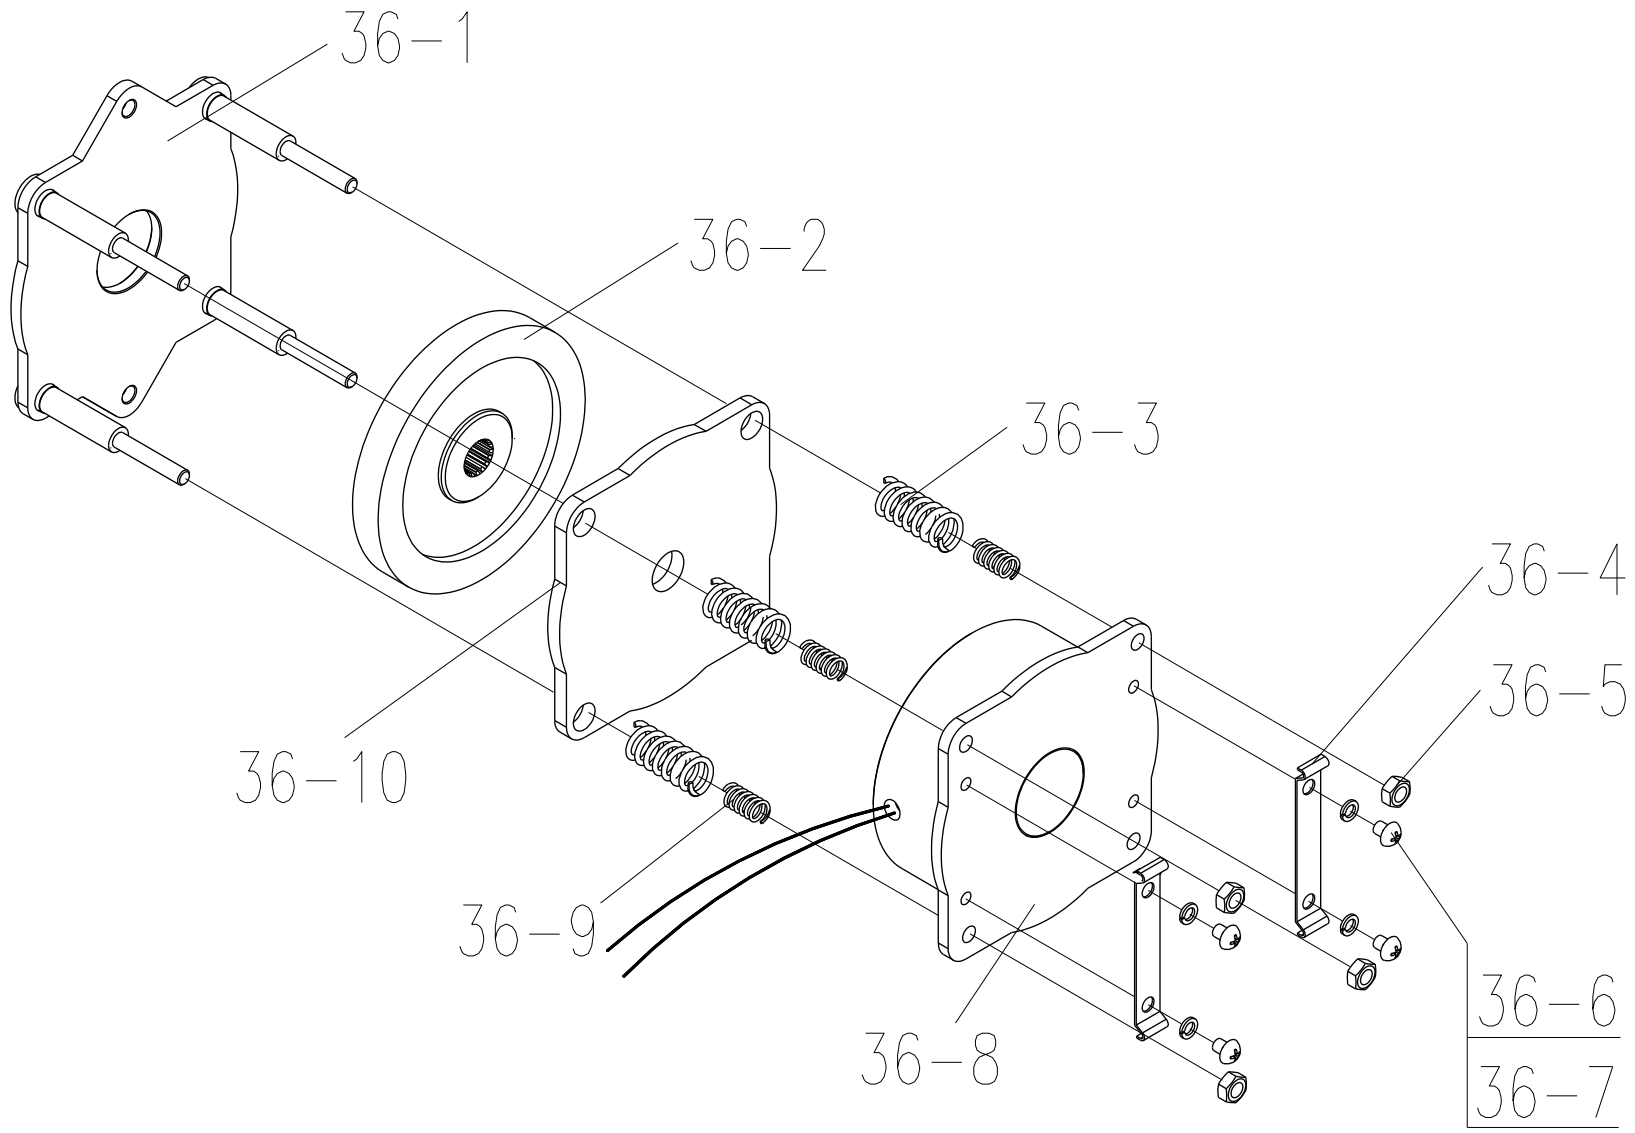


mmToolParts
Big Time Experience. Small Town Service. .com

# JET 5SS-3C-10 | Stock 531000

## Parts List E - Brake Assembly

Electric Chain Hoist | Original JET parts reference

| Ref. | Part number | Description | Size | Qty. |
|---|---|---|---|---|
| | JT9-1SS-1C-041 | DC Brake Assembly for 1 Phase (#36-1 thru 36-10) | | 1 |
| | JT9-1SS-3C-041 | DC Brake Assembly for 3 Phase (#36-1 thru 36-10) | | 1 |
| 36-1 | JT9-1SS-3C-04101A | Brake Bracket | | 1 |
| 36-2 | JT9-1SS-1C-04103 | Friction Pad for 1 Phase | | 1 |
| | JT9-1SS-3C-04103 | Friction Pad for 3 Phase | | 1 |
| 36-3 | JT9-1SS-1C-04104 | Brake Spring | | 4 |
| 36-4 | JT9-1SS-3C-04105 | Locking Plate | | 2 |
| 36-5 | JT9-1SS-3C-022 | Lock Nut | M8 | 4 |
| 36-6 | JT9-1/2SS-3C-04107 | Pan Head Screw | M5x6 | 4 |
| 36-7 | JT9-1/2SS-3C-04108 | Lock Washer | 5mm | 4 |
| 36-8 | JT9-1SS-1C-04110A | Brake Coil for 1 Phase | | 1 |
| | JT9-1SS-3C-04110A | Brake Coil for 3 Phase | | 1 |
| 36-9 | JT9-1SS-3C-04111 | Brake Spring | | 4 |
| 36-10 | JT9-1SS-3C-04112 | Brake Armature | | 1 |


Where alternatives are listed, match the model, capacity, lift length, voltage, phase and hook style. Unnumbered component rows belong to the preceding assembly.


mmToolParts
Big Time Experience. Small Town Service. .com

# JET 5SS-3C-10 | Stock 531000

## Diagram F - Hook Assemblies

Electric Chain Hoist | Original JET parts reference

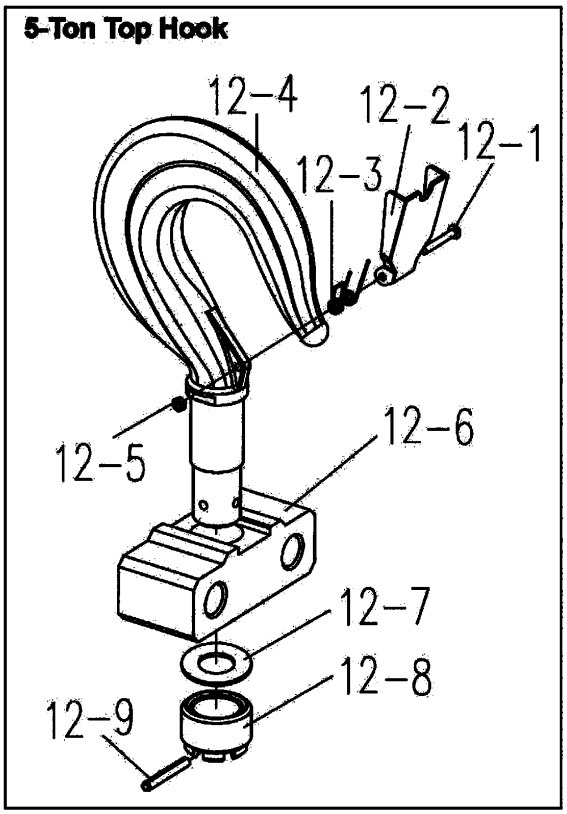

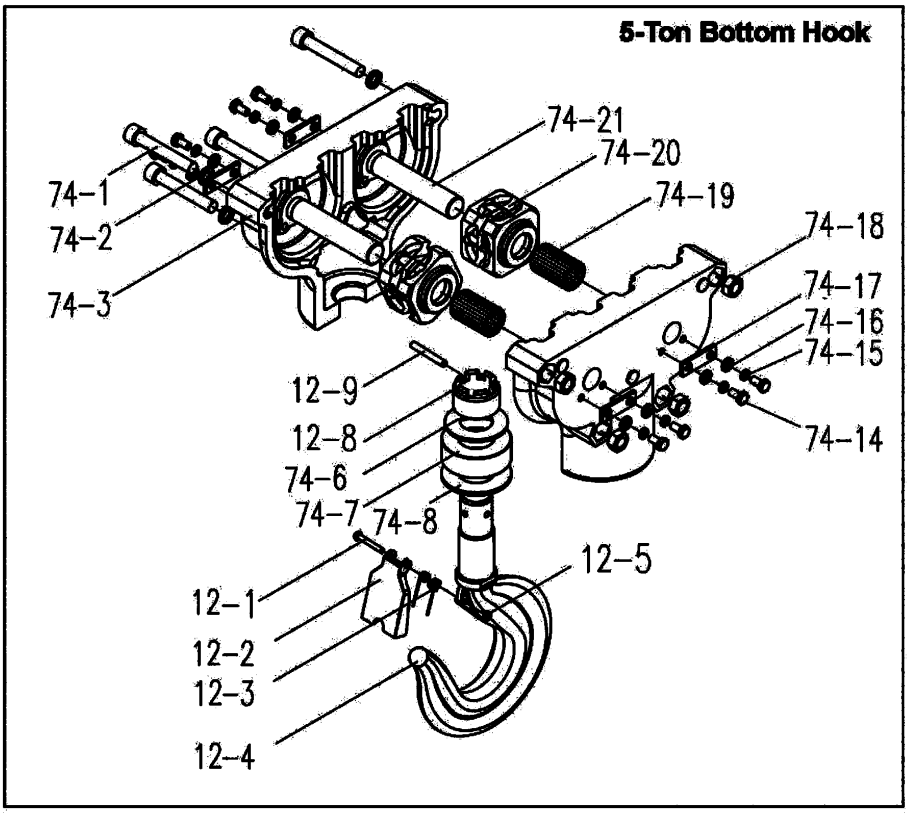
mmToolParts
Big Time Experience. Small Town Service. .com

# JET 5SS-3C-10 | Stock 531000

## Parts List F - Hook Assemblies

Electric Chain Hoist | Original JET parts reference

| Ref. | Part number | Description | Size | Qty. |
|---|---|---|---|---|
| 12 | JT9-5SS-3C-017 | Top Hook Assembly for 5 Ton | | 1 |
| 12-1 | CM9-TS-2284302 | Phillips Pan Head Machine Screw | M4x30 | 1 |
| 12-2 | JT9-5SS-3C-01702 | Hook Latch | | 1 |
| 12-3 | JT9-5SS-3C-01703 | Latch Spring | | 1 |
| 12-4 | JT9-5SS-3C-01704 | Top Hook | | 1 |
| 12-5 | JT9-5SS-3C-01705 | Lock Nut | M4 | 1 |
| 12-6 | JT9-5SS-3C-01706 | Connecting Bar | | 1 |
| 12-7 | JT9-5SS-3C-01707 | Plain Washer | | 1 |
| 12-8 | JT9-5SS-3C-01708 | Hook Nut | | 1 |
| 12-9 | JT9-5SS-3C-01709 | Roll Pin | 5x40mm | 1 |
| 79 | JT9-5SS-3C-079 | Bottom Hook Assembly for 5 Ton | | 1 |
| 79-1 | JT9-5SS-3C-07901 | Socket Head Cap Screw | M10x65 | 4 |
| 79-2 | JT9-1/2SS-3C-009 | Lock Washer | 10mm | 4 |
| 79-3 | ** | Bottom Hook Housing | | 2 |
| 79-6 | JT9-5SS-3C-07906 | Plain Washer | | 1 |
| 79-7 | JT9-5SS-3C-07907 | Thrust Ball Bearing | 8306 | 1 |

mmToolParts
Big Time Experience. Small Town Service. .com

# JET 5SS-3C-10 | Stock 531000

## Parts List F - Hook Assemblies (continued)

Electric Chain Hoist | Original JET parts reference

| Ref. | Part number | Description | Size | Qty. |
|---|---|---|---|---|
| 79-8 | JT9-5SS-3C-07908 | Collar | | 1 |
| 12-0 | JT9-5SS-3C-01700 | Hook Latch Assembly (index #12-1,12-2,12-3,12-5) | | 1 |
| 12-1 | CM9-TS-2284302 | Phillips Pan Head Machine Screw | M4x30 | 1 |
| 12-2 | JT9-5SS-3C-01702 | Hook Latch | | 1 |
| 12-3 | JT9-5SS-3C-01703 | Latch Spring | | 1 |
| 12-4 | JT9-5SS-3C-01704 | Top Hook | | 1 |
| 12-5 | JT9-1/2SS-3C-01705 | Lock Nut | M4 | 1 |
| 12-8 | JT9-5SS-3C-01708 | Hook Nut | | 1 |
| 12-9 | JT9-5SS-3C-01709 | Roll Pin | 5x40mm | 1 |
| 79-14 | JT9-3SS-3C-07922 | Hex Bolt | M6x12 | 8 |
| 79-15 | JT9-1/2SS-3C-012 | Lock Washer | 6mm | 8 |
| 79-16 | JT9-1/2SS-3C-011 | Plain Washer | 6mm | 8 |
| 79-17 | JT9-3SS-3C-061 | Hinge Plate | | 4 |
| 79-18 | JT9-3SS-3C-07901 | Lock Nut | M10 | 4 |
| 79-19 | JT9-3SS-3C-083 | Needle | 3x39.8b | 48 |
| 79-20 | JT9-3SS-3C-088 | Sheave | | 2 |
| 79-21 | JT9-5SS-3C-07921 | Sheave Shaft | | 2 |

** These parts are shown for reference only and are not available for order individually. Non-proprietary parts,

Where alternatives are listed, match the model, capacity, lift length, voltage, phase and hook style. Unnumbered component rows belong to the preceding assembly.

mmToolParts
Big Time Experience. Small Town Service. .com