
JET ETM-949 | Stock 894010

Diagram A - Table

JET Elite mechanical variable-speed mill; shared parts reference.

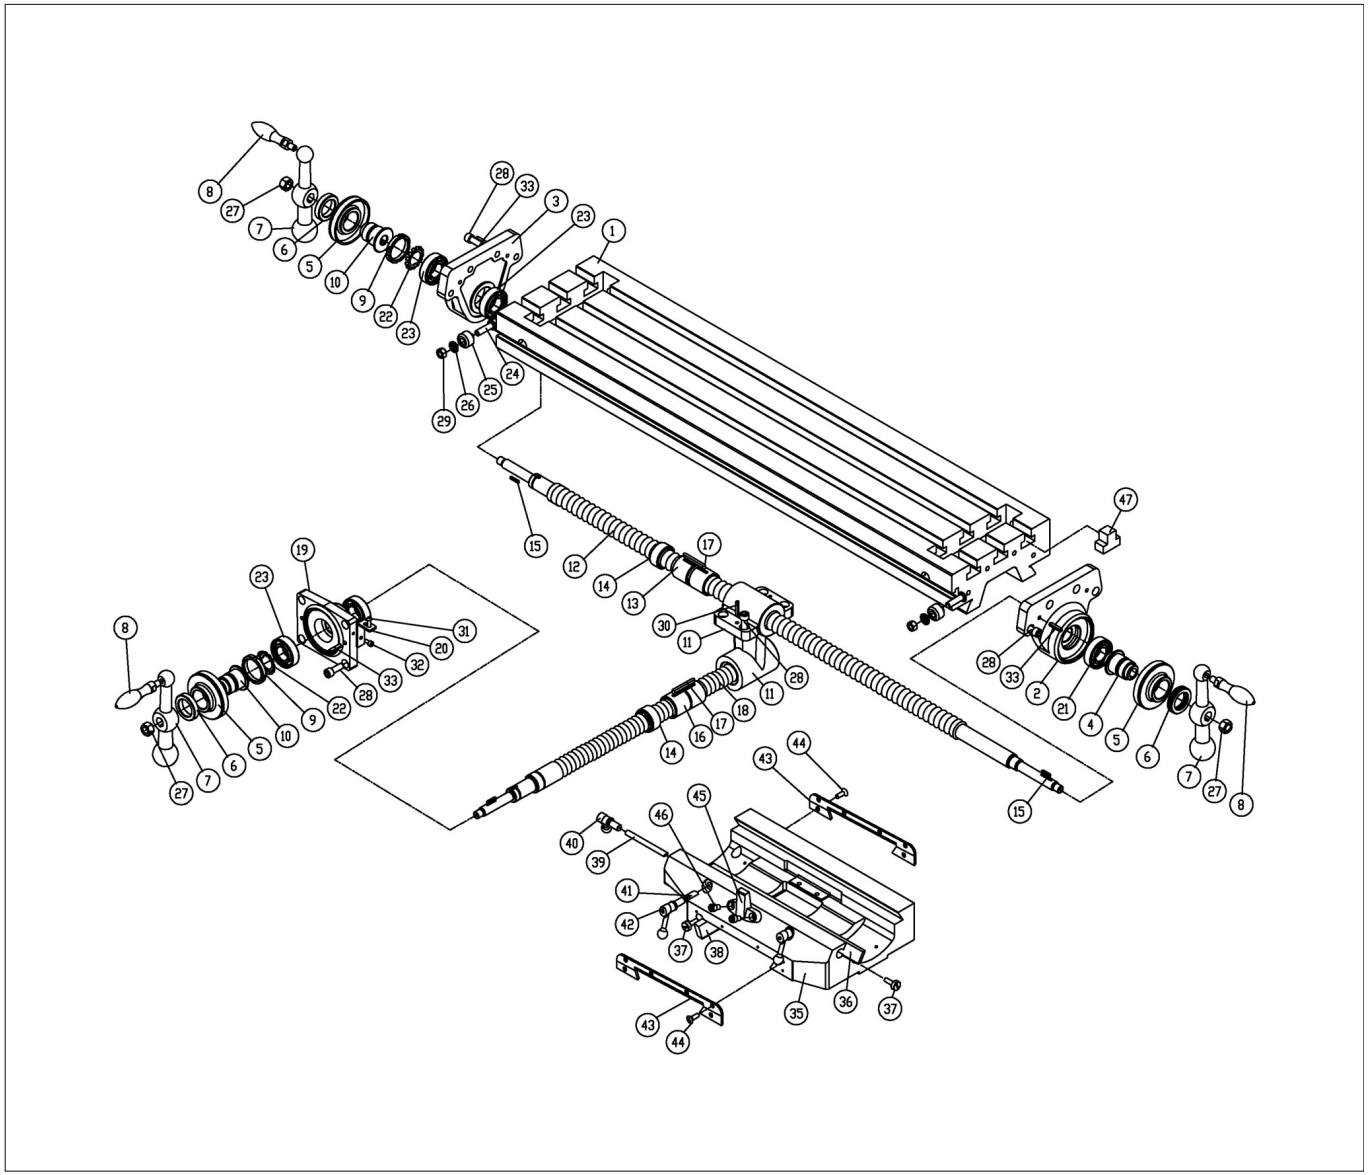

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Parts List A - Table

JET Elite mechanical variable-speed mill; shared parts reference.

Ref.	Part number	Description	Size	Qty.
1	ETM949-A01	Table	9”×49”	1
2	ETM949-A02	Left Bearing Bracket		1
3	ETM949-A03	Right Bearing Bracket		1
4	ETM949-A04	Dial Holder		1
5	ETM949-A05	Inch Dial	inch	3
6	ETM949-A06	Dial Nut		1
7	ETM949-A07	Ball Crank Handle		3
8	ETM949-A08	Ball Crank Handle Lever	3/8”-16UNC	3
9	ETM949-A09	Lock Nut		2
10	ETM949-A10	Dial Holder		2
11	ETM949-A11	Feed Nut Bracket		1
12	ETM949-A12	Longitudinal Feed Screw	49”	1
13	ETM949-A13	Longitudinal Feed Nut (inch)		2
14	ETM949-A14	Backlash Adjustment Nut	inch	2
15	ETM949-A15	Flat Key	3×3×20	3
16	ETM949-A16	Cross Feed Screw Nut (inch)		2
17	ETM949-A17	Flat Key	5×5×50	2
18	ETM949-A18	Cross Feed Screw (inch)		1
19	ETM949-A19	Cross Feed Bearing Bracket		1
20	ETM949-A20	Front Rubber Chip Cover Shaft Bracket		2
21	BB-6204	Bearing	6204	1
22	ETM949-A22	Lock Washer	AW04	2

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Parts List A - Table (continued)

JET Elite mechanical variable-speed mill; shared parts reference.


Ref.	Part number	Description	Size	Qty.
23	BB-51105	Bearing	51105	4
24	ETM949-A24	Stop Piece T-Bolt		2
25	ETM949-A25	Table Stop Piece		2
26	ETM949-A26	Washer		2
27	TS-0561031	Nut	3/8”	3
28	ETM949-A28	Bolt	3/8”×1”	16
29	TS-0561031	Nut	3/8”	2
30	ETM949-A30	Overload Clutch Lever Spring Plunger	5x30	2
31	ETM949-A31	Cross-Recessed Head Screw	3/16”× 5/8”	2
32	TS-1502021	Bolt	M5×10	2
33	ETM949-A33	Overload Clutch Lever Spring Plunger	6×25	6
35	ETM949-A35	Saddle	49”	1
36	ETM949-A36	Saddle Knee Gib		1
37	ETM949-A37	Adjusting Screw		3
38	ETM949-A38	Saddle Table Gib		1
39	ETM949-A39	Saddle Lock Plunger		1
40	ETM949-A40	Table Lock Bolt Handle	1/2”-12UNC	1
41	ETM949-A41	Adaptor Pivot Stud Locknut		1
42	ETM949-A42	Table Lock Bolt Handle	1/2”-12UNC	2
43	ETM949-A43	Felt Wipers		1
44	ETM949-A44	Cross-Recessed Head Screw	3/16 ×15	8
45	ETM949-A45	Table Stop Bracket		1
46	TS-0209051	Hex-Socket Head Cap Screw	3-8×15	2

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Diagram B - Base

JET Elite mechanical variable-speed mill; shared parts reference.

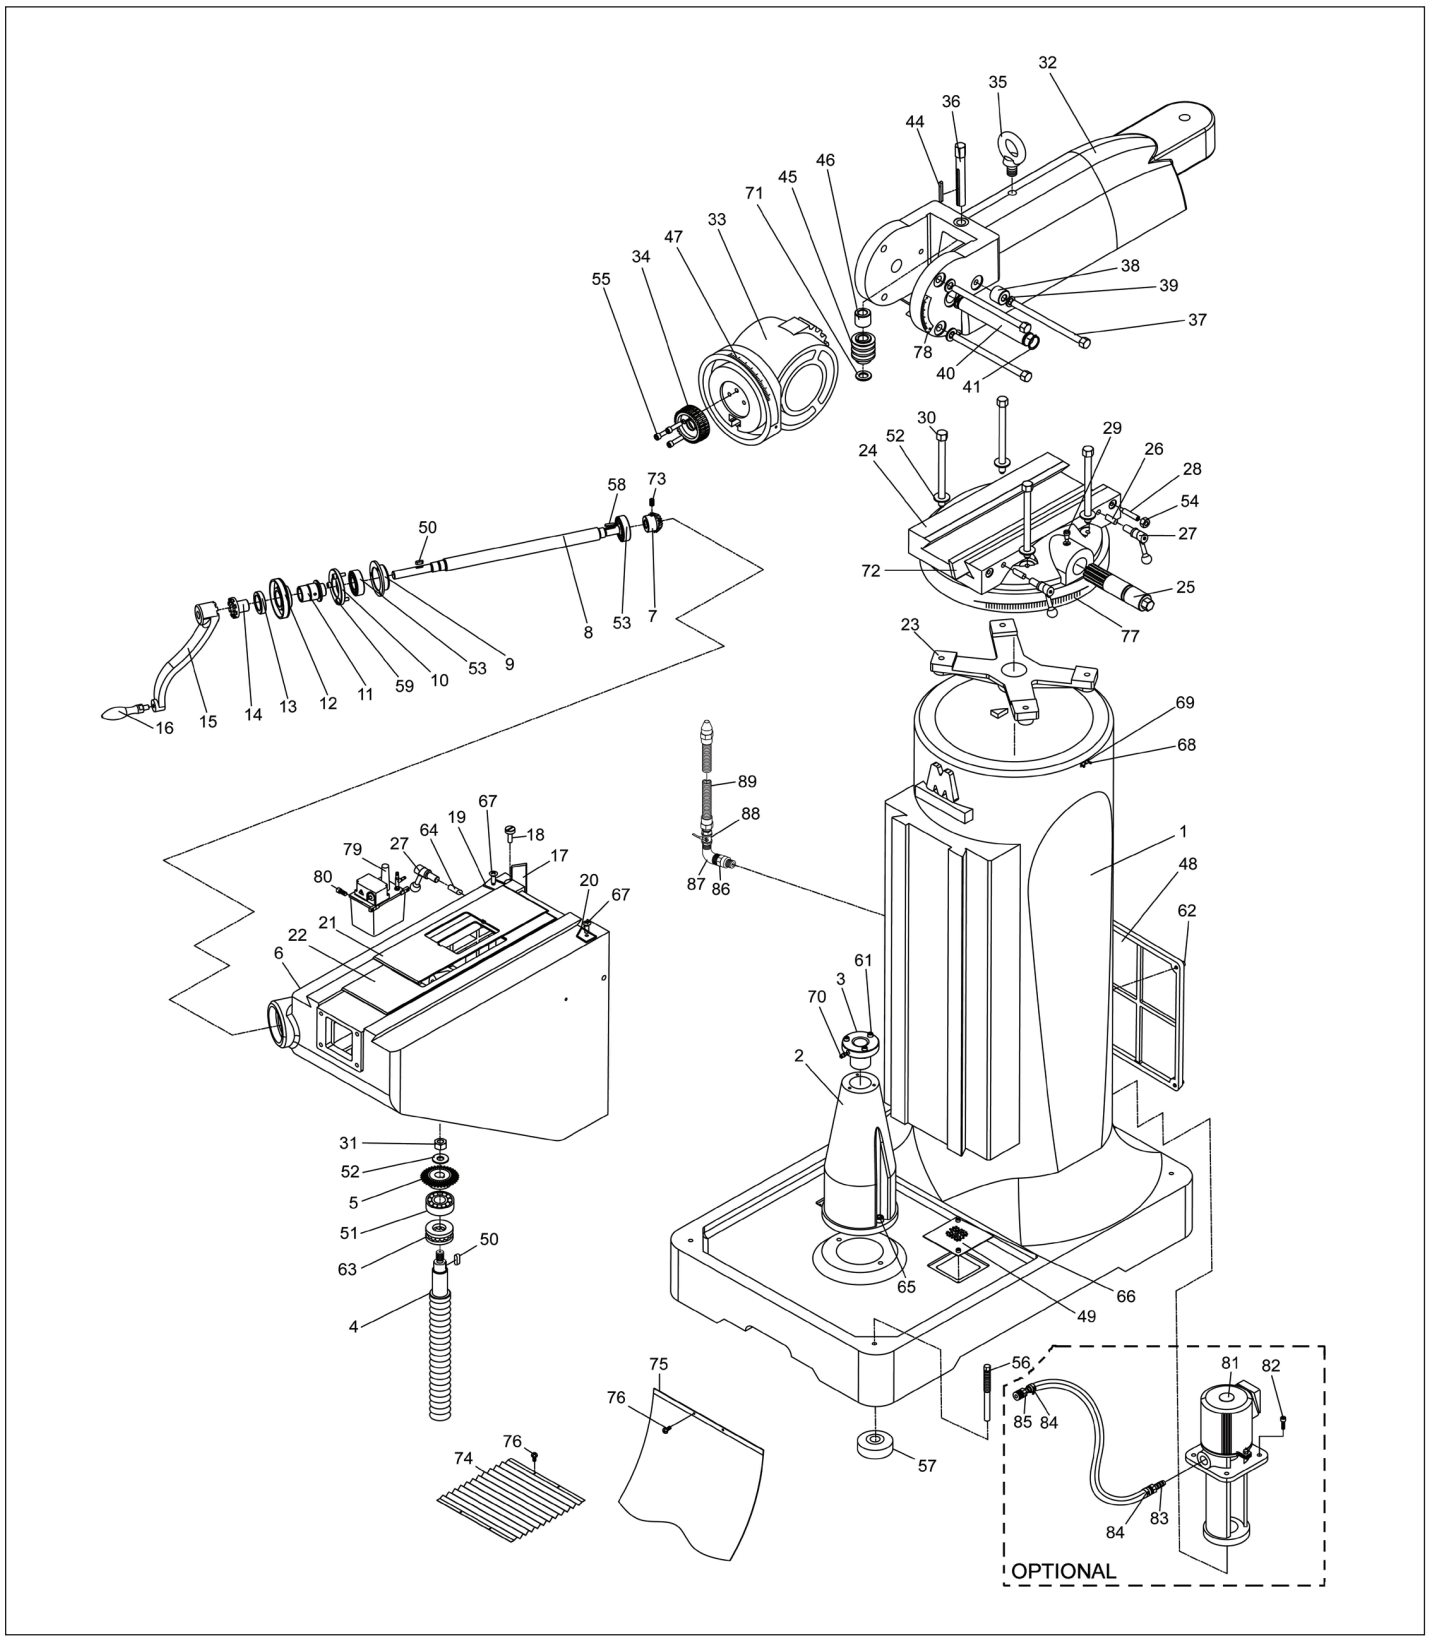

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Parts List B - Base

JET Elite mechanical variable-speed mill; shared parts reference.

Ref.	Part number	Description	Size	Qty.
1	ETM949-B01	Body		1
2	ETM949-B02	Elevating Screw Housing		1
3	ETM949-B03	Elevating Screw Nut(Inch)		1
4	ETM949-B04	Elevating Screw (Inch)		1
5	ETM949-B05	Bevel Gear (Big)		1
6	ETM949-B06	Knee		1
7	ETM949-B07	Bevel Gear(Small)		1
8	ETM949-B08	Elevating Shaft		1
9	ETM949-B09	Bearing Housing		1
10	ETM949-B10	Bearing Cap		1
11	ETM949-B11	Dial Holder		1
12	ETM949-B12	Inch Dial		1
13	ETM949-B13	Dial Nut		1
14	ETM949-B14	Gear Shaft Clutch Insert		1
15	ETM949-B15	Elevating Crank		1
16	ETM949-B16	Ball Crank Handle Lever	3/8”-16UNC	1
17	ETM949-B17	Knee Column Gib		1
18	ETM949-B18	Adjusting Screw		2
19	ETM949-B19	Felt Wipers		1
20	ETM949-B20	Felt Wipers		1
21	ETM949-B21	Chip Guards (Down)		1
22	ETM949-B22	Chip Guards (Up)		1

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Parts List B - Base (continued)

JET Elite mechanical variable-speed mill; shared parts reference.

Ref.	Part number	Description	Size	Qty.
23	ETM949-B23	Spider		1
24	ETM949-B24	Turret		1
25	ETM949-B25	Ram Pinion		1
26	ETM949-B26	Ram Lock Plunger		2
27	ETM949-B27	Table Lock Bolt Handle (Include C038) 1/2”-12UNC		3
28	ETM949-B28	Gib Lock Screw		1
29	ETM949-B29	Ram Pinion Set		1
30	ETM949-B30	Locking Bolt		4
31	TS-0561051	Nut	1/2”	1
32	ETM949-B32	Ram		1
33	ETM949-B33	Ram Adaptor		1
34	ETM949-B34	Quill Housing Adjusting Gear		1
35	ETM949-B35	Hook		1
36	ETM949-B36	Vertical Adjusting Worm Shaft		1
37	ETM949-B37	Adaptor Locking Bolt	185mm	3
38	ETM949-B38	Adaptor Pivot Stud Locknut		1
39	TS-155009	Washer	M14	1
40	ETM949-B40	Adaptor Pivot Stud		1
41	ETM949-B41	Snap Ring C-Type	S-26	2
42	TS-155009	Washer	M14	1
43	TS-155009	Washer	M14	1
44	ETM949-B44	Flat Key	5×5×50	1

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Parts List B - Base (continued)

JET Elite mechanical variable-speed mill; shared parts reference.

Ref.	Part number	Description	Size	Qty.
45	ETM949-B45	Vertical Adjusting Worm		1
46	ETM949-B46	Worm Thrust Washer		1
47	ETM949-B47	Adaptor Scale		1
48	ETM949-B48	Back Cover		2
49	ETM949-B49	Filter Oil Net		2
50	ETM949-B50	Flat Key	5×5×15	2
51	BB-6205	Bearing	6205	1
52	ETM949-B52	Washer		4
53	BB-6204	Bearing	6204	2
54	TS-0561031	Nut	3/8”	1
55	TS-1504051	Hex-Socket Head Cap Screw	M8 × 25	3
56	ETM949-B56	Level Screw And Nut		4
57	ETM949-B57	Leveling Pads		4
58	ETM949-B58	Flat Key	4×4×20	1
59	TS-1503051	Hex-Socket Head Cap Screw	M6 × 20	3
60	TS-1503051	Hex-Socket Head Cap Screw	M6 × 20	1
61	TS-1503051	Hex-Socket Head Cap Screw	M6 × 20	2
62	TS-1503041	Hex-Socket Head Cap Screw	M6× 15	8
63	ETM949-B63	Bearing	51305	1
64	ETM949-B64	Knee Lock Plunger		1
65	TS-1505021	Hex-Socket Head Cap Screw	M10 × 20	2
66	TS-1502021	Hex-Socket Head Cap Screw	M5 × 10	4

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Parts List B - Base (continued)

JET Elite mechanical variable-speed mill; shared parts reference.

Ref.	Part number	Description	Size	Qty.
67	TS-1503031	Cross-Recessed Head Screw	M6 ×12	2
68	ETM949-B68	Rivet Nut	M2×5	4
69	ETM949-B69	Zeroing Point Plate		1
70	ETM949-B70	Nozzle	1/8PT	1
71	ETM949-B71	Washer		1
72	ETM949-B72	Turret-Ram Gib		1
73	TS-1534032	Set Screw	M6×10	1
74	ETM949-B74	Rubber Chip Cover (Front, Wave)		1
75	ETM949-B75	Rubber Chip Cover (Rear, Flat)		1
76	TS-1534041	Cross-Recessed Head Screw	M5×10	8
77	ETM949-B77	Turret Scale		1
78	ETM949-B78	Angle Plate		1
79	ETM949-B79	Auto Lubricator		1
80	TS-1534041	Cross-Recessed Head Screw	M5×10	4
81	ETM949-B81	Coolant Pump 150L * RE: 894092		1
82	TS-1503051	Hex-Socket Head Cap Screw*	M6× 20	4
83	ETM949-B83	Water Pipe Adapter* RE: 894092	3/8PT×3/8HS	1
84	ETM949-B84	Restraint* RE: 894092	5/8”	2
85	ETM949-B85	Water Pipe Adapter* RE: 894092	1/2PT×1/2HS	1
86	ETM949-B86	Insert Connect	3/8PT×7/8HS	1
87	ETM949-B87	High Pressure Connect L-Type	3/8PT×3/8PT	1
88	ETM949-B88	Switch	3/8”	1
89	ETM949-B89	Flexible Steel Coolant Hose	30”	1


Items marked * are optional accessories supplied with coolant system 894092.

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Diagram C - Head

JET Elite mechanical variable-speed mill; shared parts reference.

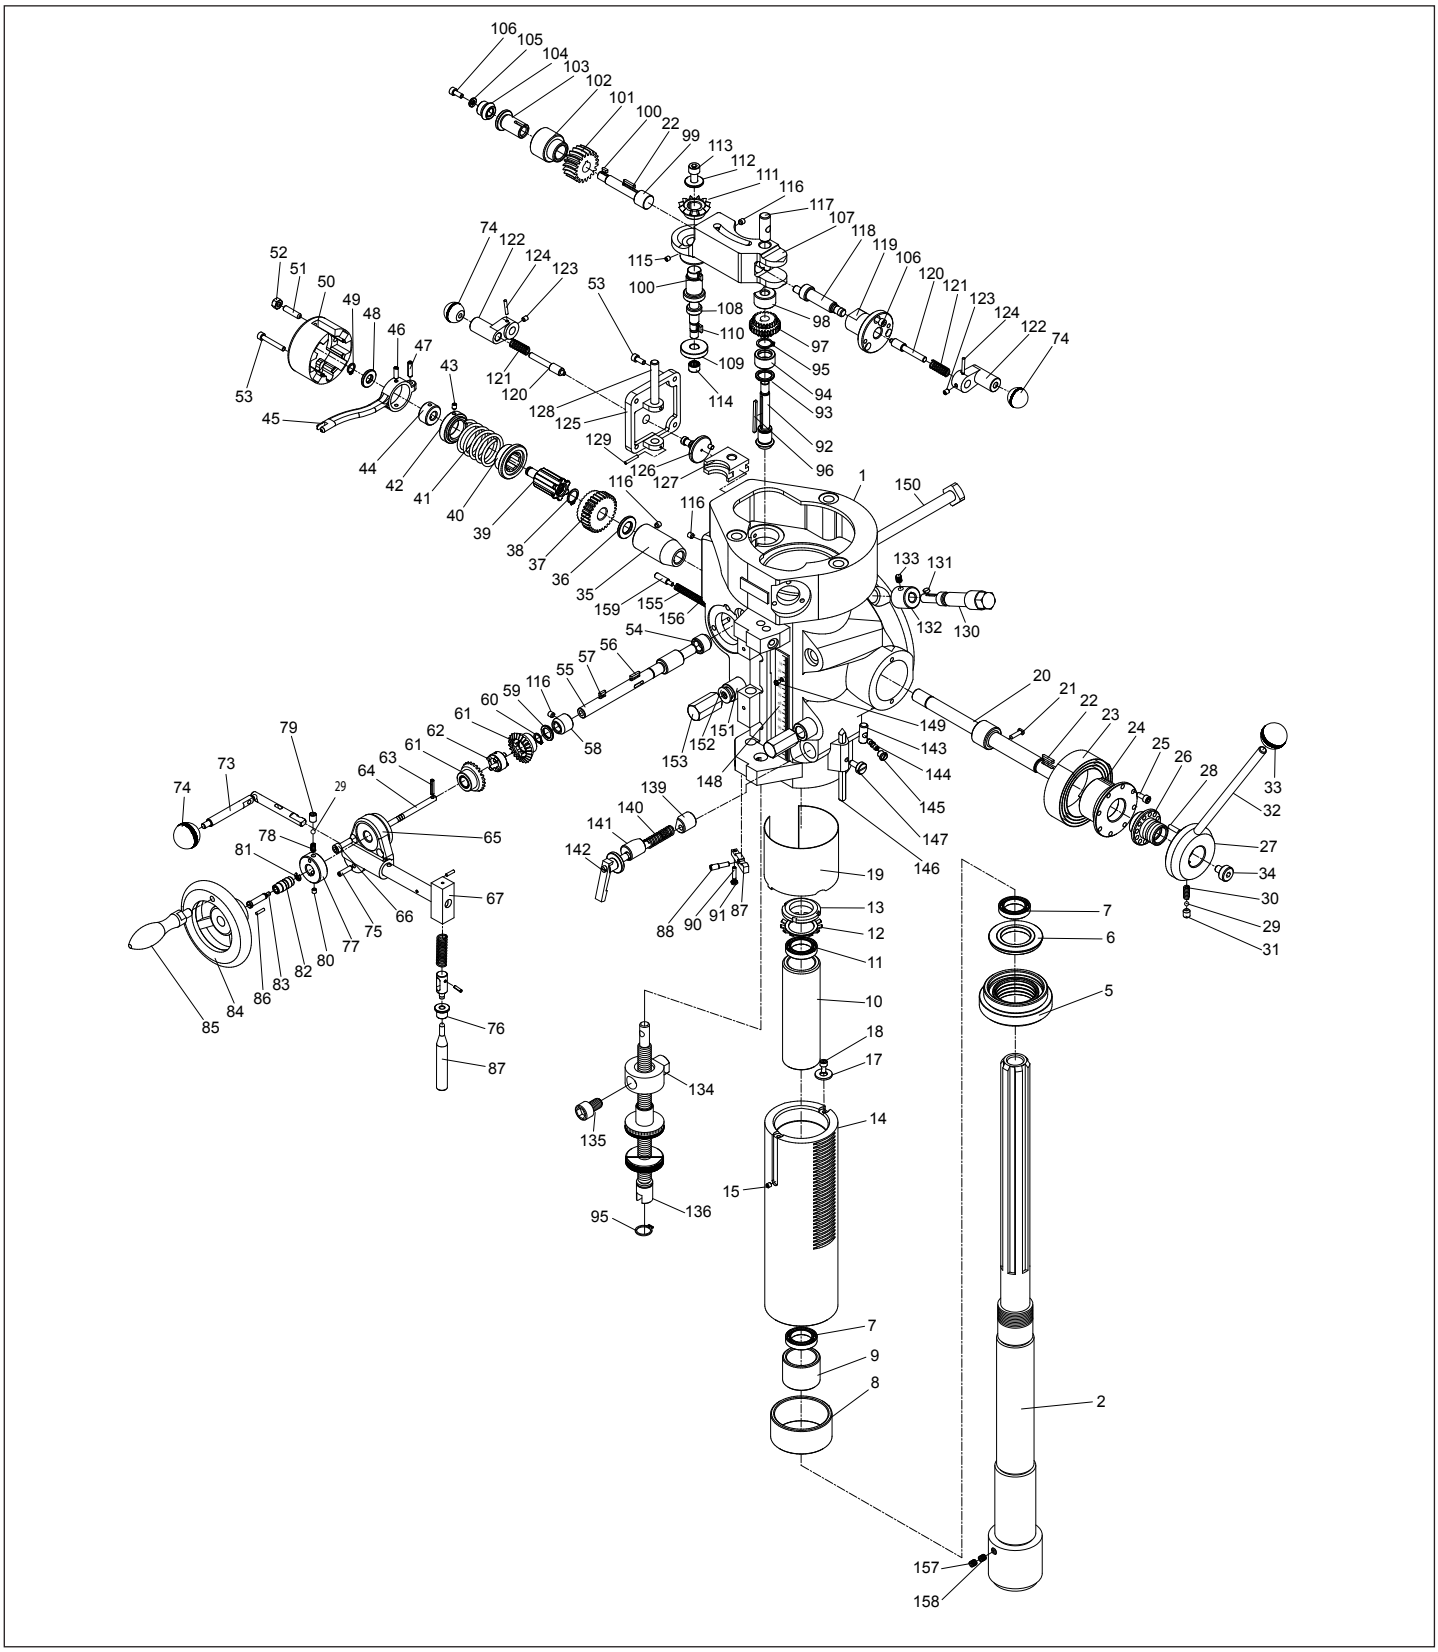

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Parts List C - Head

JET Elite mechanical variable-speed mill; shared parts reference.

Ref.	Part number	Description	Size	Qty.
1	ETM949-C01	Milling Head		1
2	ETM949-C02	Spindle	R8	1
3	ETM949-C03	Stop Block		2
4	TS-0208031	Hex Socket Head Cap Screw	5/16”x5/8”	2
5	ETM949-C05	Nut	R8	1
6	ETM949-C06	Spindle Dirt Shield		1
7	BB-7207	Bearing	7207	2
8A	ETM949-C08A	Bearing Spacer Assembly (Includes #8,9)		1
8	ETM949-C08	Bearing spacer (large)		1
9	ETM949-C09	Bearing spacer (large)		1
10	ETM949-C10	Sleeve		1
11	BB-6206	Bearing	6206	1
12	ETM949-C12	Lock Washer	AW-06	1
13	ETM949-C13	Locknut Washer	(M30)	1
14	ETM949-C14	Quill		1
15	ETM949-C15	Set Screw	M5×5	2
17	TS-1550031	Washer	M5	1
18	TS-1502021	Hex Socket Head Cap Screw	M5×10	2
19	ETM949-C19	Quill Skirt		1
20A	ETM949-C20A	Quill Pinion Shaft Assembly (Includes #20,21)		1
20	ETM949-C20	Quill Pinion Shaft		1
21	ETM949-C21	Pin		1
22	ETM949-C22	Flat Key	3×3×18	1
23	ETM949-C23	Clock Spring		1
24	ETM949-C24	Spring Cover		1
25	TS-1502031	Hex Socket Head Cap Screw	M5×12	2

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Parts List C - Head (continued)

JET Elite mechanical variable-speed mill; shared parts reference.

Ref.	Part number	Description	Size	Qty.
26	ETM949-C26	Pinion Shaft Hub Sleeve		1
27	ETM949-C27	Back Feed Handle Hub (Quill Feed Lever)		1
28	ETM949-C28	Overload Clutch Lever Spring Plunger	Ø5×16”	1
29	ETM949-C29	Steel Ball	3/16”	2
30	ETM949-C30	Compression Spring		1
31	TS-0270031	Set Screw	5/16”×3/8”	1
32	ETM949-C32	Pinion Shaft Hub Handle		1
33	ETM949-C33	Black Plastic Ball	3/8”	1
34	ETM949-C34	Pinion Shaft Hub Screw		1
35	ETM949-C35	Quill Pinion Shaft Bushing		1
36	ETM949-C36	Quill Pinion Shaft Worm Gear Spacer		1
37	ETM949-C37	Overload Clutch Worm Gear		1
38	ETM949-C38	Snap Ring C-Type	S-15	1
39A	ETM949-C39A	Overload Clutch Assembly (Includes #39,40,42)		1
39	ETM949-C39	Over Load Clutch		1
40	ETM949-C40	Overload Clutch		1
41	ETM949-C41	Safety Clutch Spring		1
42	ETM949-C42	Overload Clutch Locknut		1
43	ETM949-C43	Set Screw	M5×5	1
44	ETM949-C44	Clutch Ring		1
45	ETM949-C45	Overload Clutch Trip Lever		1
46	ETM949-C46	Clutch Ring Pin		2
47	ETM949-C47	Overload Clutch Lever Spring Plunger	Ø5×18	1
48	ETM949-C48	Overload Clutch Washer		1
49	ETM949-C49	Snap Ring C-Type	S-10	1
50	ETM949-C50	Clutch Arm Cover		1
51	TS-0267071	Set Screw	1/4”×3/4”	1

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Parts List C - Head (continued)

JET Elite mechanical variable-speed mill; shared parts reference.

Ref.	Part number	Description	Size	Qty.
52	TS-0561011	Nut	1/4”	1
53	TS-1502081	Hex Socket Head Cap Screw	M5×35	2
54	ETM949-C54	Bushing		1
55	ETM949-C55	Feed Worm Shaft		1
56	ETM949-C56	Flat Key	3×3×15	1
57	ETM949-C57	Flat Key	3×3×10	1
58	ETM949-C58	Feed Worm Shaft Bushing		1
59	ETM949-C59	Feed Worm Shaft Thrust Washer		1
60	ETM949-C60	Snap Ring C-Type	S-12	1
61	ETM949-C61	Feed Reverse Bevel Gear		2
62	ETM949-C62	Feed Reverse Clutch		1
63	ETM949-C63	Overload Clutch Lever Spring Plunger	Ø3×20	1
64	ETM949-C64	Reverse Clutch Rod		1
65	ETM949-C65	Feed Trip Bracket		1
66	TS-1503051	Hex Socket Head Cap Screw	M6×20	2
67	ETM949-C67	Cam Rod Sleeve Assembly		1
73	ETM949-C73	Trip Handle		1
74	ETM949-C74	Black Plastic Ball 1/4” Dia	1/4”	3
75	ETM949-C75	Overload Clutch Lever Spring Plunger	Ø5×20	1
76	ETM949-C76	Trip Plunger Bushing		1
77	ETM949-C77	Hand wheel Clutch		1
78	ETM949-C78	Compression Spring		1
79	ETM949-C79	Hand wheel Clutch Spring Screw		1
80	TS-0267021	Set Screw	1/4”×1/4”	1
81A	ETM949-C81A	Feed Reverse Knob Assembly (Includes #81,82,83)		1
81	ETM949-C81	Snap Ring E-Type	E5	1
82	ETM949-C82	Feed Reverse Knob Stud		1

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Parts List C - Head (continued)

JET Elite mechanical variable-speed mill; shared parts reference.

Ref.	Part number	Description	Size	Qty.
83	ETM949-C83	Feed Reverse Knob Stud Bolt		1
84A	ETM949-C84A	Hand wheel & Hand wheel Handle Assembly (#84,85)		1
84	ETM949-C84	Hand wheel & Hand wheel Handle		1
85	ETM949-C85	Handle	M8 P1.25	1
86	ETM949-C86	Overload Clutch Lever Spring Plunger	Ø3×16	1
87	ETM949-C87	Feed Trip Plunger		1
88	ETM949-C88	Trip Lever Pin		1
89	ETM949-C89	Feed Trip Lever		1
90	TS-1521071	Set Screw	M4×20	1
91	TS-1540021	Nut	M4	1
92	ETM949-C92	Cluster Gear Shaft		1
93	ETM949-C93	Bevel Gear Thrust Spacer		1
94	ETM949-C94	Bevel Gear Bushing		1
95	ETM949-C95	Snap Ring C-Type	S-16	2
96	ETM949-C96	Flat Key	3×3×45	1
97	ETM949-C97	Cluster Gear		1
98	ETM949-C98	Cluster Gear Shaft Upper Bushing		1
99	ETM949-C99	Feed Drive Worm Gear Shaft		1
100	ETM949-C100	Flat Key	3×3××8	2
101	ETM949-C101	Feed Drive Worm Gear		1
102	ETM949-C102	Worm Cradle Bushing		1
103	ETM949-C103	Feed Worm Gear Shaft Sleeve		1
104	ETM949-C104	Feed Bevel Pinion		1
105	ETM949-C105	Washer		1
106	TS-1502031	Hex Socket Head Cap Screw	M5×12	1
107	ETM949-C107	Worm Gear Cradle		1
108A	ETM949-C108A	Feed Driving Gear Assembly (includes #108, 110)		1

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Parts List C - Head (continued)

JET Elite mechanical variable-speed mill; shared parts reference.

Ref.	Part number	Description	Size	Qty.
108	ETM949-C108	Feed Driving Gear		1
109	ETM949-C109	Feed Drive Gear		1
110	ETM949-C110	Flat Key	3×3×10	1
111	ETM949-C111	Feed Reverse Bevel Gear		1
112	ETM949-C112	Washer		1
113	TS-1504031	Hex Socket Head Cap Screw	M8×16	1
114	ETM949-C114	Bearing	BA66	1
115	ETM949-C115	Set Screw M6x25		1
116	TS-1523011	Set Screw	M6×6	3
117	ETM949-C117	Feed Engage Pin		1
118	ETM949-C118	Worm Gear Cradle Throw-Out		1
119	ETM949-C119	Shift Sleeve		1
120	ETM949-C120	Gear Shift Plunger		1
121	ETM949-C121	Compression Spring		1
122	ETM949-C122	Shift Crand		2
123	TS-0267021	Set Screw	1/4”×1/4”	2
124	ETM949-C124	Overload Clutch Lever Spring Plunger	3×20	2
125	ETM949-C125	Cluster Gear Cover		1
126	ETM949-C126	Cluster Gear Shift Crank		1
127	ETM949-C127	Feed Gear Shift Fork		1
128	ETM949-C128	Feed Shift Rod		1
129	ETM949-C129	Overload Clutch Lever Spring Plunger	3×18	1
130	ETM949-C130	Adj Worm Shaft		1
131	ETM949-C131	Flat Key	4×4×18	1
132	ETM949-C132	Warm Gear		1
133	ETM949-C133	Set Screw		1
134	ETM949-C134	Quill Stop Knob		1

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Parts List C - Head (continued)

JET Elite mechanical variable-speed mill; shared parts reference.

Ref.	Part number	Description	Size	Qty.
135	TS-0209021	Hex Socket Head Cap Screw	3/8”×5/8”	1
136	ETM949-C136	Quill Stop Micro-Screw (Meter)		1
139	ETM949-C139	Quill Lock Sleeve		1
140	ETM949-C140	Springs		2
141	ETM949-C141	Quill Lock Sleeve Tapped		1
142	ETM949-C142	Quill Lock Bolt & Spring	5/16”-18UNC	1
143	ETM949-C143	Feed Reverse Trip Plunger		1
144	ETM949-C144	Reverse Trip Ball Lever		1
145	ETM949-C145	Reverse Trip Ball Lever Screw		1
146	ETM949-C146	Indicator Rod		1
147	ETM949-C147	Indicator Rod Screw		1
148	ETM949-C148	Micrometer Scale(Inch)		1
149	ETM949-C149	Cross-Recessed Head Screw	1/8”×3/16”	1
150	ETM949-C150	Tee Bolt	1/2”-12 Nc	4
151	ETM949-C151	Lower Clamping Bolt Spacer		2
152	TS-0680061	Washer	1/2”	4
153	ETM949-C153	Adaptor Nut	1/2”-12nc	4
155	ETM949-C155	Hex-Socket Head Cap Screw	M4x15	1
156	ETM949-C156	Compression Spring		1
157	ETM949-C157	Special Socket Set Screw		1
158	ETM949-C158	Set Screw	M6×5	1
159	ETM949-C159	Overload Clutch Lever Spring Plunger		1
160	ETM949-C160	Draw bar w/washer (not shown)		1
	ETM949-HA	Complete Mill Head Assembly (logo, labels, upper head, lower head parts) with Motor		
	ETM949-HAWOM	Complete Mill Head Assembly (logo, labels, upper head, lower head parts) without Motor		
	ETM949EVS-HA	Complete Mill Head Assembly (logo, labels, upper head, lower head parts) with Motor		
	ETM949EVS-HAWOM	Complete Mill Head Assembly (logo, labels, upper head, lower head parts) without Motor		


Blank quantities are blank in the original JET parts list.

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Diagram D - Upper Head - ETM-949

JET Elite mechanical variable-speed mill; shared parts reference.

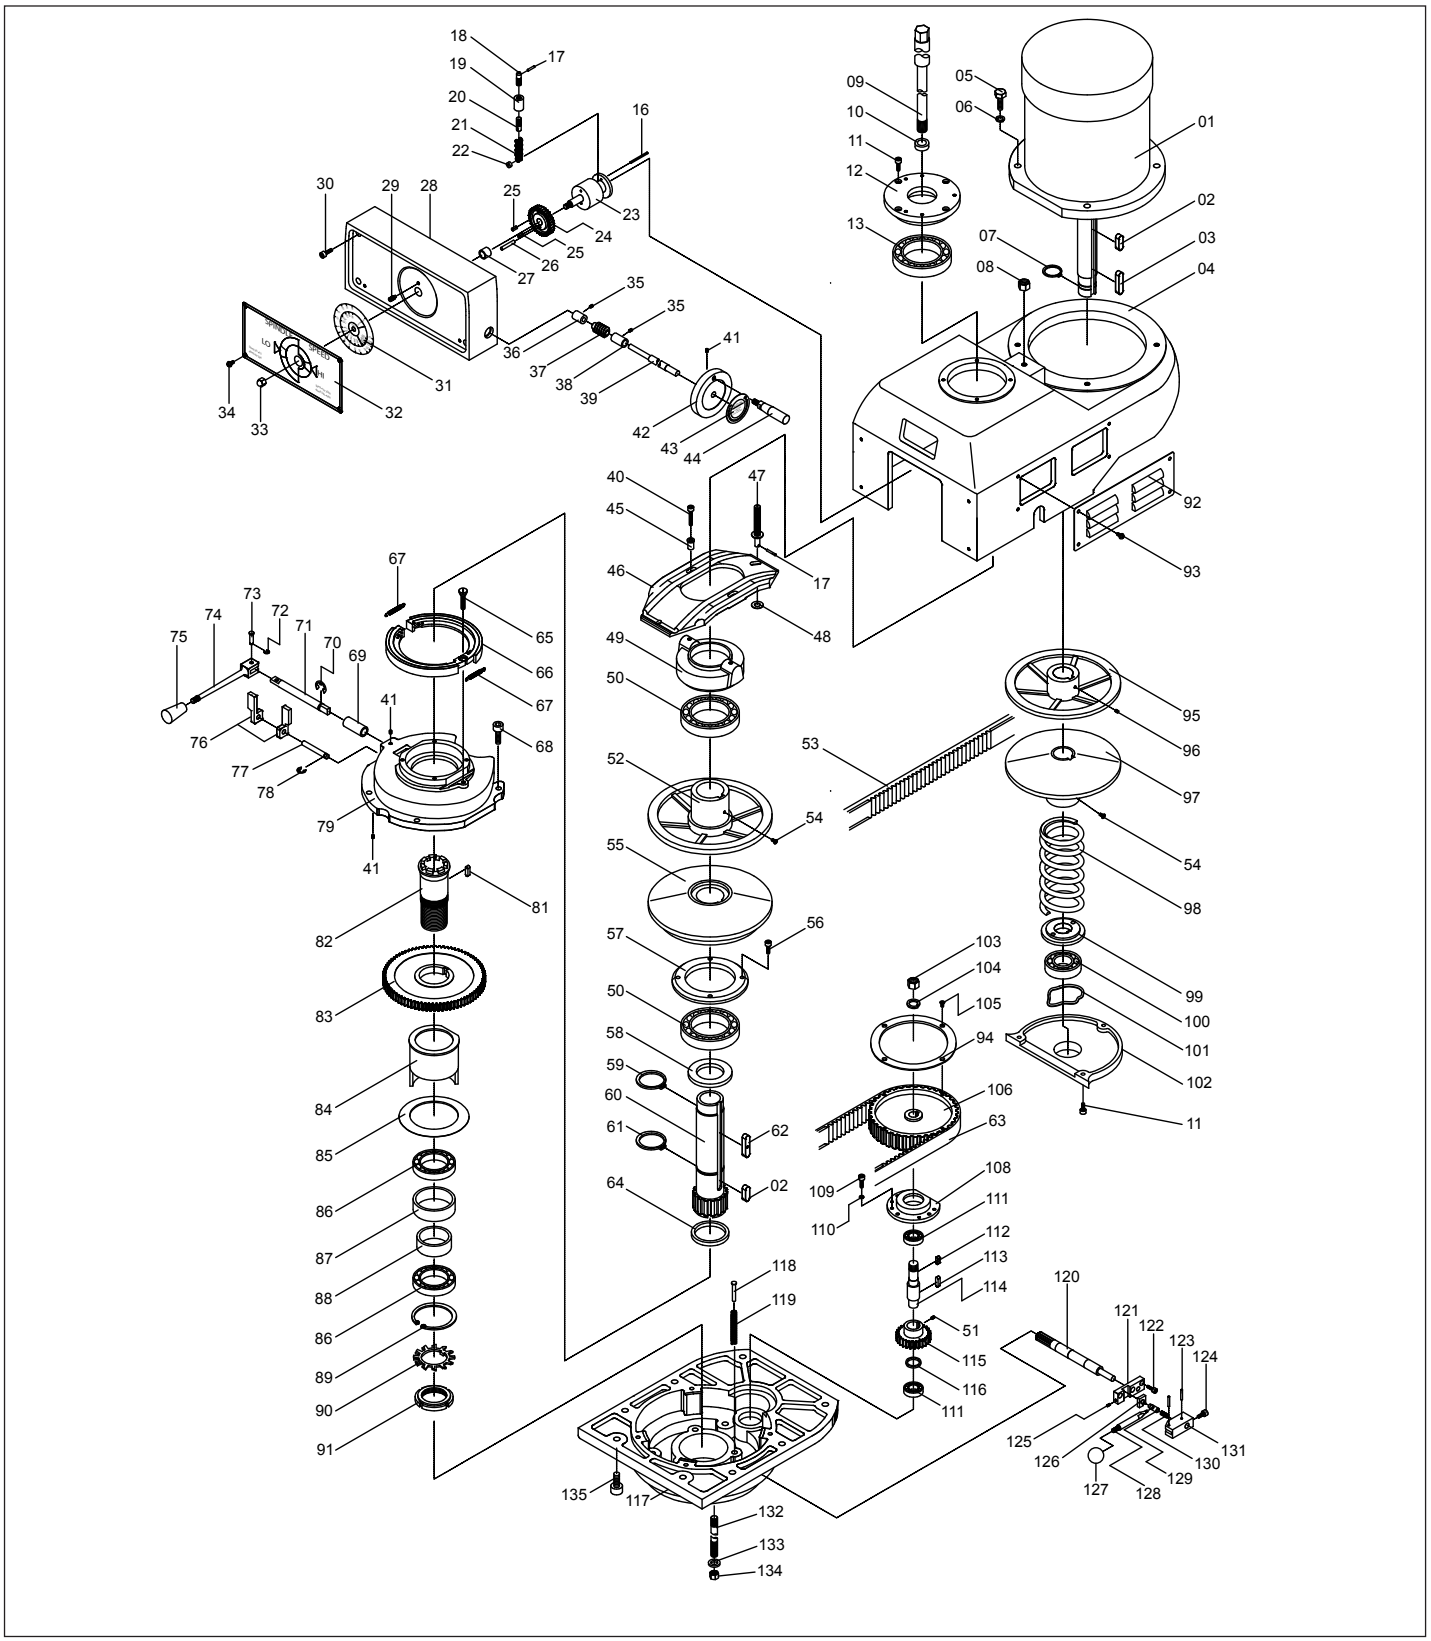

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Parts List D - Upper Head - ETM-949

JET Elite mechanical variable-speed mill; shared parts reference.

Ref.	Part number	Description	Size	Qty.
1	ETM949-D01	Motor		1
	ETM949-D01A	Motor With Pulley Assembly (includes # 1,2,3,7,54,95-99)		1
2	ETM949-D02	Key	10×8×10	2
3	ETM949-D03	Key		1
4	ETM949-D04	Upper Pulley Box		1
5	TS-0209051	Screw	3/8”×1”	2
6	TS-0733061	Spring Washer	3/8”	4
7	ETM949-D07	Snap Ring C-Type	S-30	2
8	TS-0561031	Nut	3/8”	1
	ETM949-D09A	Draw Bar w/ Nut Assembly(included # 9-10)	7/16”-20UNF	1
9	ETM949-D09	Draw Bar Nst#30 1/2” 12unf		1
10	ETM949-D10	Washer (NT#30) S45C/cm		1
11	TS-1503051	Hex Socket Head Cap Screw	M6×20	4
12	ETM949-D12	Top Bearing Bracket		1
13	BB-6007	Ball Bearing	6007	1
16	ETM949-D16	Hi-Low Detent Plunger	Ø3×40	1
17	ETM949-D17	Hi-Low Detent Plunger	Ø4×20	1
18	ETM949-D18	Speed Change Chain Stud		1
19	ETM949-D19	Speed Change Chain Stud		1
20	ETM949-D20	Speed Change Chain Stud		1
21	ETM949-D21	Chain	#35-8P	1
22	ETM949-D22	Chain Washer		1
23	ETM949-D23	Speed Change Chain Drum		1
24	ETM949-D24	Feed Drive Worm Gear		1
25	ETM949-D25	Hi-Low Detent Plunger	Ø5×10	2
26	ETM949-D26	Hi-Low Detent Plunger	Ø5×30	1

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Parts List D - Upper Head - ETM-949 (continued)

JET Elite mechanical variable-speed mill; shared parts reference.

Ref.	Part number	Description	Size	Qty.
27	ETM949-D27	Bushing		1
28	ETM949-D28	Speed Change Housing		1
29	ETM949-D29	Lock Screw		1
30	TS-1503081	Hex Socket Head Cap Screw	M6×35	4
31	ETM949-D31	Vari Speed Dial 60 Hz		1
32	ETM949-D32	Speed Ind. Plate		1
33	TS-0561021	Nut	5/16”	1
34	ETM949-D34	Type III Phillips Screws	M4×6	4
35	TS-1522011	Set Screw	M5×6	3
36	ETM949-D36	Compression Spring		1
37	ETM949-D37	Worm		1
38	ETM949-D38	Worm Cradle Bushing		1
39	ETM949-D39	Speed Control Shaft		1
40	TS-1502051	Hex Socket Head Cap Screw	M5×20	2
41	TS-1523011	Set Screw	M6×6	3
42	ETM949-D42	Handle		1
43	ETM949-D43	Speed Change Warring Plate		1
44	ETM949-D44	Handle	5/16”-18UNC	1
45	ETM949-D45	Pivot Sleeve		2
46	ETM949-D46	Speed Change Plate		1
47	ETM949-D47	Speed Change Plate Pivot Stud		1
48	ETM949-D48	Clutch Washer	10.2×21×1.2	1
49	ETM949-D49	Sliding Housing		1
50	BB-6010	Ball Bearing	6010	2
51	ETM949-D51	Set Screw	M8×6	1
52	ETM949-D52	Adj. Driven Vari-Disc Assembly		1
53	ETM949-D53	Belt 38X890		1

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Parts List D - Upper Head - ETM-949 (continued)

JET Elite mechanical variable-speed mill; shared parts reference.

Ref.	Part number	Description	Size	Qty.
54	TS-2245081	Screw	M5×8	2
55	ETM949-D55	Stationary Driven Vari-Disc		1
56	TS-1503051	Hex Socket Head Cap Screw	M6×20	4
57	ETM949-D57	Brake Brg. Cap		1
58	ETM949-D58	Spindle Pulley Spacer		1
59	ETM949-D59	Snap Ring C-Type	S-35	1
60	ETM949-D60	Spindle Clutch Device		1
61	ETM949-D61	Snap Ring C-Type	S-40	1
62	ETM949-D62	Sliding Key		1
63	ETM949-D63	Timing Belt 225l		1
64	ETM949-D64	Timing Pulley Clutch Sleeve		1
65	ETM949-D65	Brake Ring Screw		1
66	ETM949-D66	Brake Shoe		1
67	ETM949-D67	Brake Spring		2
68	TS-1504041	Hex Socket Head Cap Screw	M8×20	3
69	ETM949-D69	Sleeve For Brake		1
70	ETM949-D70	Snap Ring C-Type	S-12	1
71	ETM949-D71	Brake Lock Shaft		1
72	ETM949-D72	Snap Ring E-Type	E-4	1
73	ETM949-D73	Brake Lock Pin, S45C		1
74	ETM949-D74	Brake Lock & Handle		1
75	ETM949-D75	Black Plastic Ball Handle	5/16”-18UNC	1
76	ETM949-D76	Brake Finger Pivot Stud		2
77	ETM949-D77	Brake Operation Finger		1
78	ETM949-D78	Snap Ring E-Type	E-6	1
79	ETM949-D79	Brake Base		1
81	ETM949-D81	Key	8×12	1

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Parts List D - Upper Head - ETM-949 (continued)

JET Elite mechanical variable-speed mill; shared parts reference.

Ref.	Part number	Description	Size	Qty.
82	ETM949-D82	Spindle Pulley Hub		1
83	ETM949-D83	Spindle Bull Gear Assembly		1
84	ETM949-D84	Bull Gear Bearing Sleeve		1
85	ETM949-D85	Bull Gear Bearing Sleeve Washer		1
86	BB-6908	Ball Bearing	6908	2
87A	ETM949-D87A	Bull Gear Bearing Spacer Assembly (includes #87,88)		1
87	ETM949-D87	Bull Gear Bearing Spacer		1
88	ETM949-D88	Bull Gear Bearing Spacer		1
89	ETM949-D89	Snap Ring C-Type	R-62	1
90	ETM949-D90	Spacer	AW08	1
91	ETM949-D91	Bearing Lock Nut		1
92	ETM949-D92	Side Belt Housing Cover		2
93	ETM949-D93	Cross-Recessed Head Screw	M6×8	8
94	ETM949-D94	Timing Belt Pulley Flange		1
95	ETM949-D95	Stationary Motor Vari-Disc		1
96	TS-1523021	Set Screw	M6×8	1
97	ETM949-D97	Adj.Motor Vari-Disc		1
98	ETM949-D98	Spring		1
99	ETM949-D99	Spring Washer		1
100	BB-6204	Ball Bearing	6204	1
101	ETM949-D101	Washer	6204	1
102	ETM949-D102	Motor Pulley Cover		1
103	TS-0561071	Nut	5/8”	1
104	TS-0680081	Washer	5/8”	1
105	ETM949-D105	Countersunk Screws	M5×8	4
106	ETM949-D106	Pullet Set		1
108	ETM949-D108	Cover		1

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Parts List D - Upper Head - ETM-949 (continued)

JET Elite mechanical variable-speed mill; shared parts reference.


Ref.	Part number	Description	Size	Qty.
109	TS-1502041	Hex Socket Head Cap Screw	M5×16	3
110	TS-1550031	Washer	M5	3
111	BB-6203	Ball Bearing	6203	2
112	ETM949-D112	Key	5×15	1
113	ETM949-D113	Key	5×18	1
114	ETM949-D114	Bull Gear Pinion Counter Shaft		1
115	ETM949-D115	Bull Gear Pinion Counter Gear		1
116	ETM949-D116	Spacer		1
117	ETM949-D117	Gear Housing		1
118	ETM949-D118	Spring Supported Pin		3
119	ETM949-D119	Spring		3
120	ETM949-D120	Bull Gear Shifter Pinion Shaft		1
121	ETM949-D121	Hi-Low Detent Plate		1
122	TS-1502031	Hex Socket Head Cap Screw	M5×12	2
123	ETM949-D123	Hi-Low Detent Plunger	Ø3×20	2
124	TS-1503031	Hex Socket Head Cap Screw	M6×16	1
125	TS-1521051	Set Screw	M4×16	1
126	ETM949-D126	Adj. Plate		1
127	ETM949-D127	Black Plastic Ball 1/4” Dia	1/4”-20UNC	1
128	ETM949-D128	Hi-Low Shift Crank		1
129	ETM949-D129	Hi-Low Detent Plunger		1
130	ETM949-D130	Spring		1
131	ETM949-D131	Hi-Low Pinion Block		1
132	ETM949-D132	Studs		3
133	ETM949-D133	Washer		3
134	TS-0561041	Nut	7/16”	3
135	TS-1504051	Hex Socket Head Cap Screw	M8x25	6

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Diagram E - Electrical Assembly - ETM-949

JET Elite mechanical variable-speed mill; shared parts reference.

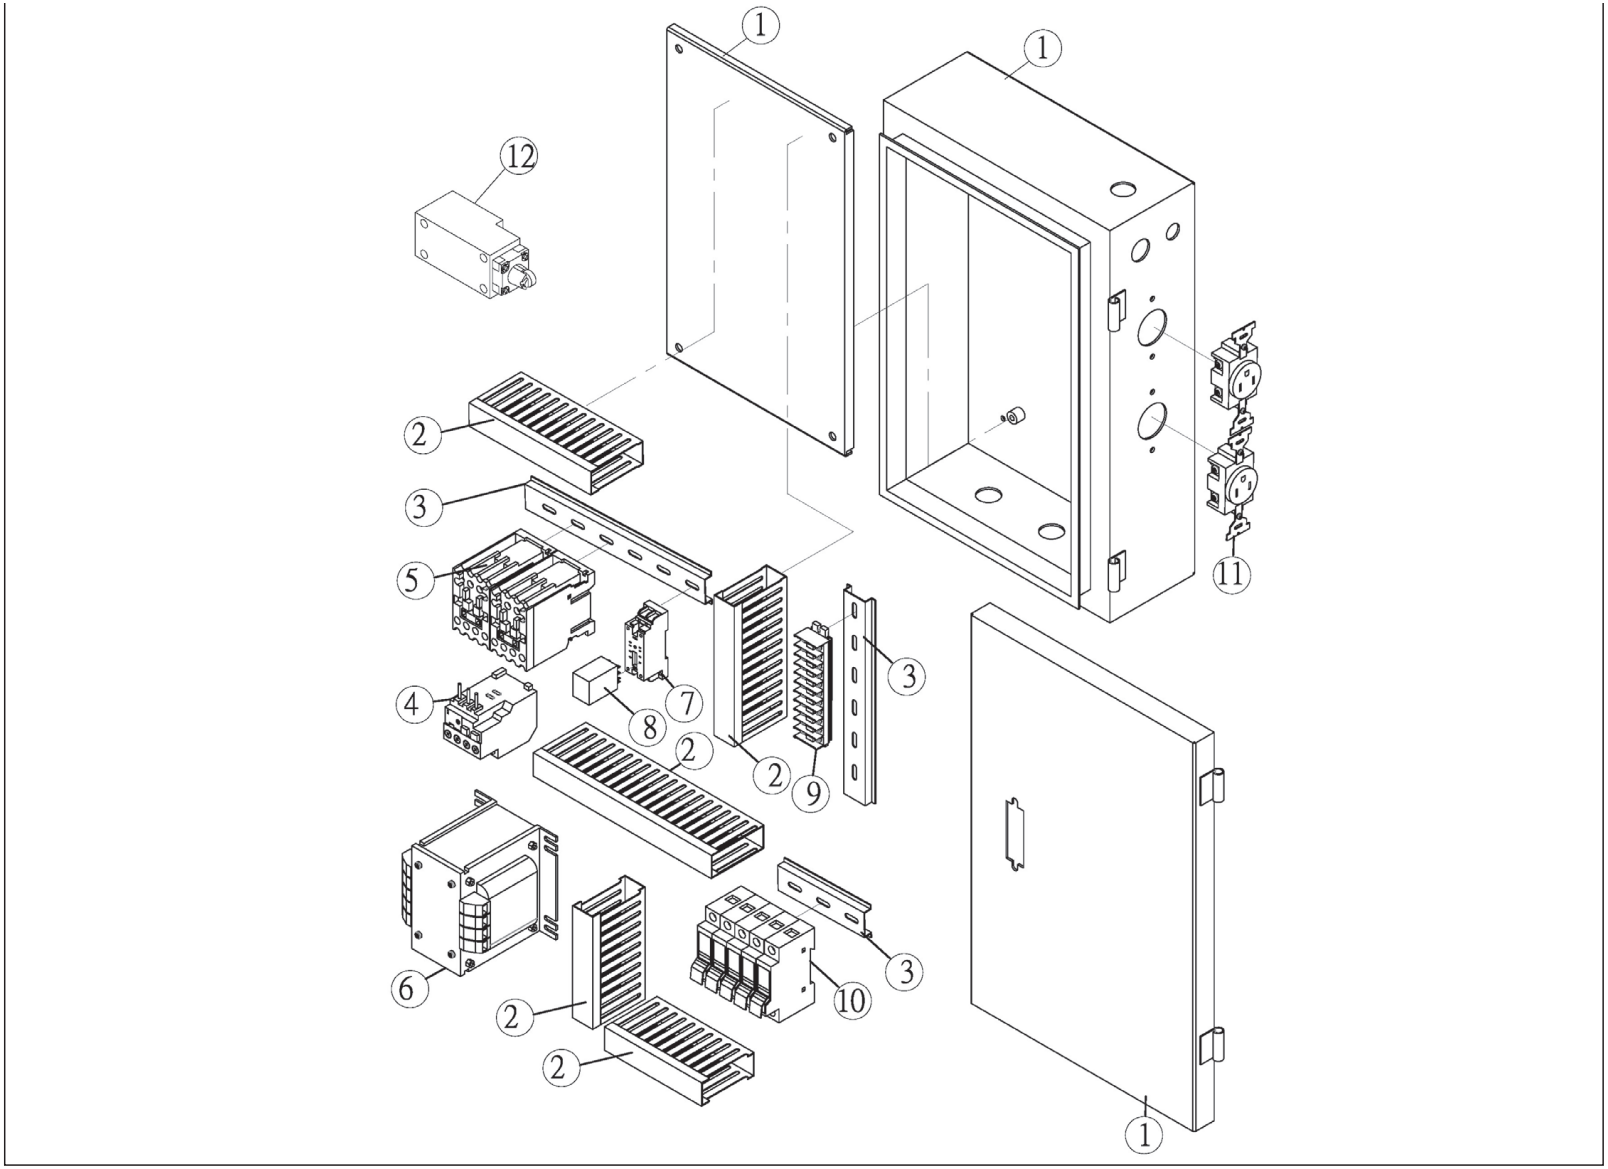

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Parts List E - Electrical Assembly - ETM-949

JET Elite mechanical variable-speed mill; shared parts reference.


Ref.	Part number	Description	Size	Qty.
1	ETM949-E01	Electric Box Assembly		1
2	ETM949-E02	Wire Housing		3
3	ETM949-E03	Aluminum Plate		2
4	ETM949-E04	Overload (ETM949 only)	7.2-10A	1
5	ETM949-E05	Magnetic Switch	CU11	1
6	ETM949-E06	Transformer		1
7	ETM949-E07	Relay Switch Base		1
8	ETM949-E08	Relay Switch		1
9	ETM949-E09	Terminal Block Plate		1
10	ETM949-E10	Fuse Base		5
	ETM949-F2A	Fuse (not shown)	2A	1
	ETM949-F4A	Fuse (not shown)	4A	1
	ETM949-F20A	Fuse (not shown)	20A	3
11	ETM949-E11	Power Socket		2
12	ETM949-E19	Limit Switch		1

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Diagram F - Control Panel

JET Elite mechanical variable-speed mill; shared parts reference.

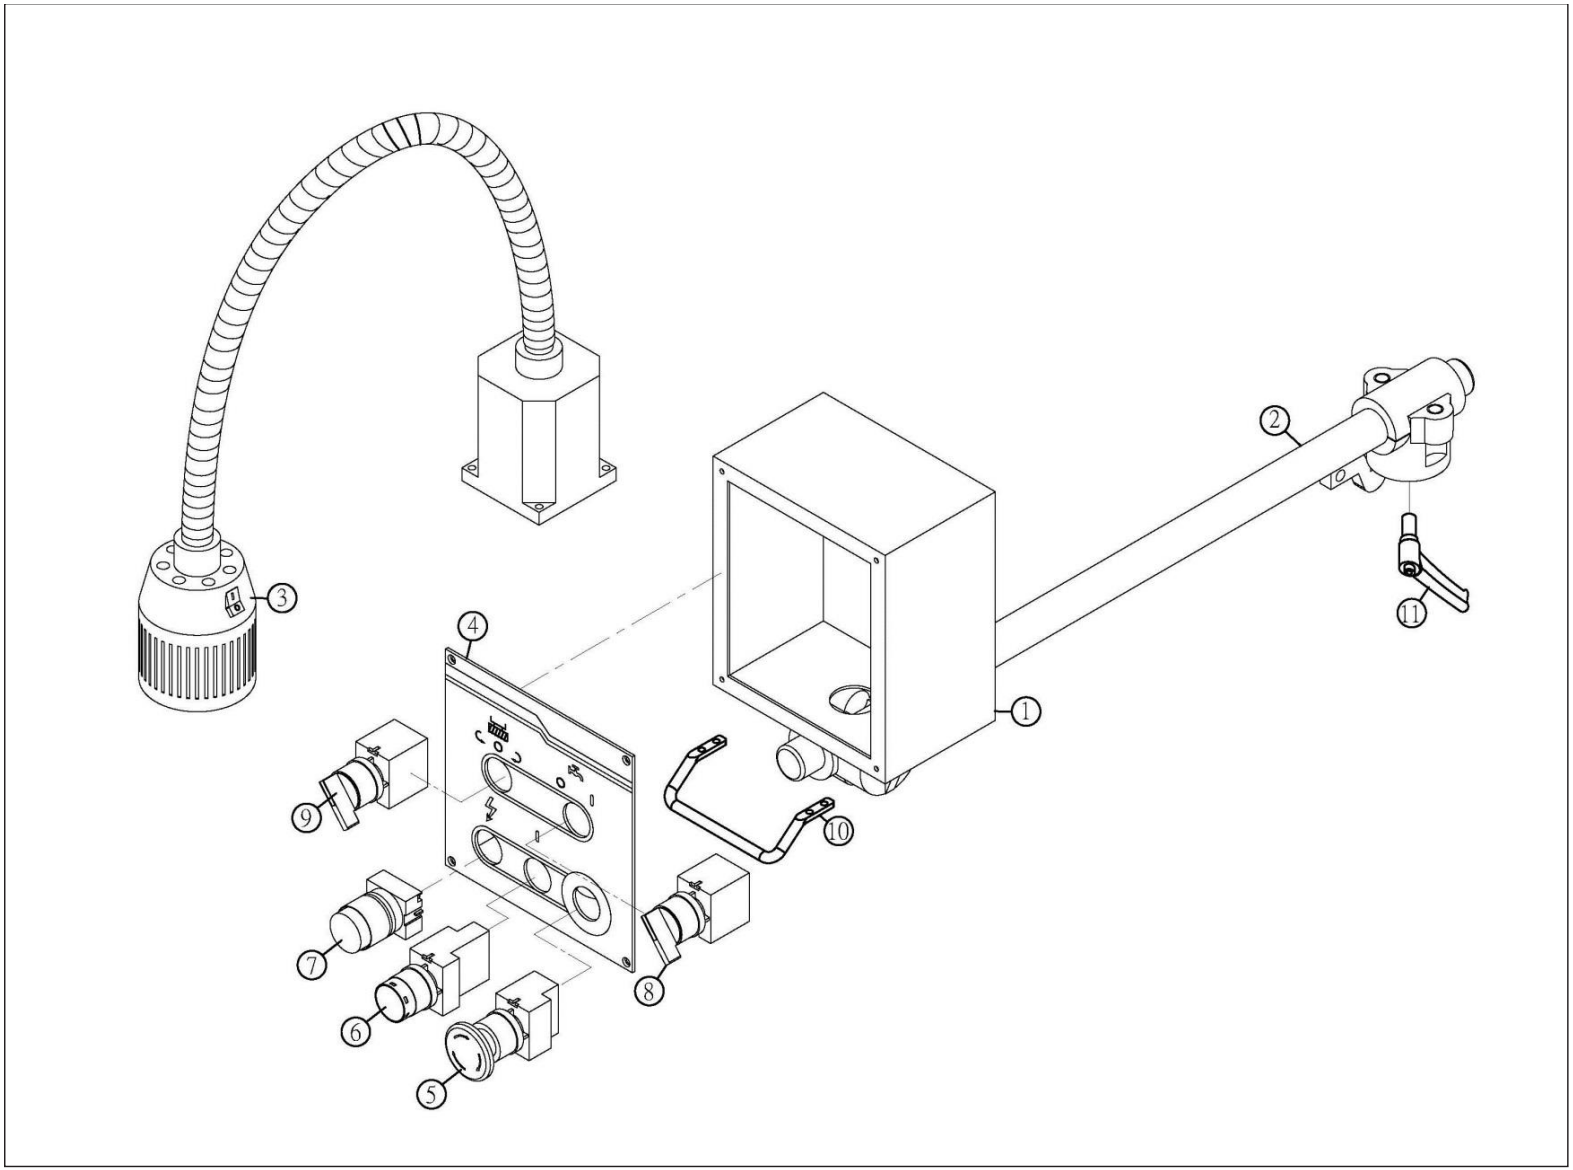

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Parts List F - Control Panel

JET Elite mechanical variable-speed mill; shared parts reference.

Ref.	Part number	Description	Size	Qty.
1	ETM949-G01	Control Panel Box		1
2	ETM949-G02	Support Bar Assembly		1
3	ETM949-G03	Work Lamp		1
4	ETM949-G04	Control Panel label		1
5	ETM949-G05	Emergent Switch		1
6	ETM949-G06	Start Switch		1
7	ETM949-G07	Power Light		1
8	ETM949-G08	Coolant Pump Switch *		1
9	ETM949-G09	F/R Switch		1
10	ETM949-G10	Handle		1
11	ETM949-G11	Knob		1


Items marked * are optional accessories supplied with coolant system 894092.

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Diagram G - Spindle Guard

JET Elite mechanical variable-speed mill; shared parts reference.

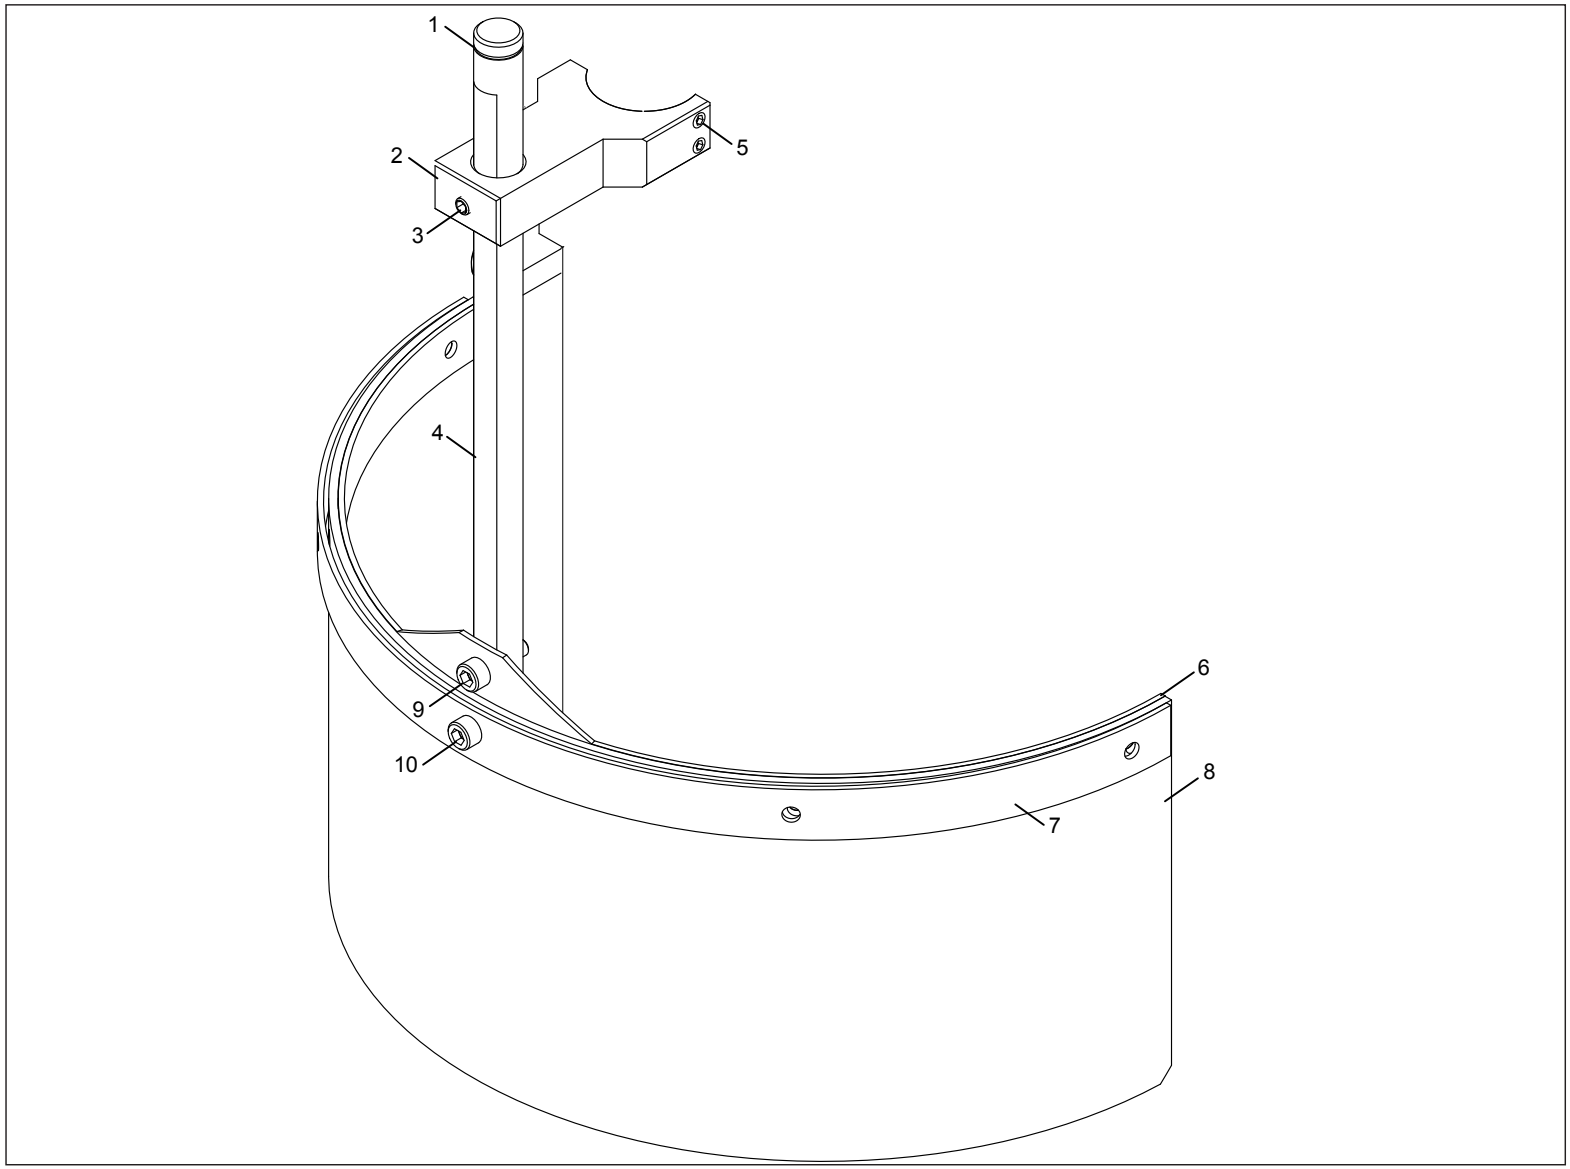

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Parts List G - Spindle Guard

JET Elite mechanical variable-speed mill; shared parts reference.


Ref.	Part number	Description	Size	Qty.
1	ETM949-C95	Snap Ring C-Type	S-16	1
2	ETM949-H02	Cover		1
3	TS-1503021	Set Screw	M6x10	1
4	ETM949-H04	Shaft		1
5	TS-1502051	Hex Socket Head Cap Screw	M5x20	1
6	ETM949-H06	Guard mounting plate (I)		1
7	ETM949-H07	Guard mounting plate (II)		1
8	ETM949-H08	Guard		1
9	ETM949-H09	Hex Socket Head Cap Screw	M6x15	1
10	TS-1503051	Hex Socket Head Cap Screw	M6x20	1

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Diagram H - Lubrication System

JET Elite mechanical variable-speed mill; shared parts reference.

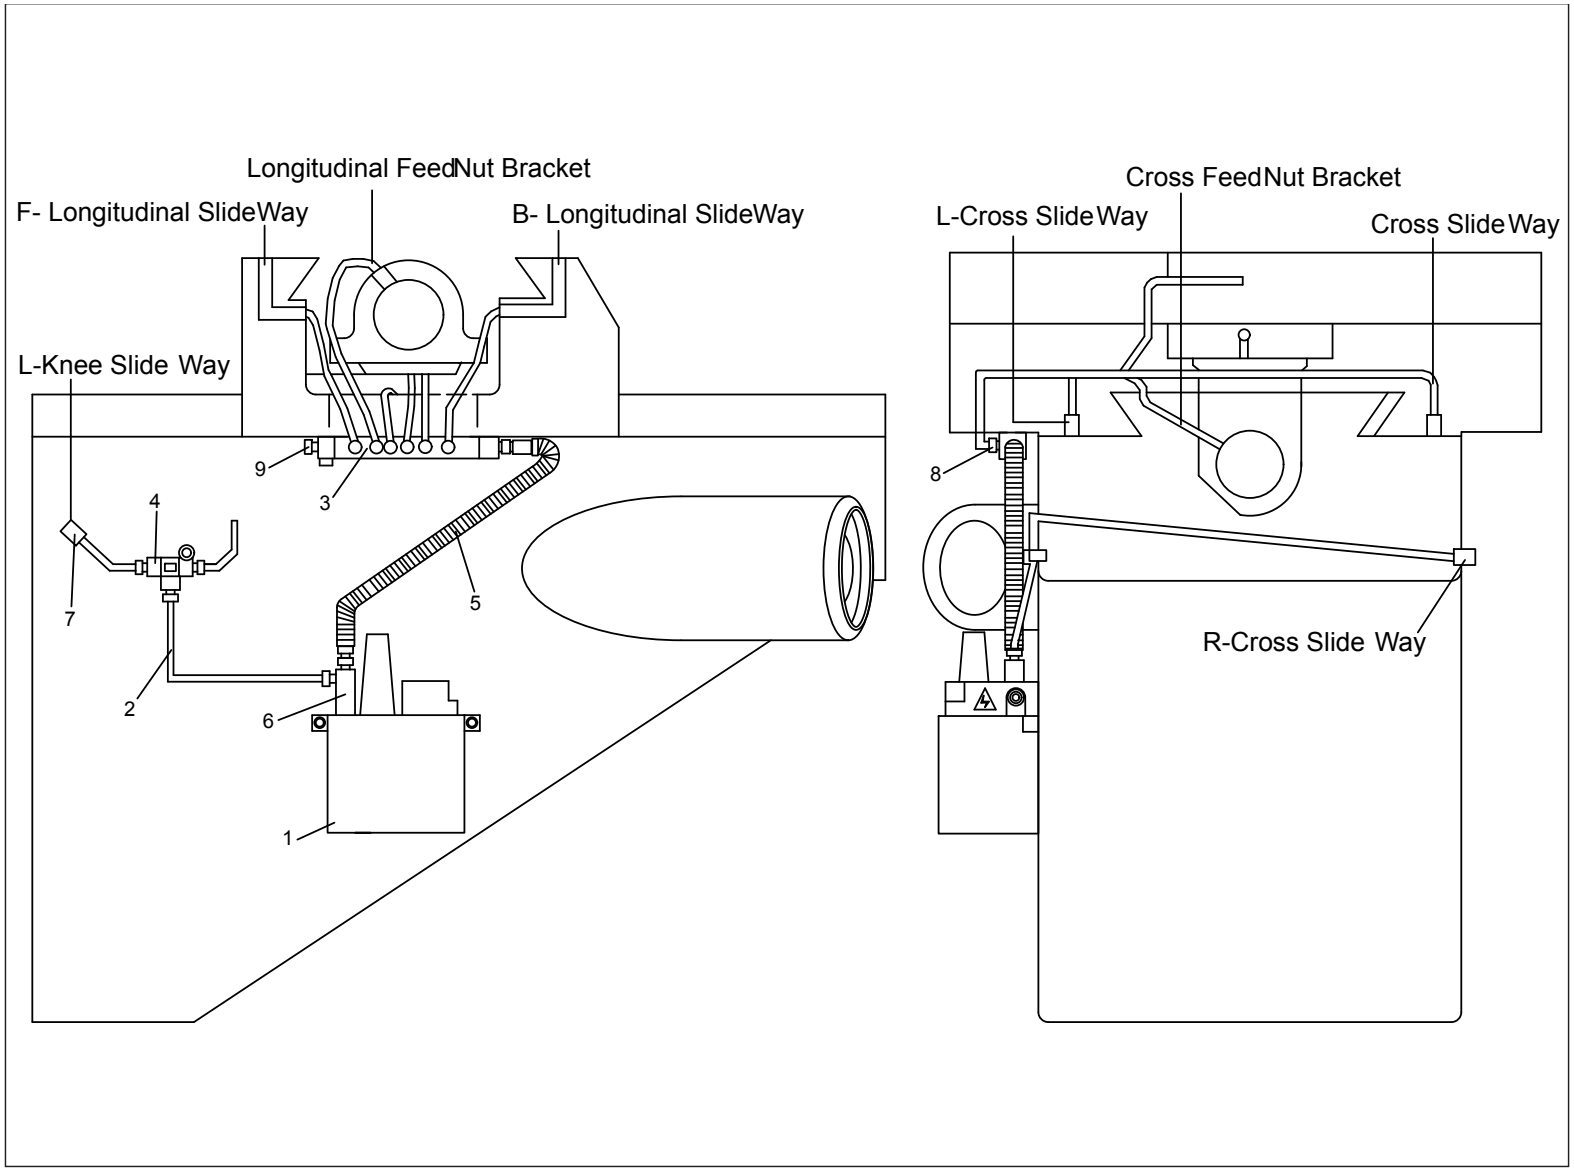

mmToolParts
Big Time Experience. Small Town Service. .com

JET ETM-949 | Stock 894010

Parts List H - Lubrication System

JET Elite mechanical variable-speed mill; shared parts reference.

Ref.	Part number	Description	Size	Qty.
1	ETM949-B79	Automatic Oiler		1
2	ETM949-I02	Aluminum Pipe		1
3	ETM949-I03	Oil Regulating Distributor		1
3A	ETM949-I03A	Oil Regulating Distributor Assembly (includes #3-5, 7-9)		1
4	ETM949-I04	T-Joint		1
5	ETM949-I05	Flexible Steel Tube		1
6	ETM949-I06	Check Joint		2
7	ETM949-I07	Elbow Joint		2
8	ETM949-I08	Straight Joint		14
9	ETM949-I09	Union		1

mmToolParts
Big Time Experience. Small Town Service. .com