
JET L-100-50WO-20 | Stock 205120

Diagram A - L100-50 Chain Hoist

Chain Hoist | Original JET parts reference

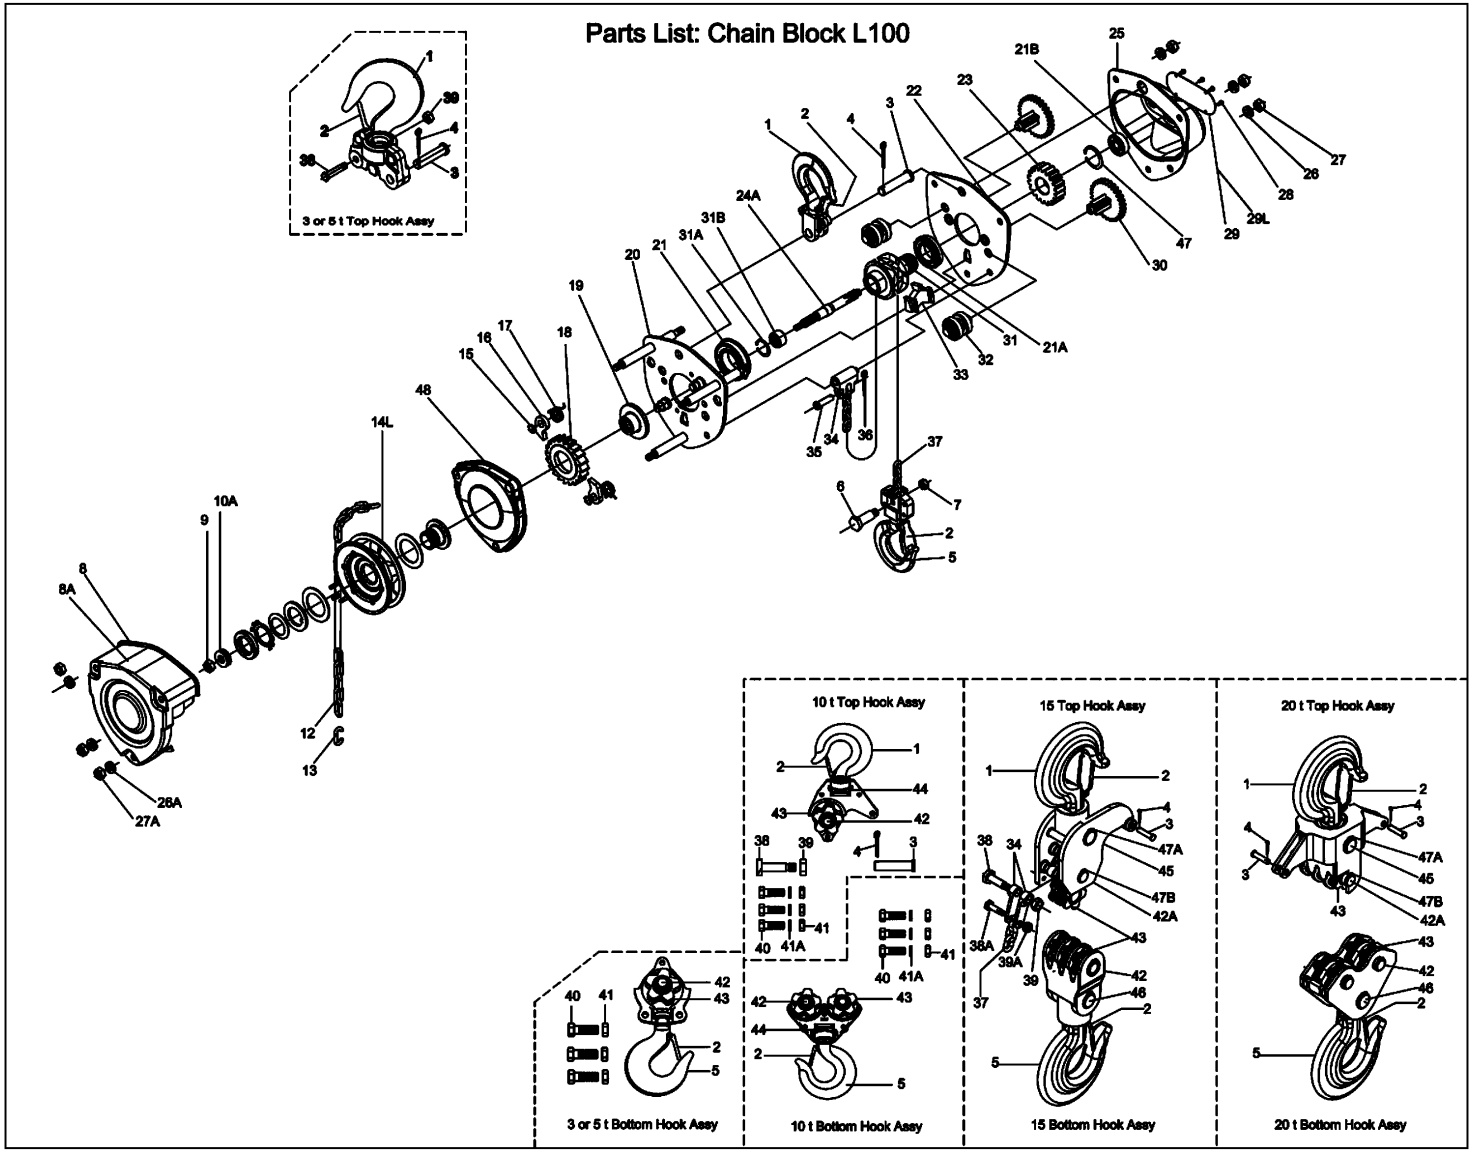

mmToolParts
Big Time Experience. Small Town Service. .com

JET L-100-50WO-20 | Stock 205120

Parts List A - L100-50 Chain Hoist

Chain Hoist | Original JET parts reference

Ref.	Part number	Description	Size	Qty.
1	JT9-L100-50-1	Top Hook Assembly		1
		Top Hook		1
		Safety Latch		1
		Double Spring		1
		Socket Head Cap Screw	M4x20	1
		Lock Nut	M4	1
		Top Hook Holder		1
		Rivet	5x20 mm	2
2	JT9-L100-50-2	Safety Latch Assembly		2
		Safety Latch		2
		Double Spring		2
		Socket Head Cap Screw	M4x20	2
		Lock Nut	M4	2
3	JT9-L100-50-3	Top Hook Shaft		1
4	JT9-L100-50-4	Split Pin	2.5x20 mm	1
5	JT9-L100-50-5	Bottom Hook Assembly		1
		Bottom Hook		1
		Safety Latch		1
		Double Spring		1
		Socket Head Cap Screw	M4x20	1
		Lock Nut	M4	1
		Rivet	5x20 mm	2

mmToolParts
Big Time Experience. Small Town Service. .com

JET L-100-50WO-20 | Stock 205120

Parts List A - L100-50 Chain Hoist (continued)

Chain Hoist | Original JET parts reference

Ref.	Part number	Description	Size	Qty.
6	JT9-L100-50-6	Bottom Hook Shaft		1
7	JT9-F001753	Lock Nut	M6	1
8	JT9-L100-50-8G	Hand Wheel Cover Assembly		1
		Hand Wheel Cover		1
		Hand Chain Guide		2
8A	JT9-L100-50-8A	Warning Label		1
9	JT9-L100-25-9-1	Wheel Stopper	M6	1
10A	JT1-2797	Bearings		1
12	JT9-L100-50-12	Hand Chain - specify length	4.8x22 mm	1
13	JT9-L100-50-13	Hand Chain Connecting Link		1
14L	JT1-2997	Overload Limiter Assembly		1
		Overload Limiter Knob		1
		Brake Disc		2
		Hand Chain Wheel		1
		Bushing in Hand Chain Wheel		1
		Disc Spring Plate		1
		Disc Spring		1
		Disc Spring Stopper		1
		Lock Nut		1
15	JT9-L100-50-15	Snap Ring	7 mm	2
16	JT9-L100-50-16	Pawl		2
17	JT9-L100-50-17	Pawl Spring		2

mmToolParts
Big Time Experience. Small Town Service. .com

JET L-100-50WO-20 | Stock 205120

Parts List A - L100-50 Chain Hoist (continued)

Chain Hoist | Original JET parts reference

Ref.	Part number	Description	Size	Qty.
18	JT9-L100-50-18-1	Ratchet Disc Assembly		1
		Ratchet Disc		1
		Ratchet Bushing		1
19	JT9-L100-50-19-1	Disc Hub		1
20	JT9-L100-50-20-1	Wheel Side Plate Assembly		1
		Wheel Side Plate		1
		Stay Bolt		3
		Pawl Pin		2
		Brake Cover		1
		Double Seal Ball Bearing	d30xD47x9 mm	1
21	JT9-L100-50-21	Double Seal Ball Bearing	d30xD47x9 mm	1
21A	JT9-L100-50-21A	Double Seal Ball Bearing	d25xD42x9 mm	1
21B	JT9-L100-50-21B	Double Seal Ball Bearing	d10xD22x6 mm	1
22	JT9-L100-50-22	Gear Side Plate Assembly		1
		Gear Side Plate		1
		Bushing		2
		Double Seal Ball Bearing	d25x42x9 mm	1
23	JT9-L100-50-23	Load Gear		1
24A	JT1-2798	Drive Shaft		1
25	JT9-L100-50-25G	Gear Case Assembly		1
		Gear Case		1
		Bushing		2

mmToolParts
Big Time Experience. Small Town Service. .com

JET L-100-50WO-20 | Stock 205120

Parts List A - L100-50 Chain Hoist (continued)

Chain Hoist | Original JET parts reference

Ref.	Part number	Description	Size	Qty.
		Double Seal Bearing	10dx22Dx6 mm	1
26	JT9-TS-2361082	Lock Washer (Black Oxide)	8mm	3
26A	JT9-TS-2361082	Lock Washer (Black Oxide)	8mm	3
27	JT9-F001754	Acorn Nut (Black Oxide)	M8	3
27A	JT9-F001754	Acorn Nut (Black Oxide)	M8	3
28	JT9-L100-50-28	Rivet	3x5 mm	4
29	JT9-LM000016	Name Plate, L100-50 with overload		1
30	JT9-L100-50-30	Spur Gear Assembly		2
		Spur Gear		2
		Pinion Gear		2
31	JT9-L100-50-31	Load Sheave		1
31A	JT9-L100-50-31A	C-Clip	21 mm	1
31B	JT9-L100-50-31B	Needle Bearing HK1412	d14xD21x12 mm	1
32	JT9-L100-50-32	Guide Roller		2
33	JT9-L100-50-33	Stripper		1
34	JT9-L100-50-34	Chain Anchor Plate		1
35	JT9-L100-50-35	Chain Anchor Pin		1
36	JT9-L100-50-36	Split Pin	2x12 mm	1
37	JT9-L100-50-37	Load Chain - specify length	5x15 mm	1
47	JT9-L100-50-47	Snap Ring	22 mm	1
48	JT9-L100-50-48G	Dust Cover		1
	JT9-L100-WT	Warning Tag (not shown)		1

Note: When ordering replacement chain (Index #12, #37), specify length.

Where alternatives are listed, match the model, capacity, lift length, voltage, phase and hook style. Unnumbered component rows belong to the preceding assembly.

mmToolParts
Big Time Experience. Small Town Service. .com